

# **Maintenance Guidelines:** **Waterpik® Cordless Plus WP450**

## **Battery Care**

Before first use, charge for 24 hours to obtain full charge. To charge your Water Flosser, plug the cord into any standard electrical outlet. Make sure you push the switch into the 'OFF' position before charging. The unit will not charge if the switch is in the 'ON' position. If you use your Water Flosser once a day or less, it is recommended you charge it overnight, once a week. If you use it twice a day or more, charge the unit more frequently. Do not run the batteries down completely as this may shorten the lifespan of the batteries and will require charging the unit for 24 hours to obtain a full charge. If the Water Flosser is to be stored for an extended period of time, charge it for 24 hours before storing. Never store the Water Flosser for extended periods unless it is fully charged. To maximize the lifespan of the batteries the battery charger may be kept connected to the unit continuously, except for when the product is in use.

## **Battery Disposal**

The unit contains a Nickel Metal Hydride battery. At the end of the battery life, please recycle the unit at your nearest recycle centre per local or state requirements. The battery is not replaceable.

## **Service Maintenance**

Waterpik® Water Flossers have no consumer-serviceable electrical items and do not require routine service maintenance. For all your service needs please call our UK customer service number at +44 (0) 844 335 6354. For questions or problems please call the customer service centre before returning the product. All Waterpik® Water Flossers are covered by a manufacturer's warranty against defect. Please contact our UK call centre for any warranty validation and claims, you will be required to provide a copy of your receipt as proof of purchase, along with the serial and model numbers.

