

Frequently Asked Questions

- **+Customize M340 point and scroll functions**

 
1. Download and Install Logitech Options® software from www.logitech.com/downloads.
2. Select your mouse in the Options window and on the upper left corner, select the **Point and Scroll** tab.



3. You can customize the pointer speed, smooth scrolling, and scroll wheel direction.

- **+Customize the M340 scroll wheel functions**

1. Download and Install Logitech Options® software from www.logitech.com/downloads.
2. Select your mouse in the window, then click on the circle over the scroll wheel.

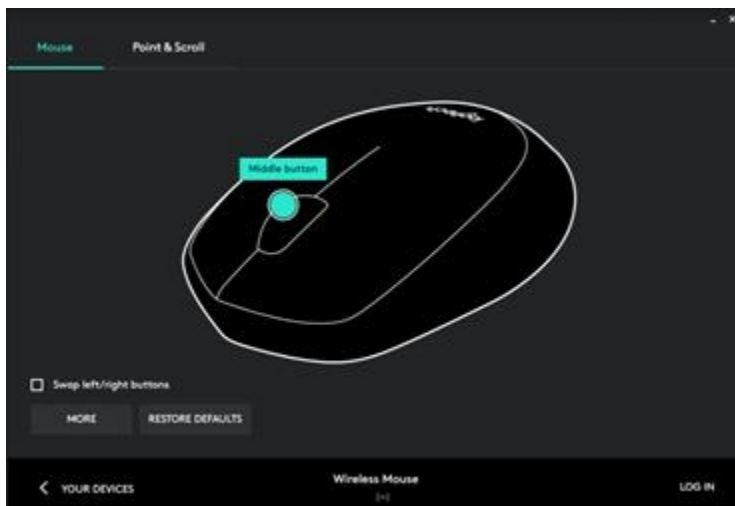


3. Select one of the functions from the list to apply it to the scroll wheel.

- **+Swap left and right buttons on the M340 mouse**

The M340 mouse is an ambidextrous mouse. This means you can change the buttons depending on if you are left or right-handed. Here's how:


1. Download and install Logitech Options® software from www.logitech.com/downloads.
2. Select your mouse on the screen and on the lower-left corner, select the box that says **Swap left/right buttons**.

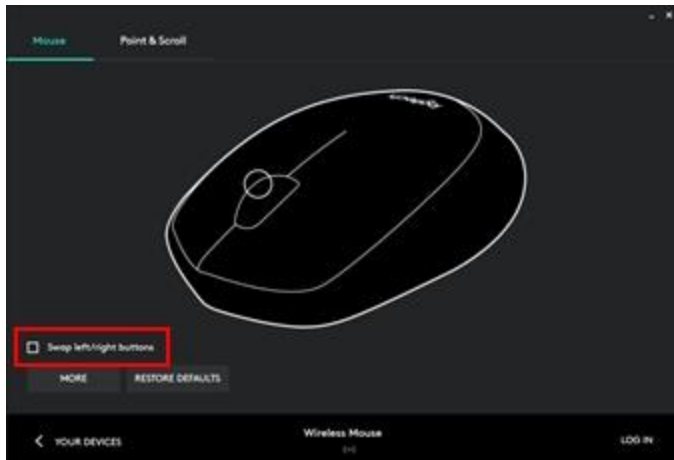

- **+Customize the K470 Fn keys**

You can customize the first four Fn keys (F1, F2, F3, and F4) on your keyboard. Here's how:


1. Download Logitech Options® software from www.logitech.com/downloads.
2. Follow the instructions to install the software on your laptop or desktop.
3. Once installed, Logitech Options will automatically recognize the mouse and keyboard and display them on the main Options window.
4. Select your keyboard and then on the window, select keys from F1 to F4 to change the original functions.

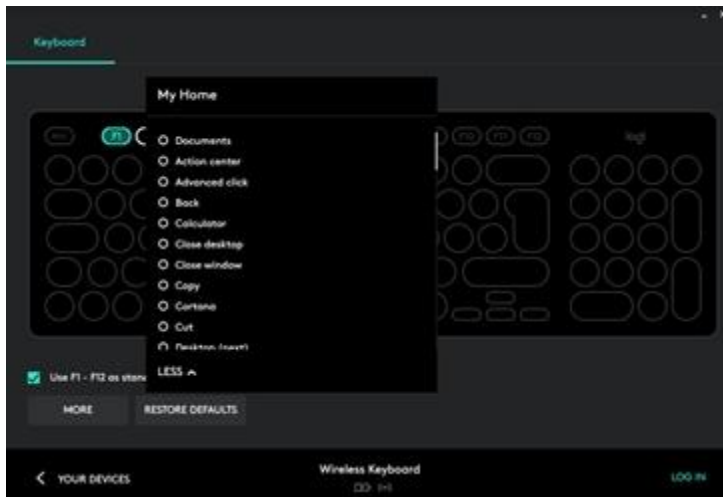


- **+MK470 CapsLock and battery status notifications**

To enable CapsLock and battery status notifications, do the following:


1. Download Logitech Options® software from www.logitech.com/downloads.
2. Follow the instructions to install the software on your laptop or desktop.
3. Once installed, Logitech Options will automatically recognize the mouse and keyboard and display them on the main Options window.

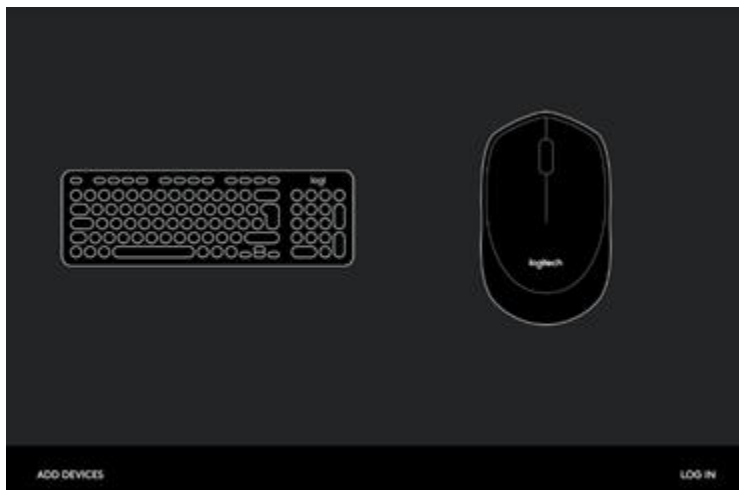

 4. Select your keyboard and then click on the **MORE** button on the lower-left corner of the screen.

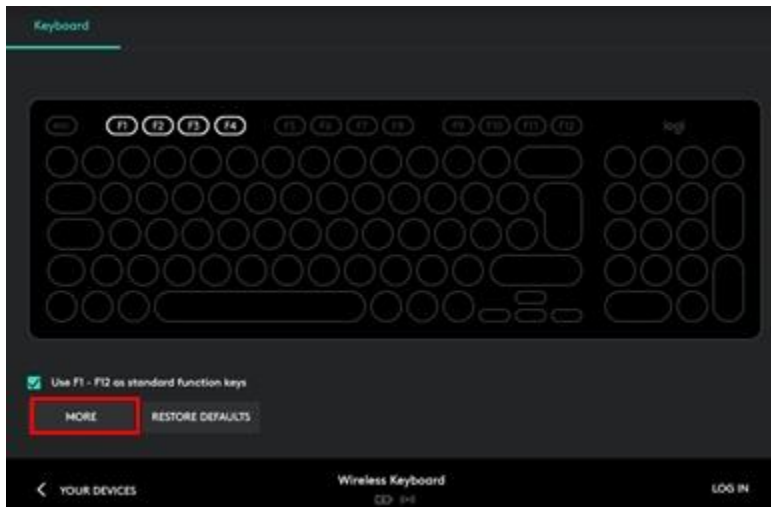

 5. Select **This device** in the upper left corner of the window.
6. Under **Notifications**, make sure you have selected both options in order to receive alerts for CapsLock and Battery status and that none of the options under **Disabled Keys** are selected.

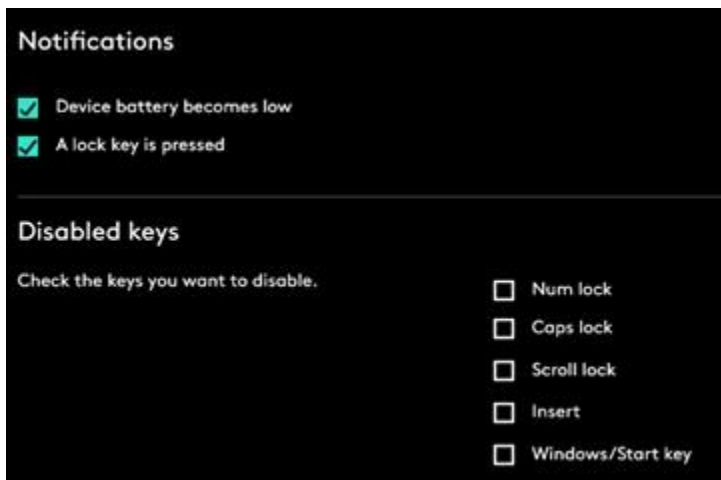

7. CapsLock notifications will be active as you use your keyboard and you will receive pop-up messages when your battery level is at 50%, 20%, and 5% on your keyboard or mouse.

To check the battery status, on the main page of Logitech Options, select your device (mouse or keyboard). Battery status will be shown on the lower part of the Options window.

- **+Battery life and replacement for MK470 keyboard and mouse**

Battery information:

Keyboard K470

- Requires 2 AAA batteries
- The expected battery life is 36 months


Mouse M340

- Requires 1 AA battery
- The expected battery life is 18 months


Battery replacement:

Keyboard K470

1. Holding your K470 from the sides, slide up the upper side of the keyboard as shown:

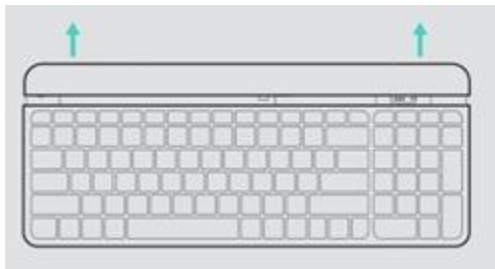

2. Inside you'll find two different compartments. The compartment on the right holds two AAA batteries. The compartment on the left can be used to store the USB receiver when not in use.

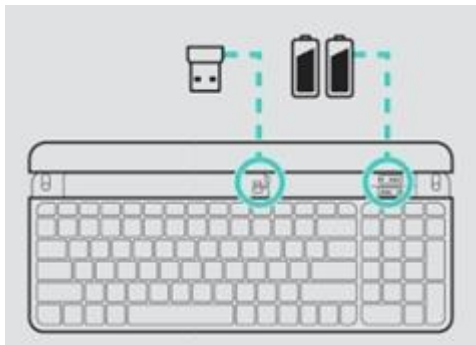

Mouse M340

- Pull up on the magnetic keyplate on the mouse to expose the battery compartment, as shown:

