

BaByliss FOR *men*®



10-IN-1 TITANIUM GROOMING SYSTEM

Model 7235U

BaByliss for *men*

10-IN-1 TITANIUM GROOMING SYSTEM

The BaByliss For Men 10-in-1 Titanium Grooming System is a professional grade rechargeable trimmer with titanium blade technology and 5 interchangeable cutting heads for all over trimming and grooming. Two 5-position comb guides offer a variety of cutting lengths (3-15mm) and the taper control provides super fine cut adjustment (0.5-1.5mm), whilst the turbo boost offers increased power at the touch of a button.

FEATURES

- Rechargeable trimmer with 5 interchangeable attachment heads.
- Precision Trimmer (0.5mm) with titanium blade technology for extreme precision and sharpness, with a 5-position comb guide (3-15mm) and 3 jawline blending combs (3mm, 5mm & 7mm).
- Body Groomer (0.5mm) with 5-position comb guide (3-15mm).
- Detail Trimmer for creating lines and effects in the hair.
- Nose & Ear Trimmer for the safe and easy removal of unwanted hair.
- Foil Shaver for a clean, smooth finish.
- Taper control for precision cut adjustment.
- Turbo boost for increased power at the touch of a button.
- Beard and moustache comb.
- Charging and storage stand.
- Cleaning brush.
- Lubricating oil.
- 3 year guarantee.

INSTRUCTIONS FOR USE

IMPORTANT! Only use the adaptor and attachments supplied with this appliance.

Inserting the Adaptor Cord into the Stand

- Remove the trimmer and accessories from the stand.
- Insert the adaptor plug into the hole on the base of the stand and push firmly into position.
- Route the cord through the channel on the base of the stand and secure in place.
- Should you wish to charge the appliance without using the charging stand, simply place the adaptor plug directly into the main trimmer unit.

Charging the Appliance

- Before using for the first time, the appliance should be fully charged continuously for 16 hours. This initial super-charge ensures optimum power performance to ensure smooth fast trimming every time.
- A full charge will provide approximately 30 minutes use.
- Ensure the appliance is switched off.
- Insert the appliance into the charging and storage stand.
- The charging indicator light will illuminate when the appliance is correctly inserted into the charging stand and connected to the mains.

Preserving the batteries


In order to maintain the optimum capacity of the rechargeable batteries, the trimmer should be fully discharged and then recharged for 16 hours every 3 months.

Preparation for Use

- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged.
- Ensure the heads are free from hair and debris and that the blades are properly oiled (refer to Cleaning & Maintenance section for further information).
- Ensure the appliance is sufficiently charged.
- Use on clean, dry hair that has been combed until tangle-free.

Changing the Heads

- Before changing the heads, ensure the appliance is switched off.
- To remove a head, hold the handle of the appliance with one hand, hold the head with the other hand and pull the head back and away from the front of the handle.
- To attach a head, the driving pin (see diagram) needs to be in a central position. If it is not in the centre, manually move the pin into position. Then, making sure that the base of the head is seated in the handle, click the head into position.

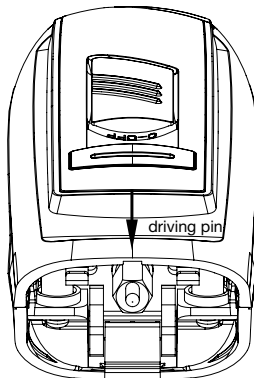

Comb Guides

5-Position Comb Guide For Precision Trimmer:

- Ensure the appliance is switched off.
- Attach the Precision Trimmer head.
- Slide the smaller of the 2 comb guides onto the front of the Precision Trimmer head and push down at the rear to lock into place – you will hear a clicking noise when it's in position.
- The comb guide will be set to the shortest of the five cutting lengths.
- To adjust the cutting length, push the button and click the guide forward to the required position. The comb guide has 5 length settings, 3mm, 6mm, 9mm, 12mm & 15mm.
- To remove the comb, gently lift the guide off the head by lifting the rear section.



Jaw Line Blending Combs for Precision Trimmer:

- Ensure the appliance is switched off.
- Attach the Precision Trimmer head.
- The combs come in 3 different length settings, I = 3mm, II = 5mm and III = 7mm.
- Slide the desired jaw line comb over the trimmer head, pull down over the rear of the head and click into position.
- To remove the comb, lift the rear of the guide upward and away from the Precision Trimmer head.



5-Position Comb Guide For Body Groomer:

- Ensure the appliance is switched off.
- Attach the Body Groomer head.
- Slide the larger of the 2 comb guides onto the front of the Body Groomer head and push down at the rear to lock into place – you will hear a clicking noise when it's in position.
- The comb guide will be set to the shortest of the five cutting lengths.
- To adjust the cutting length, push the button and click the guide forward to the required position. The comb guide has 5 length settings, 3mm, 6mm, 9mm, 12mm & 15mm.
- To remove the comb, gently lift the guide off the head by lifting the rear section.



Taper Control

The taper control with 3-position switch (on the rear of the handle) enables super fine cut adjustment for precision trimming.

- The trimmer will be set to it's shortest cutting length of 0.5mm with the number 3 visible below the taper control switch.
- To increase the length by 0.5mm to a cutting length of 1mm, slide the switch down so 2 is visible above the taper control switch.
- To increase the length by a further 0.5mm to a cutting length of 1.5mm, slide the switch down so both 1 and 2 are visible above the taper control switch.

NOTE: The taper control function can only be used with the Precision Trimmer and Body Groomer heads.

TRIMMING

Precision Trimmer

Using the Precision Trimmer with 5-position comb guide:

- Attach the smaller of the 5-position comb guides and select the required length (3-15mm).
- If you require more than one cutting length, start with the longest length first.
- Adjust the taper control for super fine cut adjustment as required.
- Switch the trimmer on.
- Hold the trimmer with the teeth of the trimmer pointing upwards, yet flat against the skin.
- Move the trimmer upwards and outward through the hair, against the direction of hair growth.
- The trimmer will work most efficiently when cutting through hair at its own speed.
- For increased trimming performance, press and hold the turbo button, this is often necessary for thicker areas of hair.
- Never switch the appliance off whilst in the hair.
- **Note:** The Precision Trimmer can be used without any comb guides and will cut roughly to a length of 0.5mm.



Using the Precision Trimmer with jaw line blending combs:

- Attach one of the three jaw line blending combs (I = 3mm, II = 5mm and III = 7mm).
- If you require more than one cutting length, start with the longest length first (7mm).
- Switch the trimmer on.
- Hold the trimmer with the teeth of the trimmer pointing upwards, yet flat against the skin.
- Move the trimmer upwards and outward through the hair you wish to blend.
- To blend-in a shorter length use a smaller jaw line comb and use in the same way as above.
- The trimmer will work most efficiently when cutting through hair at its own speed.
- For increased trimming performance, press and hold the turbo button, this is often necessary for thicker areas of hair.
- Never switch the appliance off whilst in the hair.

To outline using the Precision Trimmer:

- Do not attach a comb guide.
- Hold the trimmer upside down with the blade facing downwards, yet flat against the skin.
- Move the trimmer gently downwards in small strokes around the edge of the area you wish to outline.
- Having defined the outline, hold the trimmer with the blades pointing upwards, yet flat against the skin and move the trimmer upwards against the direction of hair growth. This will trim the unwanted hair adjacent to the outline.

Body Groomer

Using the Body Groomer with 5-position comb guide:

- Attach the larger of the 5-position comb guides and select the required length (3-15mm).
- Adjust the taper control for super fine cut adjustment as required.
- Switch the trimmer on.
- Hold the trimmer with the teeth of the trimmer pointing upwards, yet flat against the skin.
- Move the trimmer upwards and outward through the hair, against the direction of hair growth.
- Make sure to be particularly careful when trimming sensitive areas.
- The trimmer will work most efficiently when cutting through hair at its own speed.
- For increased trimming performance, press and hold the turbo button, this is often necessary for thicker areas of hair.
- Never switch the appliance off whilst in the hair.
- **Note:** The Body Groomer can be used without any comb guides and will cut roughly to a length of 0.5mm.



Foil Shaver

Using the Foil Shaver:

- For an ultra-smooth finish, use the foil shaver attachment.
- Always ensure the foil is not damaged before each use.
- Switch the trimmer on.
- Move the shaver gently over the skin,



applying minimal pressure and shaving in the direction of hair growth.

- Make sure to be particularly careful when trimming sensitive areas.
- For increased trimming performance, press and hold the turbo button, this is often necessary for thicker areas of hair.
- Never switch the appliance off whilst in the hair.
- **Note:** The taper control function cannot be used with the Foil Shaver attachment. Slide the switch down so both 1 and 2 are visible above the switch.

Nose & Ear Trimmer

Using the Nose & Ear Trimmer:

- For the safe and easy removal of unwanted nose and ear hair use the rotary trimmer head.
- Switch the trimmer on.
- Insert the trimmer into the nose or ear and gently move the trimmer in a circular motion.
- Only use the trimmer at the entrance to the ear or nose. Do not use any deeper, as this could cause injury.
- For increased trimming performance, press and hold the turbo button, this is often necessary for thicker areas of hair.
- Never turn the trimmer off whilst in the nose and ear hair.
- **Note:** The taper control function cannot be used with the Nose & Ear Trimmer attachment. Slide the switch down so both 1 and 2 are visible above the switch.



Detail Trimmer

Using the Detail Trimmer:



- For accurate tramlines and detailed effects, attach the Detail Trimmer head.
- Switch the trimmer on.
- Gently move the blade through the area of hair you wish to trim.
- The trimmer will work most efficiently when cutting through hair at its own speed.
- For increased trimming performance, press and hold the turbo button, this is often necessary for thicker areas of hair.
- Never turn the trimmer off whilst in the hair.
- **Note:** The taper control function cannot be used with the Detail Trimmer attachment. Slide the switch down so both 1 and 2 are visible above the switch.



CLEANING & MAINTENANCE

To maintain optimum performance, the appliance should be cleaned after each use:

- Remove the comb guide after use. Rinse under running water and dry thoroughly before storage or use.
- Remove the trimmer head after use. The heads are washable for easy cleaning. Rinse under running water and dry thoroughly before storage or use.
- Do not disassemble the blades.
- Periodically, it may be necessary to oil the blades. After cleaning, attach a trimmer head, switch on and oil the

blades using a few  the lubricating oil supplied. Only use the lubricating oil  applied with the appliance as this is specifically formulated for high speed trimmers and does not evaporate or slow the blades.

- For instructions on how to re-attach the head, please refer to “Changing the Heads” section.

BATTERY DISPOSAL

To minimise hazards to health and the environment at the end of this product’s life, laws dealing with Waste Electrical and Electronic Equipment (WEEE) and The Waste Battery Directive require you to dispose of these products and their batteries at a suitable collection facility where they will be sent for appropriate recycling. Please contact your local authorities for more details on recycling and safe disposal of these in your area.

SAFETY CAUTIONS

WARNING! Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.

- Keep the charging/storage stand away from vessels containing water or other liquids.
- This appliance should only be used as described within this instruction book. Please retain for reference.
- Do not immerse the appliance in water or other liquids.

- Do not connect the appliance to the mains with wet hands.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, contact the Conair Customer Care Line (refer to UK After Sales Service section for further information).
- Do not use the appliance if the lead is damaged. In the event of damage, discontinue use immediately and contact the Conair Service Centre (refer to UK After Sales Service section for further information).
- Only use the charging storage stand and attachments supplied with this appliance.
- Always unplug the appliance once fully charged.
- Do not leave the appliance unattended when switched on.
- Do not place the appliance on any surface whilst in operation.
- This appliance should not be used by adults or children whose lack of experience, product knowledge or disability might cause a hazard, unless they have been correctly instructed and are adequately supervised.
- Children should always be supervised to ensure that they do not play with this product.
- Special care is required when using the appliance near to the ears, eyes, face and neck or other sensitive areas of the body.
- Always switch off and unplug the appliance when cleaning or when not in use.
- Allow the appliance to cool before storing away.
- After use, do not coil the lead around the appliance as this may cause damage.

- This appliance complies with the requirements of Directives 2006/95/EC (Electromagnetic Compatibility) and 2004/108/EC (Electrical Safety of Domestic Appliances).

UK GUARANTEE

This BaByliss For Men appliance is guaranteed for consumer use for 3 years.

This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repair by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through Conair UK After Sales Service. The Conair Group Ltd reserves the right to amend terms and specifications without prior notice. This guarantee in no way affects your statutory rights.

Note: Shaver foils are not included in the guarantee. To purchase new foil shavers contact the Conair Customer Care Line on 0870 5 133191 (09:00 to 17:00 Monday to Friday).

UK AFTER SALES SERVICE

For further advice on using the appliance, contact the Conair Customer Care Line on 0870 5 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to ukinfo@conair.com.

In Guarantee

Return the product to the Conair Service Centre at the following address:

Conair Service Centre
PO Box 506
Wigan
WN1 9AA

Enclose your name and address, together with proof of purchase and details of the fault. Conair will either repair or replace the product as appropriate.

Out of Guarantee

Contact the Conair Customer Care Line on 0870 5 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to ukinfo@conair.com for details of the standard repair or replacement charge. If you wish to proceed with the repair or replacement, return the product to the Conair Service Centre at the following address:

Conair Service Centre
PO Box 506
Wigan
WN1 9AA

Enclose your name and address, together with details of the fault and a cheque made payable to the Conair Group Ltd.

