

D800/D800E *1	0	0	0	0	0	0	0	0	0	0	0	
Df *2	0*8	0*8	0*8	0*5*8	0*5*8	0*8	0*5	0*5*8	0	0*8	0*8	0*8
D3000	0	0	0	0	0	0	0	0	0	0	0	
D3100	0	0	0	0	0	0	0	0	0	0	0	
D3200	0	0	0	0	0	0	0	0	0	0	0	
D5000	0	0	0	0	0	0	0	0	0	0	0	
D5100	0	0	0	0	0	0	0	0	0	0	0	
D5200	0	0	0	0	0	0	0	0	0	0	0	
D5300	0*8	0*8	0*8	0*5*8	0*5*8	0*8	0*5	0*5*8	0	0*8	0*8	0*8
D7000	0	0	0	0	0	0	0	0	0	0	0	
D7100	0	0	0	0*5	0*5	0	0*5	0*5	0	0	0	0
D40	0	0	0	0	0	0	0	0	0	0	0	0
D40X	0	0	0	0	0	0	0	0	0	0	0	0
D50	0	0	0	0	0	0	0	0	0	0	0	0
D60	0	0	0	0	0	0	0	0	0	0	0	0
D70	0	0	0	0	0	0	0	0	0	0	0	0
D70s	0	0	0	0	0	0	0	0	0	0	0	0
D80	0	0	0	0	0	0	0	0	0	0	0	0
D90	0	0	0	0	0	0	0	0	0	0	0	0

Manufacturer Camera Model

		8-16mm F4.5-5.6 DC HSM	10-20mm F3.5 EX DC HSM	10-20mm F4-5.6 EX DC HSM / EX DC	17-50mm F2.8 EX DC OS HSM / EX DC HSM *3	17-70mm F2.8-4 DC MACRO OS HSM C013 / DC MACRO HSM C013 *3	18-35mm F1.8 DC HSM A013	18-200mm F3.5-6.3 DC MACRO OS HSM C014 / DC MACRO HSM C014 *3	18-250mm F3.5-6.3 DC MACRO OS HSM / DC MACRO HSM *3	18-300mm F3.5-6.3 DC MACRO OS HSM C014 / DC MACRO HSM C014 *3	4.5mm F2.8 EX DC CIRCULAR FISHEYE HSM	10mm F2.8 EX DC FISHEYE HSM	30mm F1.4 DC HSM A013
SONY	α33	○	○	○	○	○	○	○	○	○*6	○	○	○
	α55	○	○	○	○	○	○	○	○	○*6	○	○	○
	α57	○	○	○	○	○	○	○	○	○*6	○	○	○
	α58	○	○	○	○	○	○	○	○	○*6	○	○	○
	α65	○	○	○	○	○	○	○	○	○*6	○	○	○
	α77	○	○	○	○	○	○	○	○	○*6	○	○	○
	α99 *4 *7	○	○	○	○	○	○	○	○	○*6	○	○	○
	α100	○	○	○	○	○	○	○	○	○*6	○	○	○
	α200	○	○	○	○	○	○	○	○	○*6	○	○	○
	α230	○	○	○	○	○	○	○	○	○*6	○	○	○
	α300	○	○	○	○	○	○	○	○	○*6	○	○	○
	α330	○	○	○	○	○	○	○	○	○*6	○	○	○
	α350	○	○	○	○	○	○	○	○	○*6	○	○	○
	α380	○	○	○	○	○	○	○	○	○*6	○	○	○
	α700	○	○	○	○	○	○	○	○	○*6	○	○	○
α900 *8	○	○	○	○	○	○	○	○	○*6	○	○	○	
PENTAX	*ist D	△	△	○	△	△	△	△	△	△*6	△	△	○

*ist DS	△	△	O	△	△	△	△	△	△*6	△	△	O
*ist DS2	△	△	O	△	△	△	△	△	△*6	△	△	O
*ist DL	△	△	O	△	△	△	△	△	△*6	△	△	O
*ist DL2	△	△	O	△	△	△	△	△	△*6	△	△	O
K10D	O	O	O	O	O	O	O	O	O*6	O	O	O
K20D	O	O	O	O	O	O	O	O	O*6	O	O	O
k30D	O	O	O	O	O	O	O	O	O*6	O	O	O
K50D	O	O	O	O	O	O	O	O	O*6	O	O	O
K-m	O	O	O	O	O	O	O	O	O*6	O	O	O
K-r	O	O	O	O	O	O	O	O	O*6	O	O	O
K-x	O	O	O	O	O	O	O	O	O*6	O	O	O
K-5	O	O	O	O	O	O	O	O	O*6	O	O	O
K-7	O	O	O	O	O	O	O	O	O*6	O	O	O
K100D/K110D	△	△	O	△	△	△	△	△	O*6	△	△	O
K100D Super	O	O	O	O	O	O	O	O	O*6	O	O	O
K200D	O	O	O	O	O	O	O	O	O*6	O	O	O

? : It is possible to take picture in MF mode only AF cannot be used.

Vignetting will occur if the lens is used with FX and 5:4 formats. (Except 4.5mm F2.8 EX DC CIRCULAR FISHEYE)
*1

Vignetting will occur, if FX format camera is used. (Except 4.5mm F2.8 EX DC CIRCULAR FISHEYE)
*2

Sony and Pentax mounts are not incorporated with OS function.
*3

Vignetting will occur if the lens is used with image sensor larger than APS-C size or 35mm full-frame size camera. Please vary the focal length of the lens. (Except 4.5mm F2.8 EX DC CIRCULAR FISHEYE)
*4

The light on camera screen will disappear automatically about 1 minute after the total time of OS (Optical Stabilizer) connection and camera setting completion. Additionally, the image won't continue to enlarge or scroll without pressing the multi-selector button repeatedly.
*5

*6 As of March.2014. The launch date is yet to be determined.

*7 Dual AF, AF-D, AF range control will not be not available.

Updating the OS and live view AF function is necessary. (free of charge) (Except the *8 products have “updated” stickers on the box” already.) Please contact our customer support if you need further information.