

Canon

EOS M100

Getting Started **ENGLISH**

Preparing a Memory Card

Use the following memory cards (sold separately), in any capacity.

- SD memory cards*1
- SDHC memory cards*1*2
- SDXC memory cards*1*2



*1 Cards conforming to SD standards. However, not all memory cards have been verified to work with the camera.


*2 UHS-I memory cards are also supported.

Manuals and Software



Download camera and lens manuals and software from the following page.
<http://www.canon.com/icpd/>

- With a computer connected to the Internet, access the above URL.
- Access the site for your country or region.
- Adobe Reader is required to view the manuals.
- For instructions on downloading and installing the software, refer to the *Help Guide* available for download.

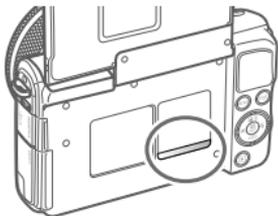

- You may be requested to enter the serial number (body number) when downloading the manuals or software. In this case, enter the number on the camera body, behind the screen.

Preliminary Notes and Legal Information

Take and review some test shots initially to make sure the images were recorded correctly. Please note that Canon Inc., its subsidiaries and affiliates, and its distributors are not liable for any consequential damages arising from any malfunction of a camera or accessory, including memory cards, that result in the failure of an image to be recorded or to be recorded in a way that is machine readable.

Copyright laws in your country may prohibit the use of your recorded images or copyrighted music and images with music in the memory card for anything other than private enjoyment. Refrain from unauthorized recording that infringes on copyright law, and note that even for personal use, photography may contravene copyright or other legal rights at some performances or exhibitions, or in some commercial settings.

For information on camera warranty or Customer Support, please refer to the warranty information provided with your camera User Manual Kit.

Although the screen is produced under extremely high-precision manufacturing conditions and more than 99.99% of the pixels meet design specifications, in rare cases some pixels may be defective or may appear as red or black dots. This does not indicate camera damage or affect recorded images.

Safety Precautions

Before using the product, ensure that you read the safety precautions described below. Always ensure that the product is used correctly.

The safety precautions noted here are intended to prevent you and other persons from being injured or incurring property damage.

Be sure to also check the guides included with any separately sold accessories you use.

⚠ Warning Denotes the possibility of serious injury or death.

Do not fire the flash near the eyes.

It may hurt the eyes.

Store this equipment out of the reach of children and infants.

A strap wound around a child's neck may result in asphyxiation.

If your product uses a power cord, mistakenly winding the cord around a child's neck may result in asphyxiation.

Use only recommended power sources.

Do not disassemble, alter, or apply heat to the product.

Do not peel off the adhesive covering, if the battery pack has it.

Avoid dropping or subjecting the product to severe impacts.

Do not touch the interior of the product if it is broken, such as when dropped.

Stop using the product immediately if it emits smoke or a strange smell, or otherwise behaves abnormally.

Do not use organic solvents such as alcohol, benzine, or thinner to clean the product.

Avoid contact with liquid, and do not allow liquid or foreign objects inside.

This could result in electrical shock or fire.

If the product gets wet, or if liquid or foreign objects get inside, remove the battery pack/batteries or unplug immediately.

If your model has a viewfinder or interchangeable lens, do not look through the viewfinder or lens at bright light sources (such as the sun on a clear day, or a bright artificial light source).

This may damage your eyesight.

If your model has an interchangeable lens, do not leave the lens (or the camera with the lens attached) in the sun without the lens cap on.

This could result in a fire.

Do not touch the product during thunderstorms if it is plugged in.

This could result in electrical shock or fire. Immediately stop using the product and distance yourself from it.

Use only the recommended battery pack/batteries.

Do not place the battery pack/batteries near or in direct flame.

This may cause the battery pack/batteries to explode or leak, resulting in electrical shock, fire, or injuries. If leaking battery electrolyte comes into contact with eyes, mouth, skin, or clothing, immediately flush with water.

If the product uses a battery charger, note the following precautions.

- **Remove the plug periodically and, using a dry cloth, wipe away any dust and dirt that has collected on the plug, the exterior of the power outlet, and the surrounding area.**
- **Do not insert or remove the plug with wet hands.**
- **Do not use the equipment in a manner that exceeds the rated capacity of the electrical outlet or wiring accessories. Do not use if the plug is damaged or not fully inserted in the outlet.**
- **Do not allow dust or metal objects (such as pins or keys) to contact the terminals or plug.**
- **Do not cut, damage, alter, or place heavy items on the power cord, if your product uses one.**

This could result in electrical shock or fire.

Turn the camera off in places where camera use is prohibited.

The electromagnetic waves emitted by the camera may interfere with the operation of electronic instruments and other devices. Exercise adequate caution when using the product in places where use of electronic devices is restricted, such as inside airplanes and medical facilities.

Do not allow the camera to maintain contact with skin for extended periods.

Even if the camera does not feel hot, this may cause low-temperature burns, manifested in redness of the skin or blistering. Use a tripod in hot places, or if you have poor circulation or insensitive skin.

⚠ Caution Denotes the possibility of injury.

When carrying the product by the strap, be careful not to bang it, subject it to strong impacts or shocks, or let it get caught on other objects.

Be careful not to bump or push strongly on the lens.

This could lead to injury or damage the camera.

Be careful not to subject the screen to strong impacts.

If the screen cracks, injury may result from the broken fragments.

When using the flash, be careful not to cover it with your fingers or clothing.

This could result in burns or damage to the flash.

Avoid using, placing, or storing the product in the following places:

- Places subject to direct sunlight
- Places subject to temperatures above 40 °C (104 °F)
- Humid or dusty places

These could cause leakage, overheating, or an explosion of the battery pack/batteries, resulting in electrical shock, fire, burns, or other injuries.

Overheating and damage may result in electrical shock, fire, burns, or other injuries.

The slideshow transition effects may cause discomfort when viewed for prolonged periods.

When using optional lenses, lens filters, or filter adapters (if applicable), be sure to attach these accessories firmly.

If the lens accessory becomes loose and falls off, it may crack, and the shards of glass may lead to cuts.

On products that raise and lower the flash automatically, make sure to avoid pinching your fingers with the lowering flash.

This could result in injury.

Caution Denotes the possibility of property damage.

Do not aim the camera at intense light sources, such as the sun on a clear day or an intense artificial light source.

Doing so may damage the image sensor or other internal components.

When using the camera on a sandy beach or at a windy location, be careful not to allow dust or sand to enter the camera.

On products that raise and lower the flash automatically, do not push the flash down or pry it open.

This may cause the product to malfunction.

Wipe off any dust, grime, or other foreign matter on the flash with a cotton swab or cloth.

The heat emitted from the flash may cause foreign matter to smoke or the product to malfunction.

Remove and store the battery pack/batteries when you are not using the product.

Any battery leakage that occurs may cause product damage.

Before you discard the battery pack/batteries, cover the terminals with tape or other insulators.

Contacting other metal materials may lead to fire or explosions.

Unplug any battery charger used with the product when not in use. Do not cover with a cloth or other objects when in use.

Leaving the unit plugged in for a long period of time may cause it to overheat and distort, resulting in fire.

Do not leave any dedicated battery packs near pets.

Pets biting the battery pack could cause leakage, overheating, or explosion, resulting in product damage or fire.

If your product uses multiple batteries, do not use batteries that have different levels of charge together, and do not use old and new batteries together.


Do not insert the batteries with the + and – terminals reversed.

This may cause the product to malfunction.

Getting Ready


1

Attach the strap

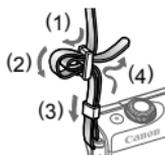

2

Insert the battery pack

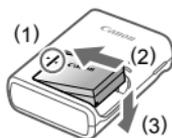

3


Charge the battery pack



- Charging: Orange
- Fully charged: Green

4


Remove the battery pack

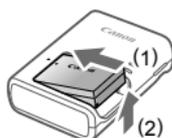

Getting Ready


5

Open the battery cover

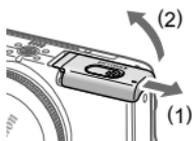


6

Insert the battery pack

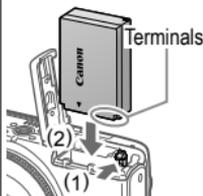

7

Close the battery cover

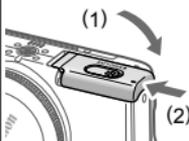

8


Open the memory card cover



Getting Ready

9

Insert the memory card

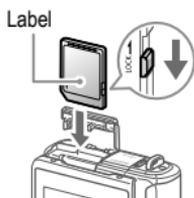


10

Close the memory card cover



11

Turn the camera on

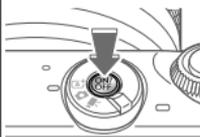

12

Set the date and time




- ◀▶ buttons to navigate → ▲/▼ buttons to adjust → Ⓢ button

Getting Ready

13

Set your home time zone

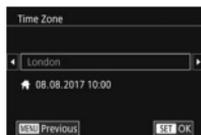

- ◀▶ buttons to adjust → Ⓢ button

14

Set the display language



- Hold down the Ⓢ button and press the MENU button.




- ▲/▼/◀▶ buttons to adjust → Ⓢ button

Adjusting the Date and Time

1

Access the menu screen

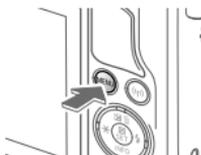

2

Choose the setting item



- [2] → [Date/Time]
→ [SET] button

3

Set up the camera



- ◀▶ buttons to navigate → ▲/▼
buttons to adjust →
● [SET] button

Attaching a Lens

1

Make sure the camera is off



2

Remove the lens cap and body cap




3

Attach the lens



4

Remove the front lens cap

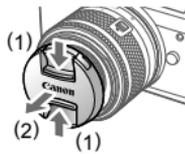

Attaching a Lens

5

Prepare to shoot



- Press (1) as you turn (2) slightly, and then release (1).
- Turn (2) a little more until it clicks.



- Zoom in or out before focusing.

Detaching a Lens

1

Make sure the camera is off



2

Detach the lens



- Press (1) as you turn the lens toward (2) until it stops.
- Remove it in the direction shown (3).

3

Attach the lens cap and body cap




Shooting

Shooting Skills (Scene Intelligent Auto)


1

Turn the camera on

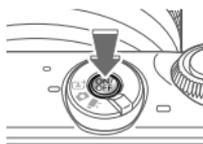


2

Set the mode

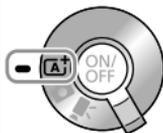

3

Zoom in or out, as needed

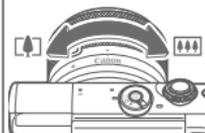


- (1) Scene icon
- (2) Remaining number of shots
- (3) Remaining recording time

Shooting

Shooting Skills (Scene Intelligent Auto)

4

Focus

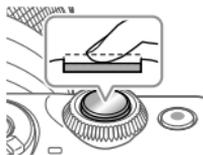


- Press the shutter button lightly.
- The camera beeps twice after focusing.



- An AF frame is displayed around positions in focus.

5


Raise the flash as needed

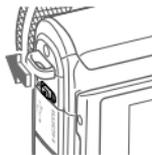

- If [Raise the flash] is displayed, move the ⚡ switch.

6


Shoot

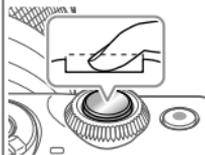

Shooting Recording Movies (Scene Intelligent Auto)

1

Turn the camera on

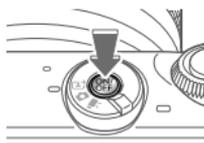

2

Set the mode




3

Zoom in or out, as needed




- (1) Scene icon
- (2) Remaining number of shots
- (3) Remaining recording time

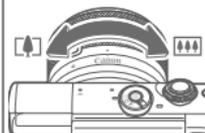

Shooting Recording Movies (Scene Intelligent Auto)

4

Start recording

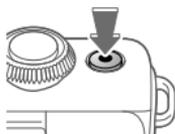


5

Stop recording



- Frames are displayed around any detected faces that are in focus.

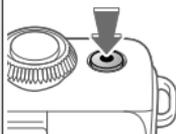

Playback

Viewing Stills

1

Enter Playback mode



2

Browse your images



- ◀ button: Previous image
- ▶ button: Next image

Playback

Viewing Movies

1

Enter Playback mode



2

Browse your images



- ◀ button: Previous image
- ▶ button: Next image



- Movies are labeled with **[SET ▶]**.

3

Play the movie



Playback Viewing Movies

4

Adjust the volume



- ▲/▼ buttons →
- [▶] → (SET) button



Erasing Images

1

Enter Playback mode



2

Browse your images



- ◀ button: Previous image
- ▶ button: Next image

3

Erase



- ◀▶ buttons →
- [Erase] → (SET) button

Trademarks and Licensing

- The SDXC logo is a trademark of SD-3C, LLC.

Disclaimer

- Unauthorized reproduction of this guide is prohibited.
- All measurements based on Canon testing standards.
- Information subject to change without notice, as are product specifications and appearance.
- Illustrations and screenshots in this guide may differ slightly from the actual equipment.
- The above items notwithstanding, Canon cannot be held liable for any loss arising from the use of this product.

Only for European Union and EEA (Norway, Iceland and Liechtenstein)



These symbols indicate that this product is not to be disposed of with your household waste, according to the WEEE Directive (2012/19/EU), the Battery Directive (2006/66/EC) and/or national legislation implementing those Directives.

If a chemical symbol is printed beneath the symbol shown above, in accordance with the Battery Directive, this indicates that a heavy metal (Hg = Mercury, Cd = Cadmium, Pb = Lead) is present in this battery or accumulator at a concentration

above an applicable threshold specified in the Battery Directive.

This product should be handed over to a designated collection point, e.g., on an authorized one-for-one basis when you buy a new similar product or to an authorized collection site for recycling waste electrical and electronic equipment (EEE) and batteries and accumulators. Improper handling of this type of waste could have a possible impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. Your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources.

For more information about the recycling of this product, please contact your local city office, waste authority, approved scheme or your household waste disposal service or visit www.canon-europe.com/weee, or www.canon-europe.com/battery.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO LOCAL REGULATION.

To ensure proper operation of this product, use of genuine Canon accessories is recommended.

- Interface Cable IFC-400PCU
- Interface Cable IFC-200U
- Interface Cable IFC-500U

HDMI cable (camera end: Type D): Use a commercially available cable no longer than 2.5 m.

The model number is PC2276 (including WLAN module model ES200 and BLE module model WM500). To identify your model, check the label on the bottom of the camera or behind the tilt-up screen for a number beginning with PC.

Countries and Regions Permitting Wireless Function Use

- Use of wireless function is restricted in some countries and regions, and illegal use may be punishable under national or local regulations. To avoid violating wireless regulations, visit the Canon website to check where use is allowed.

Note that Canon cannot be held liable for any problems arising from wireless function use in other countries and regions.

Doing any of the following may incur legal penalties:

- Altering or modifying the product
- Removing the certification labels from the product

Do not use the wireless function of this product near medical equipment or other electronic equipment.

Use of the wireless function near medical equipment or other electronic equipment may affect operation of those devices.

Hereby, Canon Inc. declares that this equipment is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <http://www.canon-europe.com/ce-documentation>

Wi-Fi Frequency range: 2401MHz - 2473MHz

Wi-Fi Maximum output power: 13.64dBm

Bluetooth Frequency range: 2402MHz - 2480MHz

Bluetooth Maximum output power: 7.14dBm

CANON EUROPA N.V. Bovenkerkerweg 59, 1185 XB Amstelveen, The Netherlands

CANON INC. 30-2, Shimomaruko 3-chome, Ohta-ku, Tokyo 146-8501, Japan

Graphical symbols placed on the equipment



Class II equipment



Direct current

Some logos for technical standards the camera has met can be viewed on the screen by choosing MENU ► [F4] tab ► [Certification Logo Display].