


OIL FILLED RADIATOR USER INSTRUCTIONS



IMPORTANT Read these instructions fully before using the heater.

Retain these instructions for future reference.


Artwork may vary slightly from actual product.

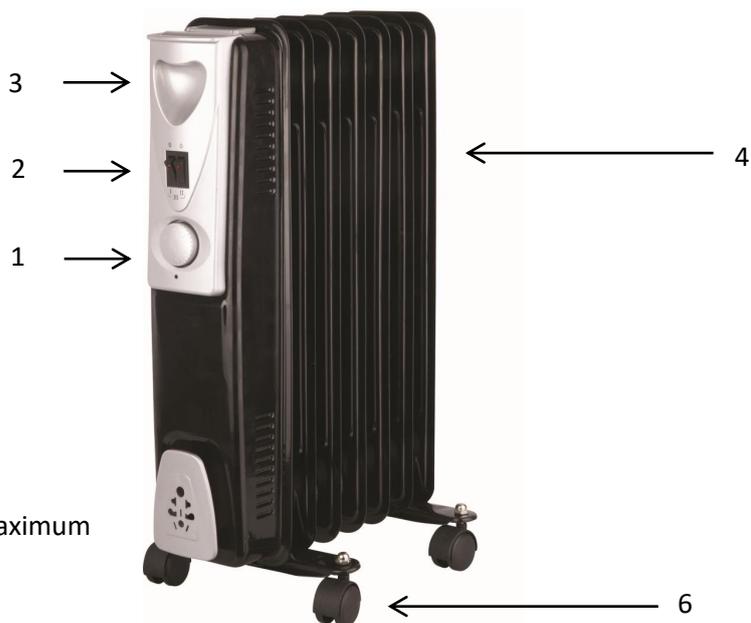

1. Thermostat control knob
2. Power switches medium & maximum
3. Handle
4. Oil filled fins
5. Cable tidy
6. Wheels & brackets

Assembly of the Heater

The appliance is packaged with the wheels and brackets unattached. Once fitted allow at least five minutes for all the oil to reach the heating element prior to connecting the power supply. **Only connect the appliance to the mains in the upright position, wheels and brackets at the bottom, controls on the top, any other position could cause irreparable harm.**

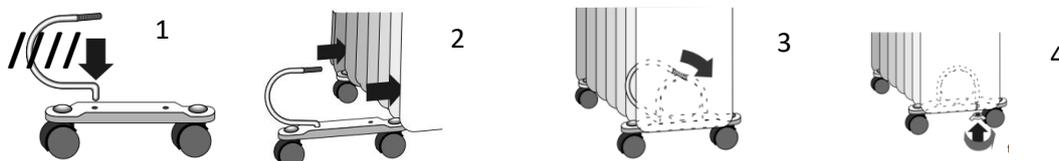

To fit the wheels and brackets follow steps one to four.

Returns and Warranty

Should your appliance not work or is damaged when you first take it out of the carton, return it to the retailer with the packaging and **proof of purchase**.

If you have any questions, contact us via email helpline@blackspur.com or our *customer service number 01473 833222* between the hours of 8am to 4pm Monday to Friday.

Read these instructions carefully, failure to comply with them could damage the appliance and may void any actual or implied guarantee. Keep this manual for further reference.

Rated Voltage: 220-240V ~ 50Hz

Power wattage: 1500W



Important Precautions

When using electrical appliances, basic precautions need to be followed at all times to reduce the risk of fire, electrical shock and injury.

Read the handbook prior to using the appliance.

- Ensure the power source conforms to the electrical requirements of the appliance 220 – 240 volts.
- This appliance will get hot when in use. To avoid injury, do not touch hot surfaces.
- The room you intend using the appliance has a working smoke detector.
- Use this electrical appliance as described in this manual, any other use is not recommended by the manufacturer and could have a detrimental effect on the durability of the appliance and/or the safety of the user.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capability has or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not touch or play with the appliance.
- Unplug from the mains power supply prior to moving the appliance or, conducting any servicing, cleaning or when not in use.
- Do not use outdoors.
- Do not run the power lead under carpeting or cover with rugs or similar coverings.
- Do not use extension leads, unless advised by a qualified electrician; using the wrong type could cause increased resistance resulting in heat damage to carpets, fixtures and fittings.
- It is normal for the plug to feel warm to the touch; however, a loose fit between the plug socket and the plug may cause overheating and distortion of the plug. Contact a qualified electrician to replace the worn plug socket.
- The warnings, precautions, in this instruction manual, cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors, which cannot be built into this product, but must be supplied by the operator.

Important Safeguards

- The appliance must not be used in potentially dangerous locations such as flammable, explosive, chemical-laden or wet atmospheres where petrol or flammable liquids are used or stored.
- Do not use in a bathroom or in an area that could allow it to get wet.
- Keep combustible materials such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9m) from the appliance.
- Completely assemble the product prior to connecting to the mains supply.
- Never operate the appliance with a damaged power lead or plug or after the appliance malfunctions, has been dropped or damaged in any way.
- There are no internally serviceable parts, do not attempt to disassemble.
- Never cover the appliance or use to dry laundry or sit on it.
- Do not operate without all relevant safety guards in place.
- Always place the unit on a stable, flat, level surface when operating to avoid the possibility of tipping over. Locate the power lead in such a way to prevent causing a trip or damage to the lead.

Operation of the Heater

NOTE: It is normal when heaters are turned on for the first time, or when they are turned on after having not been used for a long period, they may emit some smell and fumes. This will disappear when the heater has been on a short while.

Oil Filled Radiator Heater with Thermostat

Choose a suitable location for the heater, taking into account the safety instructions.

- Insert the plug of the heater into a suitable socket.
- Turn the thermostat control to the highest setting.
- Once the required room temperature has been achieved turn the thermostat control down until the light on the power switches switch goes out. The heater will then keep the surrounding air at the set temperature automatically switching on and off at intervals. You may reset the thermostat at any time.
- Use the Power switches (I) 600W. (II) 900W. = (III) 1500W. To turn the heater off, unplug from the mains power supply and allow the appliance to cool prior to moving.

Power switches / heat settings - the use of these switches enables the user to control the ambient heat in the room and the cost of keeping the room at a constant heat. Switch (I) 600W. Switch (II) 900W. = (III) 1500W. Once the room has reached a comfortable temperature the user may reduce the amount of heat radiating by pressing the maximum (II) switch to the off position. This in conjunction with the use of the thermostat control will allow the surrounding air to be kept at a constant heat.

Safety Cut-Out

The heater is fitted with a safety tip over switch and a thermostatic safety cut-out which will automatically turn the appliance off should it be placed in circumstances that could cause overheating or malfunction. Should this happen switch the heater off and disconnect it from the mains power supply. Allow the heater to cool before handling. **Do not** use the appliance again until the cause has been identified and rectified.

Helpful Tips

Always unplug the heater from the wall socket and allow it to cool down before cleaning. Clean the outside of the heater by wiping with a damp cloth and buff with a dry cloth. Do not use any detergents or abrasives and do not allow any water to enter the heater.

Storing the Appliance

When the heater is not used for long periods, it should be protected from dust and stored in a clean dry place. For any further advice, contact the helpline.

For your records and guarantee purposes, attach your sales receipt to this manual

Environment

