

Husky Wine Cooler

Owner Manual

To ensure safe operation, please read this instruction manual thoroughly before use.



For illustration only. Stock not included.

THIS APPLIANCE IS TO BE USED EXCLUSIVELY FOR THE STORAGE OF WINE

Husky Wine Cooler

Thank you for buying this Husky Wine Cooler. It has been designed and manufactured for many years of trouble-free service.

Operation is very simple, but please take a few minutes to read this booklet. It contains important safety information, and tips to ensure you receive the best possible service from your Husky Wine Cooler.

This appliance is intended to be used exclusively for the storage of wine.

It is not suitable for the storage of food or any perishable drinks.



WARNING:

RISK OF ELECTRICAL SHOCK HAZARD

USERS IN EUROPE This unit must be earthed.

If the power cable is damaged, it must be replaced by a qualified engineer to avoid shock hazard. DO NOT ATTEMPT TO SERVICE THE ITEM YOURSELF. Ensure that the appliance is properly earthed. Stop using the appliance immediately if electric shock is felt when touching the cooler.

DISPOSAL OF OLD APPLIANCES

BE SURE TO MAKE ANY LOCKS UNUSABLE. IF POSSIBLE, REMOVE THE DOOR(S) AND DISCARD SEPARATELY.

WARNING – CHEMICAL HAZARD: DO NOT ALLOW CHILDREN TO PLAY WITH THE OLD APPLIANCE. CONTACT YOUR LOCAL AUTHORITY FOR PROPER DISPOSAL PROCEDURES.

Before disposing of an old appliance, please make sure it is switched off and safe. Unplug the appliance and break any locks in order to avoid children becoming trapped.

Please note: the cooling system contains gases and refrigerants which require specialist waste disposal. The valuable materials contained in a refrigerator can be recycled.

Contact your local waste disposal depot for proper disposal of an old appliance and contact your local authority or dealer if you have any questions. Please ensure the pipework of your refrigerator is not damaged prior to disposal. You can contribute to environmental awareness by insisting on an appropriate non-polluting method of disposal.

DISPOSAL OF PACKAGING

All the packaging materials with your Husky Wine Cooler may be disposed of without danger to the environment.

The cardboard carton and polythene wrappers are fully recyclable – check with your local authority for the best recycling options. The expanded polystyrene materials included in the packaging can be placed in general waste.

SAFETY INSTRUCTION & WARNINGS

Before switching on your Husky Wine Cooler, read the information in this Owner Manual carefully. The Owner Manual contains important observations relating to the assembly, operation and maintenance of the appliance.

Please keep this booklet in a safe place for future reference. If you ever sell this unit, hand this Owner Manual to the new owner.

The manufacturer does not accept responsibility for any damages that may arise due to non-observation of these instructions.

WARNING: When positioning the appliance ensure the supply cord is not trapped or damaged. Do not locate extension sockets or charging transformers/power supplies adjacent to the compressor at the back of the unit, as they could overheat.



- Do not use damaged appliances. If you are in any doubt, consult the supplier.
- Connection and installation of the unit is to be carried out in strict compliance with the relevant instructions in this Owner Manual.
- For safety, the appliance must be properly earthed in accordance with specifications.
- Always allow the wine cooler to sit for 4 hours after initial delivery/ moving it before switching on.
- Always remember to unplug the appliance before cleaning. Never unplug your cooler by pulling on the power cable. Always grip plug firmly and pull straight out from the socket.
- All electrical repairs must be carried out by qualified engineers. Inadequate repairs may be dangerous.
- DANGER OF FERMENTATION: Keep alcoholic beverages in airtight bottles or containers.
- For safety, always clean up any spillages inside or outside of the appliance.
- Do not allow children to play with your Husky Wine Cooler, or to sit on it or hang onto the door.
- This Wine Cooler is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- The base of the cabinet may have sharp edges, so take additional care when placing the unit to avoid damage to surfaces.
- Do not attempt to move the Wine Cooler when full.
- WARNING: This Wine Cooler uses R600a refrigerant, which can be flammable or explosive. Repairs must always be carried out by a R600a qualified engineer.
- WARNING: Keep ventilation openings in and around the Wine Cooler clear of obstruction.

 




- WARNING: Do not use electrical appliances inside the compartments of the Wine Cooler.
- WARNING: Do not damage the refrigerant circuit.
- WARNING: Do not use mechanical devices or other means to accelerate the defrosting process.
- WARNING: If the refrigerant comes into contact with the eyes, it may cause serious eye injury.

SPECIFICATIONS

- This appliance is a wine storage appliance. It is not suitable for the storage of fresh food or perishable drinks.
- It is intended strictly for domestic indoor use.
- The refrigerating circuit is leak-proof.

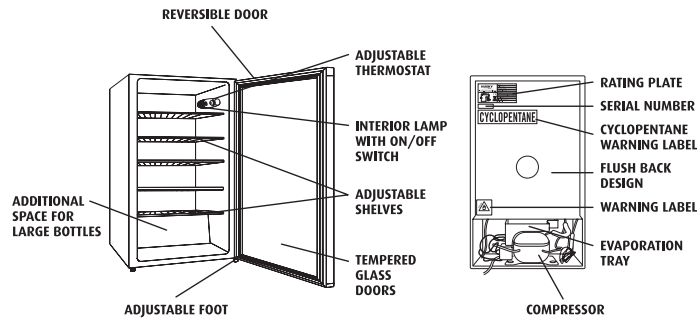

REVERSING THE DOOR HINGE

The door can be opened from left to right and vice versa. Should you wish to change the opening direction, please follow these instructions.

Note: all parts removed should be kept safely. You will require these for the reinstallation of the door.

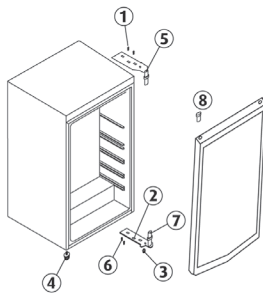 


Fig 1 Position of components prior to reversal of the door hinge.

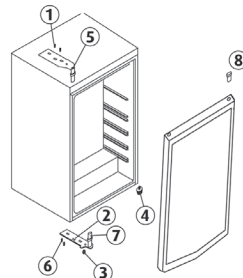 


Fig 2 Position of components after reversal of the door hinge.

- Remove the two screws (1) that hold the upper hinge (5)(right side) to the frame.
- Lift the door off and place on a padded surface to prevent scratching.
- Remove the blanking plug (8) from the hole in the upper left corner of the door and transfer it to the uncovered hole on the upper right corner. Press firmly to secure it.
- Remove the two screws (6) that hold the lower hinge (2)
- Remove the adjustable front left foot and transfer it to the other side.
- Remove the bolt pin(7) from the lower hinge (2) and reverse the direction of the lower hinge. Secure the lower hinge (2) to the left side of the lower frame with the two screws (6) Re-insert the bolt pin (7). Set the door into position, making sure it is seated comfortably onto the lower hinge (2).
- Holding the door closed, secure the upper hinge (5) into the top frame with the two screws (1). Check the door is level and tighten the screws firmly.

HOW TO MINIMISE THE ENERGY CONSUMPTION OF YOUR HUSKY WINE COOLER

- Energy consumption will be lower if the unit stands in a well ventilated space and in particular the back and sides of the unit are clear of obstruction.
- Do not place the appliance in direct sunlight or near a heat source such as ovens, radiators, heaters, etc as this will increase energy consumption.
- Keep the door closed as much as possible.
- Setting the thermostat to a colder temperature means higher energy consumption, so set only as cool as you really require.
- Do not overfill the cabinet - overfilling means that the air cannot circulate freely inside the cabinet which may slow the process of cooling and make the cabinet less efficient.
- Defrost the appliance if frost can be seen building up inside - frost will increase energy consumption and make the cooling process slower.
- Turn the appliance off completely if it is not required for a period of days or longer to avoid wasting energy (see also section 'When not in use')..

BASIC OPERATION

Your Husky Wine Cooler must stand on an even, flat surface for quieter operation.

To level the Wine Cooler, use the levelling feet at the bottom of the wine cooler. Locate the Wine Cooler away from direct sunlight and any heat sources (e.g. radiator, cooker). Extreme cold ambient temperatures may cause the

unit not to perform properly. Avoid locating the Wine Cooler in moist/damp areas.

If the appliance is to be placed on carpet, support it with a wooden board underneath. Be aware that placing the appliance on carpet may mean that heat from the compressor may cause the carpet to fade.

To operate

1. Clean the inner compartment.
2. Read the Safety Instructions & Warnings on page 3.
3. Plug in your Husky Wine Cooler into a power socket.

The first time you switch the unit on, set the temperature control to the "7" position. After 20 minutes, adjust the temperature control to "3". This setting should be correct for general use. To turn the unit off, turn the temperature control to "0".

Note: turning the temperature control to "0" stops the cooling cycle but does not shut the power off from the unit. If the unit is unplugged, turned off, or in case of power failure, you must wait fifteen minutes before restarting the unit. If you do not wait, the unit may not start.



WARNING

 
If temperature selector is set to too low a setting (i.e. higher number on the temperature control), drinks become frozen. In extreme circumstances, glass bottles may even break. Always exercise caution when setting temperature.

- Do not place heavy items (more than 20kg) on top of the chiller.
- Do not place any items on top of the chiller which may fall off when the door is opened.

CHANGING THE LIGHT BULB

Note: all parts removed should be kept safely. You will require these for the reinstallation of the door.

Before removing the light bulb, YOU MUST UNPLUG THE UNIT. FAILURE TO DO SO MAY RESULT IN ELECTRICAL SHOCK OR PERSONAL INJURY.

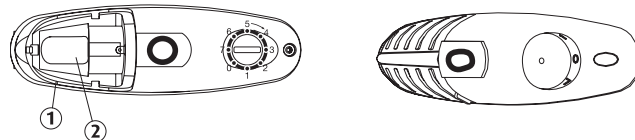

- Remove the light bulb cover (1) by gently pulling the bottom edge of the light bulb cover.
- Unscrew the bulb (2) Fit a 10w refrigerator bulb that is the same shape and size. Replace the light cover.

WHEN NOT IN USE FOR LONG PERIODS

- Unplug your Husky Wine Cooler.
- Clean and dry the inside of the appliance. Leave the door slightly

open to allow it to dry completely.

- A chiller which is unused without being cleaned may start to smell musty or develop mildew.

DEFROSTING

The surface of the evaporator ices up when the cooler is working. This is an entirely normal part of operation. If the frost layer is more than 3mm/1/8" thick, the cooler must be defrosted and cleaned to avoid unnecessary energy consumption and inefficient operation.

- Remove all items inside and unplug the unit.
- After defrosting, clean the unit (see instructions below) and allow it to dry. Reconnect to the mains supply and follow the directions 'BASIC OPERATION' on page 5.

CLEANING

1. Unplug your Husky Wine Cooler.
2. Wash the interior with warm water and neutral detergent.
3. Dry all surfaces thoroughly.

Note: Do not use abrasive cleaners!

To ensure efficient operation the back and bottom of the cooler should be cleaned thoroughly. Use mild soapy water to clean the door seal.

MOVING YOUR HUSKY WINE COOLER

- Unplug the appliance
 - Remove all items inside and tape down the shelves inside the Wine Cooler
 - Ensure the door is shut and secure
 - Ensure the Wine Cooler stays in upright position during transportation
- Note: Never hold the appliance by the door.

Power Failure

- If a power cut occurs, do not open the door more often than necessary in order to conserve cold air.

TROUBLESHOOTING

Before returning your Husky Wine Cooler to the store, check the following points; you may be able to solve any problem yourself.

| Problem | Solution |
|--|--|
| Not cooling | <ul style="list-style-type: none"> • Check power cable is connected and fuse is intact. • Wrong temperature selected. Adjust setting on the thermostat (see page 6) • Cooler is overfilled. • The Wine Cooler is exposed to direct sunlight or a heat source, so move the Wine Cooler. • Door is opened too often. |
| Outer surfaces are wet | <ul style="list-style-type: none"> • Water source or leak too near the Wine Cooler – dry surfaces thoroughly and move the Wine Cooler. |
| Inner surfaces are wet | <ul style="list-style-type: none"> • Door opened too often or left open. |
| The Wine Cooler turns on and off frequently | <ul style="list-style-type: none"> • The room temperature is hotter than normal. • A large amount of contents has recently been added to the Wine Cooler. • The door is opened too often. • The door is not closed completely. • The temperature control is not set correctly. • The door gasket does not seal properly. |
| The Wine Cooler is noisy | <ul style="list-style-type: none"> • It is normal for some noise to come from a Wine Cooler. Any rattling may come from the refrigerant flow in the Wine Cooler. As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in your Wine Cooler. • Contraction and expansion of the inside walls may cause popping and crackling noises. All the above should be at a minimum. • The Wine Cooler is not on a level surface, or may be touching other items. |
| The door will not close properly | <ul style="list-style-type: none"> • The door is misaligned. • The Wine Cooler is not on a level surface. • The shelves are out of position. |

Warranty

This Husky appliance is guaranteed to be free from defects in parts and manufacture for 12 months from date of purchase, provided that the unit is used under the normal operating conditions shown within the manual. Your attention is drawn to the following:

- Husky Retail Ltd. will not accept any liability for damage or injury caused by improper use.
- Husky Retail Ltd. will not be liable for any damage caused by moving the appliance; improper power supply; defective wiring or fuses; accident, alteration, abuse or misuse of the appliance; abnormal operating conditions; commercial or industrial use; fire; water damage; or customer misuse.
- This warranty is void if service on the unit is performed by any person other than an approved technician, or if the appliance is used for commercial purposes.

This warranty is available only to the original purchaser and is not transferable. Your normal consumer rights are not affected.

If service is required, **DO NOT ATTEMPT TO REPAIR UNIT YOURSELF**. Please return unit to store. Proof of purchase will be required for any warranty claims. You must retain your original receipt. If service under warranty is required, you will be required to produce this. Please also retain the original packaging should the unit need to be returned.

Please note: As part of our policy of continuous product improvement, Husky Retail Ltd. reserves the right to amend specifications without notice.



FOLD HERE

Affix
stamp
here

Husky Retail Ltd supply a wide range of drinks and wine coolers in branded and unbranded designs, and suitable for all drink types.

For information on the latest range, visit www.husky-lifestyle.co.uk or call 01455 555397.

HUSKY[®]

For the latest brand news, exclusive discounts and promotions, join the Husky Owners Club. Simply send an e-mail, stating the brand featured on your cooler, to huskyowners@husky-lifestyle.co.uk, or register online at www.husky-lifestyle.co.uk

**Product Registration
Husky Retail Ltd.
37 Station Road
LUTTERWORTH
LE17 4AP
United Kingdom**

Husky Retail Ltd.

**37 Station Road, Lutterworth LE17 4AP, U.K.
Tel: +44 (0)1455 555397 Fax: +44 (0)1455 555376
Visit our web site: www.husky-lifestyle.co.uk**

