

MAJORITY SNOWDON



Wireless Audio Soundbar

SNO-BAR-BLK



Instructions Guide

Contents

 
Controls And Functions.....	1
What's In The Box?	4
Instructions Guide	5
Placing TV or Vision Device.....	5
Mode Indicator lights.....	5
Using the AUX Connection.....	6
Using the Optical Input.....	7
Using the MP3 LINK Connection (Line In)	8
Connecting to the Mains Supply.....	9
Bluetooth Operation.....	10
Playing Audio Wirelessly.....	11
Troubleshooting	12
Specifications	13
Warranty	13
Safety Information.....	14

**3 YEAR
WARRANTY**

Watch video tutorials and register
your product for a FREE 3-year warranty
at www.majorityradios.co.uk


Controls And Functions

Side View / Control Buttons

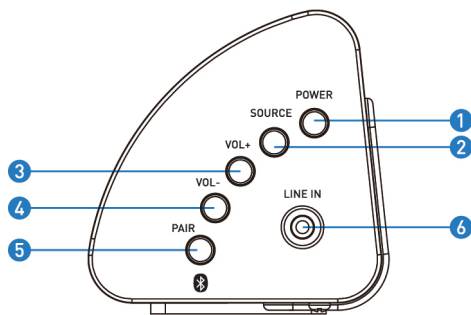

- | | |
|-------------------------------|--------------------------|
| 1. Switch on and off the unit | 4. Volume down |
| 2. Select the modes | 5. Bluetooth pair button |
| 3. Volume up | 6. Line in socket |

 
Back View / Connections

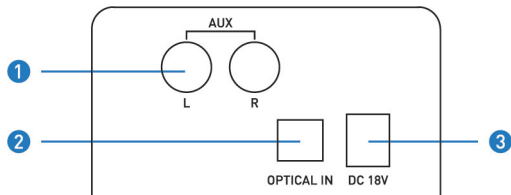

1. AUX socket
2. OPTICAL IN socket
3. DC IN (18V) socket

Controls And Functions

 Remote Control

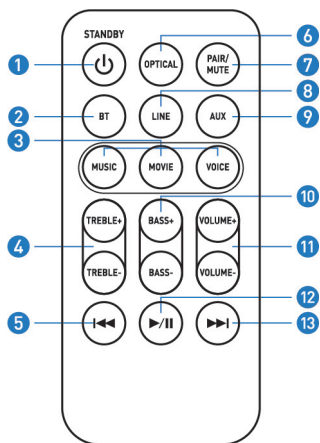

1. **Power On/Off**
Switch the unit between on and Standby mode
2. **BT button**
Bluetooth input buttons
3. **Music/Movie/Dialog buttons**
Press the button to select a desired music mode: Music, Movie, Voice
4. **Treble+/Treble- buttons**
(It must be in mode of Music)

5. **Back button**
Skip backwards to the beginning of the track or to the previous track in Bluetooth mode
6. **OPTICAL button**
Optical in button
7. **PAIR/MUTE button**
One touch to silence the unit or restore the sound
Press and hold 2 seconds to select PAIR mode
8. **LINE button**
Line In for 3.5mm input
9. **AUX button**
AUX for RCA L/R input
10. **BASS+/BASS- buttons**
(It must be in mode of Music)
11. **VOL +/- buttons**
Adjust the volume
12. **Play/Stop button**
Play/pause/resume playback in Bluetooth mode
13. **Skip button**
Skip forwards to the next track in Bluetooth mode

Using the remote control

The remote control sensor at the front of the soundbar is sensitive to the remote control's commands up to a maximum of 6 metres away and within a maximum arc of 40 degrees.

Please note that the operating distance may vary depending on the brightness of the room.

 
Remote control battery replacement

Remove the battery compartment located on the back of the remote control.

The unit comes standard with a battery installed. To avoid discharging it, it is locked with a plastic tape. Remove the tape to activate the battery.

If you have to change, insert a CR2025 3V battery, observing the correct polarity.


Replace the battery compartment.

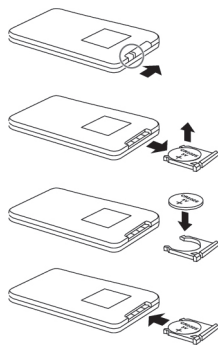


What's In The Box?

Box Contents

 1. Majority Snowdon Soundbar
2. Remote Control
3. Adapter
4. RCA Stereo Audio Cable
5. 3.5mm to 3.5mm Audio cable
6. Instructions Guide



Remote Control

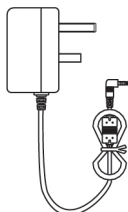 

Adapter



**RCA Stereo
Audio Cable**



 
**3.5mm to 3.5mm
Audio Cable**



Instruction Manual

Placing TV or Vision Device

The unit supports a TV with dimensions between 24 and 50 inches.

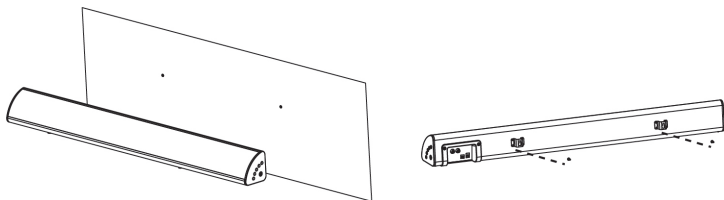

Ensure the TV or Vision Device is placed properly. Turning the volume loud may cause the device to fall down.

Mode Indicator lights

State	Indicator Lights
Power off	Red
Optical mode	Yellow
AUX mode	White
Line in mode	Green
Bluetooth ready	Flashing blue
Bluetooth connected	Blue

 
Instructions Guide

Using the AUX Connection

Use the RCA Stereo Audio Cable to connect the TV's stereo RCA(L/R). Audio output socket to the AUX(L/R) Sockets of the unit.

Then press the AUX button on the remote control or press the source button on the unit to choose the AUX function.

Turn on your television set to use the Majority Snowdon.

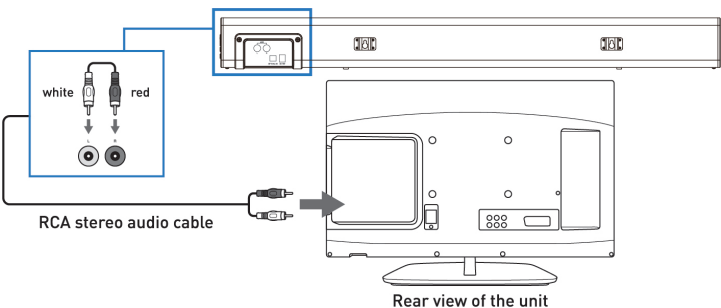

Using the Optical Input

You will need: An audio source with an Optical Audio Output and a Digital Optical Audio cable (not included)

 
Connect the Digital Optical Audio cable to the optical output on the audio source and to the Optical Input on the speaker bar.

Press the POWER button on side panel or POWER button directly on the remote control to switch on the unit.

Press the OPTICAL button on the remote control to switch to Optical mode or one touch SOURCE button on main unit repeatedly to select the Optical mode. The mode indicator LED will turn Yellow.

Using the native controls on your connected device, make sure the audio settings are set to PCM or Optical Audio and are turned On.

Audio from the connected audio source will now be played through the speakers.

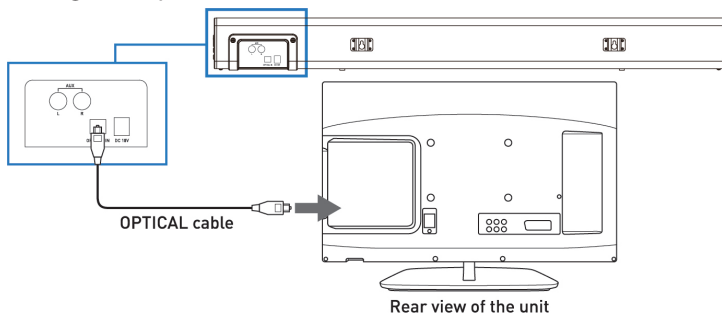

Instructions Guide

Using the MP3 LINK Connection (Line In)

 
Plug one end of a 3.5mm audio input cable (included) into the Line in on the unit. Before use, disconnect any cables connected to the Stereo RCA Inputs.

Plug the other end of the cable into the audio output/headphone output on an MP3 player or other audio source.

Press the POWER button on side panel or POWER button directly on the remote control to switch on the unit.

One touch the SOURCE button repeatedly or directly press LINE in button on remote control to enter LINE in mode. The mode indicator will turn green.

Audio played through the connected device will now be heard through the speakers.

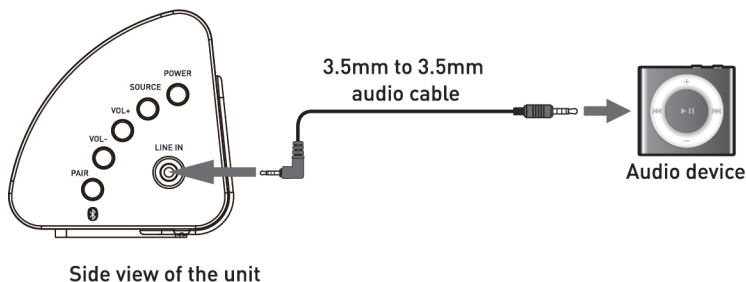

Connecting to the Mains Supply

Ensure that the power supply voltage is in the voltage of 100V~240V.

 
This unit is designed to use adapter.

Connecting the unit to any other power source may cause damage to the unit.

Unwind the mains cable to its full length. Connect the mains plug to a mains socket. Make sure the mains plug is fully inserted into the mains socket.

The mains plug/appliance coupler is used as the disconnect device, the disconnect device must remain readily operable.

Connect the Adapter to the unit and AC Socket.

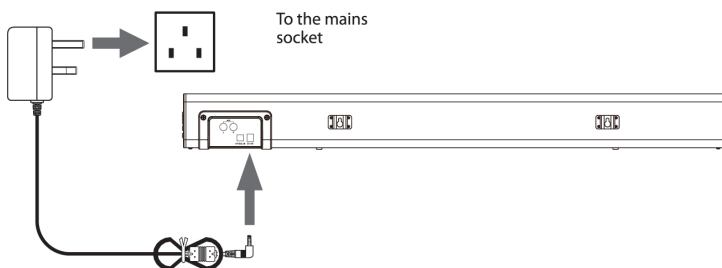

Ensure all audio connections of the unit are connected before connecting to the mains power socket.

Unplug the power cord from the outlet when the unit is use for an extended period of time.

Instructions Guide

Bluetooth Operation

Pairing a Bluetooth Device for the First Time

Press the POWER button on the unit or the POWER button on the remote control to switch on the unit.

Select and press the BT button directly on the remote control or press the SOURCE button repeatedly to enter Bluetooth mode, indicated by a flashing blue light.

Using the native controls on your Bluetooth device, select the “Majority Snowdon” in your Bluetooth settings to pair.

If your device requests a password, enter the default “0000”. Refer to the “user manual” for your specific device for instructions on pairing and connecting Bluetooth devices.

When successfully paired and connected, a beep will issue from the unit and the Pairing Indicator will display a solid blue light. After initial pairing, the unit will stay paired unless unpaired manually by the user, or until it is erased due to a reset of the device.

Soundbar has Bluetooth connected to a device, you can press MUTE/PAIR button 3 seconds to exit this device in order to pair the device with another Bluetooth device.

If your device should become unpaired or you find it is unable to connect, repeat the above steps.

Playing Audio Wirelessly

Follow the instructions for Pairing a Bluetooth Device.

Use the native controls on the connected Bluetooth Device to select a track.

To play, pause or skip the selected track, use the native controls on the connected Bluetooth Device.

Audio played through the connected Bluetooth device will now be heard through the speakers.

Troubleshooting

Troubleshooting

If the Soundbar does not work properly as desired, please check the following checklist.

Malfunction	Possible causes/measures
No power / function	Check whether the power is switched on or off at the wall. Check whether the power adaptor is properly connected to power outlet or not.
No sound	Check whether unit is set to MUTE or not. Check whether MODE is correctly selected or not. Check whether cables are properly installed or not.
No sound from bluetooth connection	Check whether you have pressed PAIR button before pairing. Check whether external device requires password "0000" to start with.
Function disturbance	Switches off and unplugs the unit. Leaves it for 2 minutes and switches it on again. If a particular mode is causing problems, please try an alternative connection to your TV such as Optical, AUX or Bluetooth.
Remote control does not work [properly]	Check whether the battery run out or not. Replaces a new one if necessary. Check whether there is obstacle on the front of remote sensor or not.
No sound when connection and switches to OPTICAL IN mode	Check and ensures the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to PCM mode while using digital connection (such as Optical, HDMI and COAXIAL)

Specifications

Power Supply	DC 18V 1.5A
Frequency Response	30Hz-20KHz
SNR	70dB
Separation	45dB
Bluetooth	V3.0
Dimension (WxHxD)	81 x 8.3 x 8.3cm
Net Weight	1.5kg

Warranty

All products come with a standard 12 month warranty. All items must be registered on www.majorityradios.co.uk for the warranty to be valid. Once on the web page, use the menu to find "register your product". You will also be given the chance to extend your warranty for an additional 24 months, free of charge.

Safety Information

1. Read these instructions.

- Keep these instructions. Instructions are also available for download at www.majorityradios.co.uk
- Heed all Warnings
- Follow all instructions
- Do not clean the apparatus near or with water
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during light storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in a way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to the rain or moisture, does not operate normally or has been dropped.
- No naked flame sources, such as lit candles, should be placed on the apparatus.
- Dispose of used electrical products and batteries safely according to your local authority and regulations.

ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on the apparatus.

Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.



This symbol means an electrical product should not be disposed of with normal household waste.

Please ensure it is taken to a suitable facility for disposal when finished with.

IMPORTANT: Please read all instructions carefully before use and keep for future reference.



Risk of electric shock.
Do not open



Read all instructions carefully before use and keep for future reference



When servicing, use only identical replacement parts



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



ATTENTION

RISQUE D'ELECTROCUTION
NE PAS OUVRIR



IMPORTANT: Please read all instructions carefully before use and keep for future reference



MAJORITY

www.majorityradios.co.uk