



Popcorn Maker
Instruction Manual

Please read all instructions carefully and retain for future reference.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and store for future reference.

In the Box

Popcorn Maker

Top cover

Measuring cup

Instruction manual

Features

Make perfect popcorn with this super-fast Popcorn Maker

Takes under 3 minutes to make a tasty snack

One measuring cup of popcorn kernels is all that it takes

Integrated measuring cup in the lid

Non-slip feet

Durable and easy to use

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This product is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Do not immerse the appliance in water or any other liquid.



Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.

Do not use sharp or abrasive items with this appliance; use only plastic or wooden spatulas to avoid damaging the non-stick surface.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Warning: Keep the appliance away from flammable materials.



Caution: Hot Surface.

Description of Parts



Instructions for Use

Before Using the Popcorn Maker

Before using the Popcorn Maker, clean it with a soft, damp cloth and dry thoroughly.

Using the Popcorn Maker

Put one measuring cup full of kernels into the aluminium heat chamber through the popcorn inlet.

Do not put in more than one cup at a time, as this will overfill the Popcorn Maker and could result in damage.

Secure the measuring cup onto the top cover to prevent losing any popcorn as it cooks.

Place a large bowl underneath the spout, ensuring that the edge of the bowl touches the Popcorn Maker.

Make certain that the spout is facing downwards so that the popcorn is caught in the bowl.

Turn on the Popcorn Maker using the switch on the aluminium heat chamber.

It will take approximately three minutes for all of the kernels to pop.

When all of the popcorn is made, turn off the Popcorn Maker using the switch and unplug it from the mains power supply.

Leave the Popcorn Maker to cool for approximately 10-12 minutes before using it again.

Cleaning & Maintenance

Always unplug the Popcorn Maker from the mains power supply before cleaning and storing.

Ensure that the Popcorn Maker has completely cooled before cleaning, as it gets very hot during use.

Never immerse the Popcorn Maker in water or any other liquid; wipe it clean with it with a soft, damp cloth and dry thoroughly.

Clean the top cover and measuring cup in warm, soapy water, then rinse and dry thoroughly.

CONNECTION TO THE MAINS

Please check that the voltage indicated on the product corresponds with your supply voltage.

IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:


The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth ($\perp$)

FOR UK USE ONLY - Plug fitting details (where applicable).

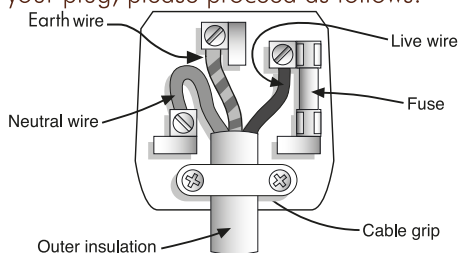

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked $\perp$.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ($\perp$).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

NON-REWIREABLE MAINS PLUG

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - **DISCONNECT IT FROM THE MAINS** and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.



**UP GLOBAL SOURCING,
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: 0161 934 2222*

*Telephone lines are open Monday – Friday, 9am – 5pm (Closed Bank Holidays)

Email: customercare@upgs.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

GUARANTEE

This product is guaranteed for a period of 2 years from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this products excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.

DISTRIBUTED BY:
UP Global Sourcing,
Victoria Street, Manchester **OL9 0DD. UK.**

CD030513/MD030314/V1



MADE IN CHINA.