

MAJORITY CASTLE



Compact Music System

CB3A-CDAB-BLK



Instructions Guide

 
Contents

Controls And Functions.....	1
What's In The Box?	4
Basic Operation	5
DAB/DAB+ Radio Functions	7
FM Radio Functions	9
CD Mode.....	11
Bluetooth & Phone Connection.....	12
Clock and Date Setting.....	14
Sleep Setting	16
System Reset, Software Version and Language	17
Brightness and Alarm Setting	18
Other Functions.....	20
Warranty	22
Safety Information.....	23

**3 YEAR
WARRANTY**

Watch video tutorials and register
your product for a **FREE 3-year warranty**
at www.majorityradios.co.uk


Top View

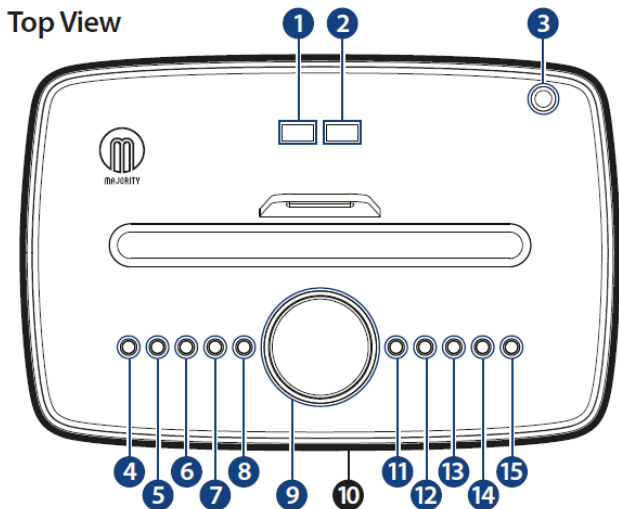

- | | |
|-------------------------|--|
| 1. USB Out 1 | 10. Display (on front of music system) |
| 2. USB Out 2 | 11. Skip Back |
| 3. Antenna | 12. Play/Pause |
| 4. Power/Mode | 13. Skip Forward |
| 5. Menu | 14. Stop |
| 6. Scan | 15. Eject CD |
| 7. Preset | |
| 8. Effect | |
| 9. Volume/Select Snooze | |


Rear View

Rear View

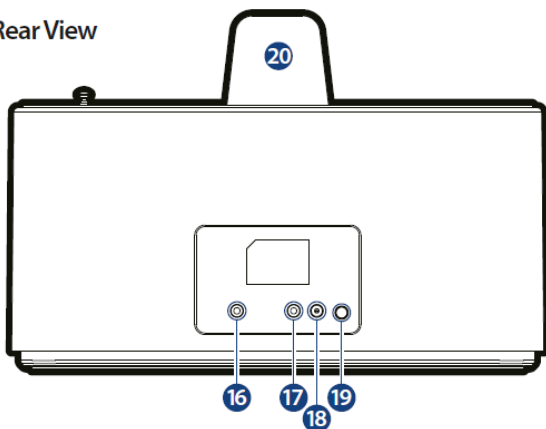

- 16. Aux-In Jack
- 17. Headphone jack
- 18. DC 9v in jack - wall plug
- 19. On/Off switch
- 20. Phone stand

Remote Controller

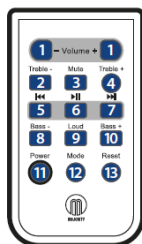

- | | |
|--------------------|---------------------------------|
| 1. Volume Control | 7. Next Track |
| 2. Reduce Treble | 8. Reduce Bass |
| 3. Mute | 9. Bass+ Loudness Compensation* |
| 4. Increase Treble | 10. Increase Bass |
| 5. Previous Track | 11. Power/Standby |
| 6. Play/Pause | 12. Switch Mode |
| | 13. Reset Treble & Bass Levels |

Bass Loud Compensation increases the level of low frequencies. Audio at low frequencies can lose bass and treble. The loud button helps to rectify this.

What's In The Box?

Box Contents

1. Majority Castle Music System
2. Remote Control
3. Power Adapter
4. Phone Stand
5. Instructions Guide



Basic Operation

Please note all (Ref.) refer to the Controls and Functions mapping guide on Pages 1-2.

Plug the 9v adapter connector into the back of the system labelled DC 9v (**Ref.18**) and the power supply into the mains. Follow by pressing the ON/OFF button at the back of the system to turn the radio ON (**Ref.19**).

Press the 'Power/Mode' button to turn the unit on (**Ref.4**). On first use the radio will display "Sprache Deutsch" on the display screen. To change the language to English, use the 'Skip Bk' (**Ref.11**) or 'Skip Fwd' (**Ref.13**) button to scroll through options. Once you have chosen your desired language, press the 'Volume/Select/Snooze' button (**Ref.9**) on the unit.

On first use, the unit will automatically start up in DAB radio mode and begin scanning for available DAB/DAB+ stations. Once the scan is complete, you can browse through the available stations or select a mode by pressing the 'Power/Mode' button (**Ref.4**) until your required option displayed on the front screen (**Ref.10**).

There are four options:

- DAB - DAB Radio
- FM - FM Radio
- CD - CD Player
- BT-AUX - Phone connection

Standby

To place the music system back on standby, press and hold the 'Power' Button (**Ref.4**). The front display will show "Goodbye" and then go into standby, showing the time and date.

To turn off fully, press the button on rear of the unit (**Ref.19**) and switch off at the mains. The cord must be kept out of reach of children.



IMPORTANT: *Please make sure you have extended the antenna to its full length (Ref.3). This will then enable you to rotate it to get the best signal.*

DAB/DAB+ Radio Functions

Press 'Power/Mode' button (**Ref.4**) and the unit will display "Welcome to DAB" on the front display (**Ref.10**).

Pull up the antenna (**Ref.3**).

The music system will display "Searching" on the display or "Tuning" if you have tuned previously (scanning may take a few minutes).

Press 'Scan' (**Ref.6**) to search for stations and use the 'Skip Bk' (**Ref.11**) or 'Skip Fwd' (**Ref.13**) button to fine tune the station.

How to store a preset radio station

You can store a station using the preset button (**Ref.7**) and save up to 10 stations.

First, tune to the station you want to store. Then press and **hold** the 'Preset' button. The number "1" will flash on the front display screen.

Use the 'Skip Bk' or 'Skip Fwd' button to select which preset number you want to assign to that station.

Then press the large 'Volume/Select/Snooze' button on top of the system (**Ref.9**) once to select and store this.

The display screen will show "Preset [1] stored". [1] and the station will now be the preset number to which the station has been saved.

How to play a preset radio station

Once you have stored all your selected stations you can then just press (do not hold) the preset button (**Ref.7**) and scroll through your choices using the 'Skip Bk' or 'Skip Fwd' button to browse through to the preset number you would like to play.

Follow this by pressing the large 'Volume/Select/Snooze' button on top of the system (**Ref.9**) once to select.

To view information about the station, press the menu button (**Ref.5**) once and it will show any data on the front display.

FM Radio Functions

To select FM Radio mode press the 'Power/Mode' button (**Ref.4**) until "FM Mode" is displayed on the front screen (**Ref.10**).

Pull up the antenna (**Ref.3**).

Press and **hold** 'Scan' (**Ref.6**) and the music system will automatically preset the first 10 stations that have a good signal.

To fine tune or search for stations use the 'Skip Bk' (**Ref.11**) or 'Skip Fwd' (**Ref.13**) button. Press the 'Skip Bk' or 'Skip Fwd' button multiple times to search slowly or press and **hold** to search quickly.

How to store a preset radio station

You can store the station using the preset button (**Ref.7**) with up to 10 saved stations.

First, tune to the station you want to store. Then press and **hold** the 'Preset' button. The number "1" will flash on the front display screen.

Use the 'Skip Bk' or 'Skip Fwd' button to select which preset number you want to assign to that station. Follow this by pressing the large 'Volume/Select/Snooze' button on top of the system button (**Ref.9**) once to select and store this.

The display screen will show "Preset [1] stored". [1] to confirm that preset number has saved that station as a preset.

How to play a preset radio station

Once you have stored all your selected stations you can then just press the preset button (**Ref.7**) (do not hold) and scroll through your choices using the 'Skip Bk' or 'Skip Fwd' button to select which preset number you want.

Follow by pressing the large 'Volume/Select/Snooze' button on top of the system (**Ref.9**) once to select and begin playing your preset station.

CD Mode

To select CD mode press the 'Power/Mode' button (**Ref.4**) until "CD MODE" is displayed on the front screen (**Ref.10**).

Insert the CD into the CD port at the front of the unit. The CD will read automatically and start playing.

Press and release the 'Play/Pause' button (**Ref.12**) to play/pause.

Press and release the 'Skip Bk' (**Ref.11**) or 'Skip Fwd' (**Ref.13**) button to select previous or upcoming tracks.

Press and **hold** the 'Skip Bk' or 'Skip Fwd' button to rewind or fast forward.

Press and release the 'Stop' button to stop (**Ref.14**).

Press and release the 'Eject' button (**Ref.15**) to eject the CD.

Bluetooth & Phone Connection

To select Bluetooth and Phone mode press the 'Power Mode' button (**Ref.4**) until "BT-AUX" is displayed on the front screen (**Ref.10**).

Turn on Bluetooth on your phone and "Majority Castle" will appear. Click on this to connect.

If the unit displays "BT Mode CONNECT" on the front display screen, it has successfully connected.

To select music you will need to select the album or playlist from your phone, but once selected you can then use the 'Skip Bk' (**Ref.11**) or 'Skip Fwd' (**Ref.13**) button to select previous or next tracks.

* Tip: if when you first connect your Bluetooth device it isn't picking up straight away, place it nearer to the music system.

Aux-In Port

You can connect your device with an Aux 3.5mm cable that connects to the Aux-In jack (**Ref.16**). Firstly, connect the audio cable between the radio and your device.

Select "AUX" mode by pressing the 'Power/Mode' button (**Ref.4**) repeatedly until the "AUX" option displays on the screen. You can now begin playing music from your device.

Dual USB Ports – Charging your phone

Both USB Ports have an output of 5V/2A (**Ref.1&2**). When connected via a USB lead into the USB port, the system will charge your device.

Please note that you can not play your music via the USB connection - it is purely a charging facility. You can play your phone music either using Bluetooth or an Aux 3.5mm cable as instructed on page 12.

Phone Stand Set Up

To set up phone stand (**Ref.20**) – remove the rubber strip from the top of the unit (**Ref.20**) and insert the phone stand. (If the rubber strip is hard to remove, use a small pin to extract it from the top of the music system).

The soft protector strip faces the same way as the display screen so that the phone is protected when resting horizontally on top of the speaker.

Clock and Date Setting

The date and time will automatically set after using DAB radio and will show when system is in Standby. The time will also automatically update when the time changes from BST to GMT and vice versa.

Manually Setting the Time

Press and **hold** the 'Menu' button (**Ref. 5**) for 1 second to display options and scroll through to "Clock Setting" by using the 'Skip Bk' (**Ref.11**) and 'Skip Fwd' (**Ref.13**) buttons. Select "Clock Setting" by pressing the 'Volume/Select/Snooze' button (**Ref.9**) on top of the system once.

Using the 'Skip Bk' and 'Skip Fwd' buttons, browse to "12 HOUR/24 HOUR" and select the option by pressing the large 'Volume/Select/Snooze' button on top of the system (**Ref.9**).

The hour will then flash and you can change it using the 'Skip Bk' and 'Skip Fwd' buttons. To confirm the hour, press the large volume button once on the time you require. The display will then automatically move on to the minutes.

Change the minutes using the 'Skip Bk' and 'Skip Fwd' buttons, then press the large 'Volume/Select/Snooze' button once on the time you require.

Manually Setting the Date

Press and **hold** the 'Menu' button (**Ref.5**) for 1 second to display options.

Browse to "Date Setting" with the 'Skip Bk' (**Ref.11**) and 'Skip Fwd' buttons (**Ref.13**) and confirm the option of "Date Setting" by pressing the 'Volume/Select/Snooze' button (**Ref.9**) on top of the system once.

The year will flash and can be changed using the 'Skip Bk' and 'Skip Fwd' buttons. Follow by pressing the large 'Volume/Select/Snooze' button once to confirm.

The month will then flash automatically. You can change the month using the 'Skip Bk' and 'Skip Fwd' buttons. Press the large 'Volume/Select/Snooze' button once on the month you require.

The day will then flash automatically and you can change it the same way by using the 'Skip Bk' and 'Skip Fwd' buttons. Press the large 'Volume/Select/Snooze' button once on the day you require.

Sleep Setting

Sleep Setting enables you to programme the music system to switch off after a set time. This option can be made for a range of times up to 120 minutes.

To set the sleep setting, press and **hold** the 'Menu' button (**Ref.5**) for 1 second to display options, then browse to the "Sleep Setting" option by using the 'Skip Bk' and 'Skip Fwd' buttons.

Select "Sleep Setting" by pressing the 'Volume/Select/Snooze' button (**Ref.9**) on top of the system once.

Using the 'Skip Bk' and 'Skip Fwd' buttons, browse through the number of minutes you would like the system to play before turning off and confirm your choice by pressing the large 'Volume/Select/Snooze' button (**Ref.9**) to confirm.

System Reset, Software Version and Language

System Reset

Press and **hold** the 'Menu' button (**Ref.5**) for 1 second to display options, followed by using the 'Skip Bk' and 'Skip Fwd' buttons to browse to the "System Reset" option. This will erase all previously made options including presets.

Confirm the system reset by pressing the 'Volume/Select/Snooze' button (**Ref.9**) on top of the system once. The radio will begin resetting and will go into standby.

SW Version – Software version display

Press and **hold** the 'Menu' button (**Ref.5**) for 1 second to display options, followed by using the 'Skip Bk' and 'Skip Fwd' buttons to browse to the "SW Version" option.

Follow by pressing the 'Volume/Select/Snooze' button (**Ref.9**) on top of the system once to display the software version.

Language Settings

Press and **hold** the 'Menu' button (**Ref.5**) for 1 second to display options and using the 'Skip Bk' or 'Skip Fwd' buttons to scroll through to "Language". Select with 'Volume/Select/Snooze'.

In language settings, choose your language of choice between English or Deutsch by using the 'Skip Bk' or 'Skip Fwd' buttons. Confirm your choice with the 'Volume/Select/Snooze' button.

Brightness and Alarm Setting

Brightness Setting

Press and **hold** the 'Menu' button (**Ref.5**) for 1 second to display options, then browse to "Brightness" settings using the 'Skip Bk' (**Ref.11**) and 'Skip Fwd' buttons (**Ref.13**). Confirm the selection by pressing the 'Volume/Select/Snooze' button (**Ref.9**) on top of the system once.

You can now choose between four available brightness choices: OFF, Level 1, 2 and 3 - Level 3 is the brightest. Browse by using the 'Skip Bk' and 'Skip Fwd' buttons and confirm your brightness selection by pressing the 'Volume/Select/Snooze' button (**Ref.9**) on top of the system once.

Alarm1/Alarm2 Setting

Both alarms are set up in the same way:

Press and **hold** the 'Menu' button (**Ref.5**) for 1 second to display options, then browse to "Alarm1 Setting/Alarm 2 Setting" by using the 'Skip Bk' (**Ref.11**) and 'Skip Fwd' (**Ref.13**) buttons.

Select "Alarm1 Setting/Alarm2 Setting" by pressing the 'Volume/Select/Snooze' button (**Ref.9**) on top of the system once.

Three choices will then display: Alarm On/Off - Alarm Del (Delete) - Alarm Set.

If you have chosen "Alarm Set", you can begin setting your alarm. Firstly, select the sound of the alarm with the 'Skip Bk' and 'Skip Fwd' buttons. The alarm can be set to BUZZER/DAB Mode/FM Mode. Select your choice with the 'Volume/Select/Snooze' button (**Ref.9**).

Then choose the hour of the alarm using the 'Skip Bk' and 'Skip Fwd' buttons and press the 'Volume/Select/Snooze' button (**Ref.9**) on top of the system once and repeat this for the minutes.

The alarm volume can then be changed using the 'Skip Bk' and 'Skip Fwd' buttons and press the 'Volume/Select/Snooze' button (**Ref.9**) on top of the system to confirm.

To turn the alarm on or off, or delete the alarm set, go back to the 'Alarm 1 Setting/Alarm 2 Setting' from the Menu screen and select 'Alarm On/Off' or 'Alarm Del'.

Snooze mode

When your alarm is sounding, press the 'Volume/Select/Snooze' button (**Ref.9**) on top of the system once to put the radio into Snooze mode. This will set for the alarm will sound again 10 minutes after snooze has been pressed.

Other Functions

Erp Power Saving Feature

If the unit can not receive signal after 10 minutes it will enter into Erp management mode and the unit will go into standby.

NOTE: The unit won't go into the Erp power saving mode if in FM.

Headphones Function

When the headphones are connected into port (**Ref.17**) you will not be able to hear sound from the speakers only via the headphones.

Effect Button

This button is for increasing or decreasing the Bass and Treble. Press and release the 'Effect' button (**Ref.8**) to show "BASS/TREBLE" on the front display then turn the large volume button on the top of the system to select the range between +5 - 5 db.

Volume Button

This button is the volume control and select button (**Ref.9**). On FM mode, press this button to switch the Mono (Plays the same through both speakers) and Auto (Auto offers a better stereo sound). Each press on the volume button will switch it from Mono to Auto and you will see this displayed on the front display.

Troubleshooting

If the product does not work properly as desired, please check the following checklist. Minor problems can be easily resolved.

Malfunction	Possible causes/measures
The unit does not work	Has the adaptor lead been correctly plugged into the mains and the DC input jack at the rear of the unit? Does the socket that is being used have power? Has the 'On/Off' button at the rear of the unit been switched On?
No sound	Is the volume control set at minimum? Are the headphones fitted into the jack? No sound can be heard via the speakers if the headphones are plugged in.
Radio reception noisy (FM)	Extend the antenna or adjust the position of the radio. FM Stereo - if weak switch to MONO as this requires less signal strength.
Radio reception stutters/bubbling sounds (DAB)	Signal is weak. Extend the antenna or adjust the location of the radio. Positions higher up or nearer windows may improve reception. Note sometimes retracting the aerial slightly (less than full length) may improve reception.
DAB 'No Signal DAB'	This normally means the signal is very weak, not that there is no signal. Try moving the radio to a different location and rescanning. Check that your local area has DAB coverage.
Phone Stand not fitting into unit	Make sure you have removed the rubber strip off the top of the unit (Ref.20). The phone stand will then fit in easily slightly tilted but the rubber protector facing you for the phone to rest on.
Time and Date not setting automatically	For the time and date to set automatically you need to turn on the system and switch to DAB radio and let this scan. Then press the Power mode button and the system will go into standby and the date and clock will have been updated automatically.

Specifications

Power Supply	AC 200-240V 50/60Hz
Output	9V _ _ _ 3A
Power Consumption	27W
Total Power Consumption	2x 8W RMS
Radio	FM 87.5MHz - 108MHz DAB / DAB+ 174-240MHz
Operating Position	Horizontal

Warranty

All products come with a standard 12 month warranty. All items must be registered on www.majorityradios.co.uk for the warranty to be valid. Once on the web page, use the menu to find "register your product". You will also be given the chance to extend your warranty for an additional 24 months, free of charge.

1. Read these instructions.

- Keep these instructions. Instructions are also available for download at www.majorityradios.co.uk
- Heed all Warnings
- Follow all instructions
- Do not clean the apparatus near or with water
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during light storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in a way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to the rain or moisture, does not operate normally or has been dropped.
- No naked flame sources, such as lit candles, should be placed on the apparatus.
- Dispose of used electrical products and batteries safely according to your local authority and regulations.

ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on the apparatus.

Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely.

Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.



This symbol means an electrical product should not be disposed of with normal household waste.

Please ensure it is taken to a suitable facility for disposal when finished with.

IMPORTANT: Please read all instructions carefully before use and keep for future reference.



Risk of electric shock.
Do not open



Read all instructions carefully before use and keep for future reference



When servicing, use only identical replacement parts



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



ATTENTION

RISQUE D'ELECTROCUTION
NE PAS OUVRIR



IMPORTANT: Please read all instructions carefully before use and keep for future reference



MAJORITY

www.majorityradios.co.uk