



OnePlus 7 Pro User Manual

Table of contents

GETTING STARTED	8	Use Apps	18
Front view	9	Home screen	20
Back view	10	Notification panel	22
Setting up your device	11	Google assistant	24
Battery and charging	11	SETTINGS	25
Physical buttons	13	Wi-Fi & internet	26
Transfer data to OnePlus 7 Pro	15	Wi-Fi	26
THE BASICS	16	SIM & network	27
Basic gestures	17	Hotspot & tethering	27
Install and uninstall apps	18	Bluetooth & device connection	29
		Bluetooth	29

NFC	30	Security & lock screen	41
Display	31	Security status	41
Apps & notifications	33	Device security	42
Sound	34	Accounts	46
Buttons & gestures	36	Utilities	46
Alert slider	36	System	48
Navigation bar & gestures	37	Accessibility	48
Quick gestures	38	Language & input	48
Battery	40	Date & time	48
Storage	40	Reset options	49
		OTG storage	50

Recent app management	50	Calculator	59
Multiple users	50	Recorder	60
RAM Boost	51	Notes App	61
System updates	51	Camera	62
About phone	51	Gallery	65
APPS	53	Clock	66
Phone	54	OnePlus Switch	68
Contacts	54	T-Mobile Apps	69
File Manager	56	Google Apps	70
Messages	57	ADVANCED	72
Weather	58	Gaming mode	73

Do Not Disturb	73	System updates	79
Cast	74	OTA upgrade	79
Scheduled power on/off	74	Local update	79
Recent app management	74	Backup and Restore	80
Screen pinning	75	Backup and restore by OnePlus Switch	80
Parallel Apps	76	Use Google drive for backup and recovery	80
Picture-in-picture	76	Factory reset	81
FileDash	76	ACCESSIBILITY	82
Hidden Space	77	Magnify with triple-tap	83
REBOOT, UPDATE, BACKUP, RECOVERY	78	Power button ends call	83
Reboot or force reboot	79	Color inversion	83

 
Color correction	83	Driving Safety	92
High contrast text	84	Health Information	92
SAFETY INFORMATION	85	Laser Safety Statement	93
Legal Notice	86	EU Regulatory Conformance	93
Declaration	86	CE Statement	93
Trademarks and Permissions	86	RF Exposure Information (SAR)	94
Privacy Policy	87	Restrictions in 5GHz band	95
Safety	87	Frequency Bands and Power	95
General Safety Information	88	Correct Disposal of this Product	96
Battery Safety	89	RoHS Compliance	96
Charging Safety	90	FCC Regulatory Conformance	97

FCC Statement	97	Languages & Input	106
FCC Caution	98	Care and Maintenance	107
RF Exposure Information (SAR)	98	OnePlus Device Warranty Information	108
Hearing Aid Compatibility (HAC) regulations for Mobile phones	100	The limited warranty does not cover	109
Industry Canada Conformance	102	Return Policy (Limited to North America & Europe)	110
IC Statement	102		
Restrictions in 5GHz band	103		
RF Exposure Information (SAR)	104		
India Regulatory Conformance	105		
E-waste I nformation	105		


Getting started

Learn more about your device and start using.

Front view

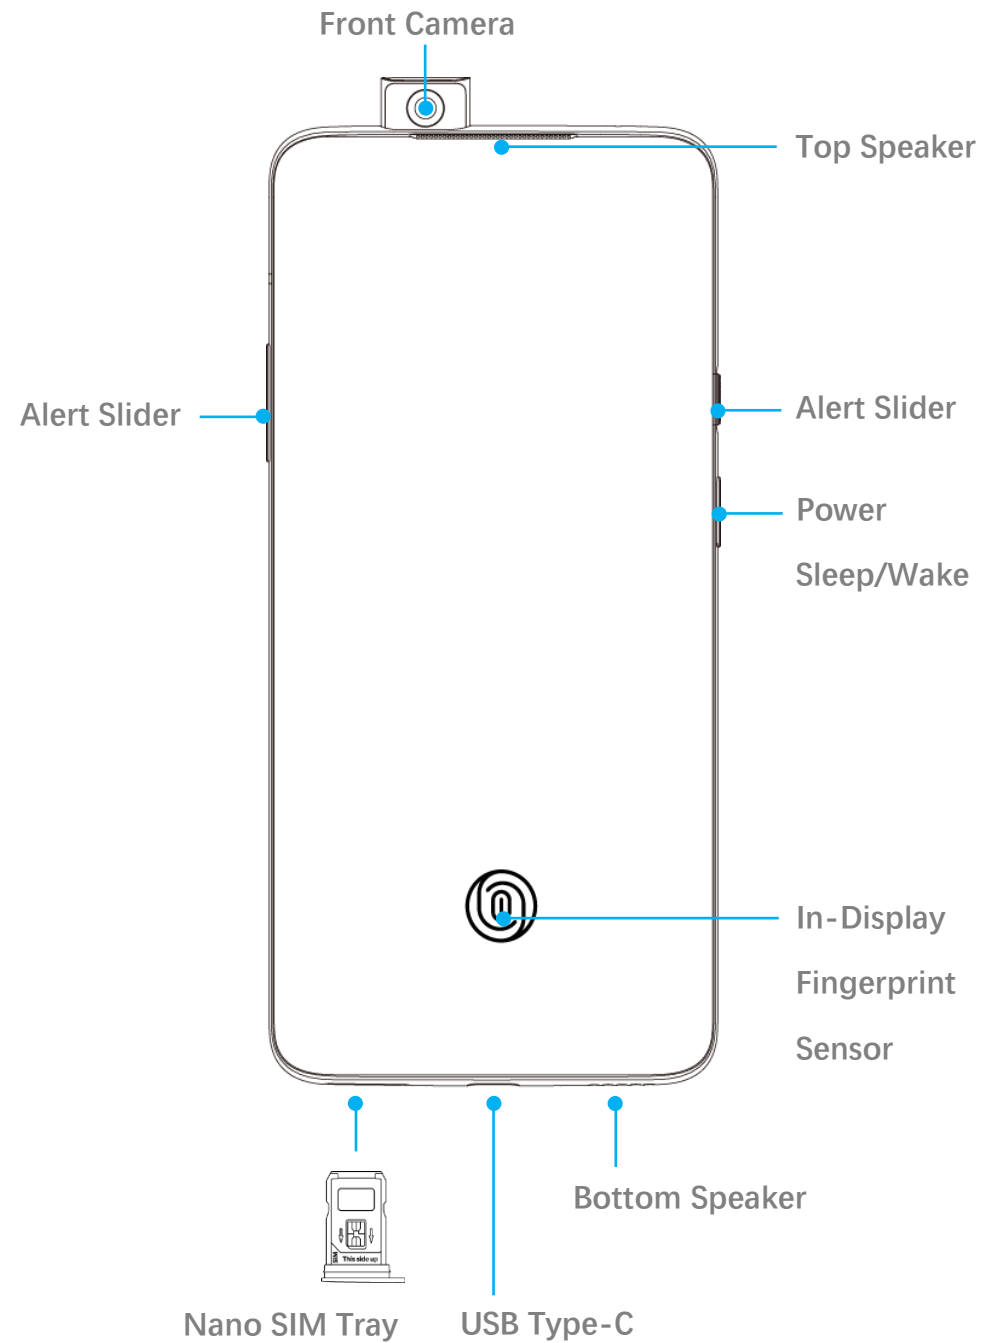

Back view

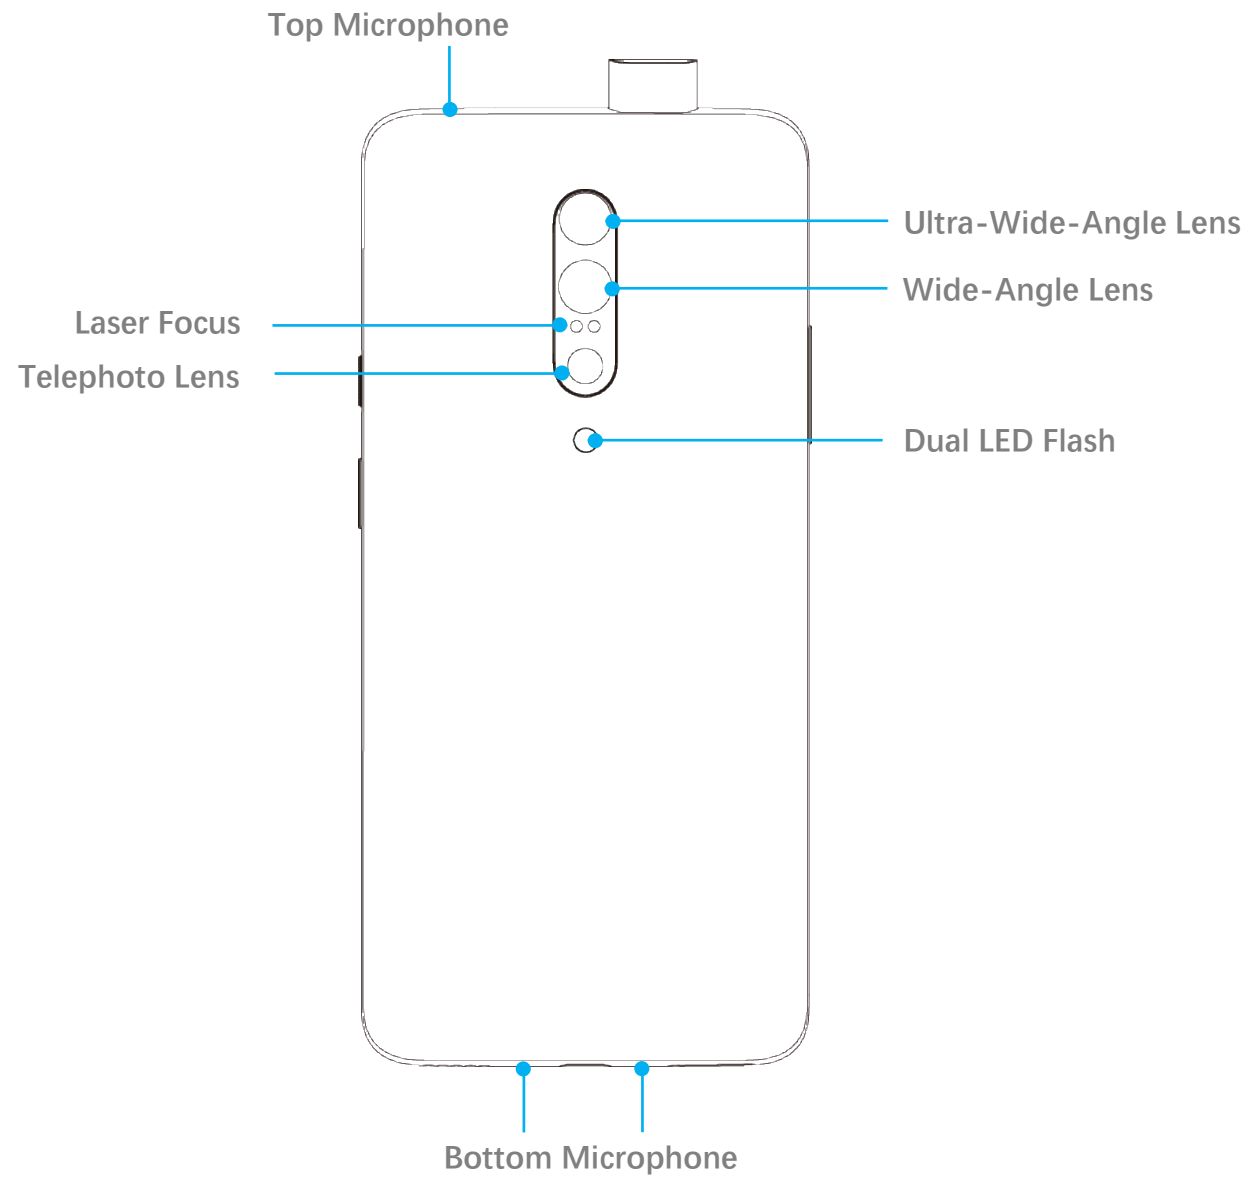 

Setting up your device

Insert SIM card

1. Insert the SIM Tray Ejector into the small hole on the SIM card holder. Press the ejector firmly into the hole to push the SIM card tray out.
2. Slowly pull the SIM card tray out of the tray slot.
3. Place the SIM card into the SIM card tray.
4. Plug the SIM card tray back into your device.

* Use the original Nano-SIM card. Non-original cards may cause damage.

Booting up your OnePlus 7 Pro

Press and hold the **power** button for a few seconds to boot up the phone. If your phone does not power on, you may need to charge it.

Setup Wizard

When you first boot up the phone (or after a factory reset), the **Setup Wizard** lets you customize all features, including language, software buttons, gestures, face unlock, and other features. If you want to change these later, you can do so after setting up the phone in the settings menu.

Battery and charging

You will need to charge the phone when you

Getting started

first get it or if you have not used it for a long time.

Safety Information:

1. To ensure your safety and avoid damaging the device, only use the official charger and USB cable.
2. OnePlus 7 Pro supports the USB Type-C cable.
3. Unplug the charger after you finish charging to avoid wasting electricity.
4. Do not place anything on your phone while it is charging.

Charge the battery

1. Connect the USB cable to the adapter;

2. Plug the USB cable into the phone's USB port.
3. Plug the adapter into a power socket.
4. After charging, unplug the USB cable from the phone and unplug the adapter from the socket.

Save power and extend battery life

Reduce power consumption by doing the following:

1. Turn off the screen when the device is not in use.
2. Turn on **Battery Saver** mode when the battery is low.
3. Disable Bluetooth and Wi-Fi when you are not

using them.

4. Dim screen brightness and shorten sleep time in Settings.
5. Delete apps that you do not use.

OnePlus Fast Charge

When you use the OnePlus charger and USB cable for charging, you can charge your phone safely (5V/4A) and quickly.

When the temperature is lower than 15 ° C or higher than 45 ° C, the phone will stop fast charging to protect the battery.

Physical buttons

Power button

The power button is located on the right side of the phone.

- Press and hold the power button to turn on/off/restart the device.
- Press the power button to turn on/off the screen.
- Double-press the power button to quickly turn on the camera when the screen is locked.

Volume button

The volume button is located on the left side of the phone.

Getting started

- When playing music or video, press the volume button to adjust the media volume.
- Press the volume button during a call to adjust the call volume.
- Press the volume button to silence the ringtone when you get an incoming call.

Alert Slider

Alert Slider is on the right side of the phone.

You can adjust the system ringtone status (**silent**, **vibrate**, **ring**) by toggling the alert slider.

Silent: Calls and notifications will be silenced with no vibration, except for alarms.

Vibrate: Calls and notifications will be silenced, except for alarms.

- **Ring:** Calls, alarms and notifications will function normally.

NOTE: If the phone is in **Do Not Disturb** mode, the ringtone and vibration will be turned off.

Shortcut keys

You can perform quick actions using the shortcut keys.

- Press and hold the "power" button and the "volume down" button at the same time to take a screenshot.
- Press and hold the "power" button and the

Getting started

"volume down" button at the same time to access recovery mode when the device is powered off.

- Long press on "power" button and "volume UP" for 10 seconds to force a restart

Transfer data to OnePlus 7 Pro

OnePlus Switch can quickly transfer all your data, including contacts, messages and photos, from your old device to your new OnePlus device.

1. Open the OnePlus Switch app. Select **I'm a new phone**, then select your old phone's type.
2. Follow the prompts on the new phone screen. Download and install OnePlus Switch on your

old phone.

3. Tap Continue on your new phone.
4. Open OnePlus Switch in your old phone, select **I'm an old phone**, and scan the QR code on your new phone to connect the two phones.
5. After connecting the two phones, select the data you want to migrate from your old phone. Tap to start. Then wait until the transfer is completed.

The Basics

Learn to use your OnePlus device.

Basic gestures

Learn to use basic gestures, such as tap, drag, swipe, and zoom, to control your phone and apps.

1. Tap to enter the app or select it



2. When viewing a webpage or list, swipe up or down to scroll.



3. Swipe left or right with your finger to switch tabs, change pages or slide content in the weather/calendar/gallery/app list.



4. Two-finger zoom for images and web pages.



5. Press and hold the screen to bring up the pop-up window for advanced settings or to enter edit status.



Install and uninstall apps

Install apps from Play Store

It is advisable to download and install apps from Play Store, which is available on your device.

Open Play Store to search for apps using key words or on screen.

- Tap the app icon to view application details.
- Tap **Install** to download and install apps.

* It is advisable to download apps on a Wi-Fi network.

Uninstall apps

Uninstall apps as follows:

- On the home screen or app drawer, press and hold the app icon and select **uninstall**.
- Go to **Play Store > My apps & games > INSTALLED**, select **uninstall**.
- Go to **Settings > Apps & notifications** and select the app. Then go to **App info** and select **uninstall**.

* Some pre-installed apps cannot be uninstalled

Use Apps

Learn how to open apps, switch between apps, close apps and view app information.

App drawer

Swipe up on the home screen to view all your apps in the app drawer

Open apps

Open the app by the app icon on the desktop or in the app drawer.

Switch apps

Tap **Recent** or swipe up and hold to switch between apps.

Close apps

Tap **Recent** and close apps by swiping up on the

app card.

View app info

Long press an app's icon and select app info in the pop-up box to view app info and setting options.

Clear background tasks

Swipe up to the center of the screen and hold to enter app switching mode. Tap X on the bottom of the screen to clear background tasks

*Pinned apps will not be closed.

Lock background apps

The Basics

In app switching mode, tap the menu icon in the upper right corner of the app card. Select **Lock** to stop the app from being closed or cleared.

Home screen

Learn to set **wallpapers**, **widgets** and **home settings** to personalize your phone.

App icons and folders

- Open the app drawer by swiping up from the bottom of the home screen. Press and drag an app icon to add it to the home screen.
- Drag an app icon from the app drawer to the home screen to place it on the home screen.
- Drag an app icon onto another app on the

home screen to create a folder.

Wallpapers

Long press a blank space on the home screen and select **Wallpaper** to set your home screen wallpaper and lock screen wallpaper.

Widgets

- **Add widgets:** Long press a blank space on the home screen. Then press a widget icon and drag it to the home screen.
- **Remove widgets:** Press and hold a widget and select **Remove**.

Home Settings

The Basics

Long press the blank space on the home screen and select **Home settings**.

Add icon to Home screen: When enabled, it will display an icon on the home screen after installing a new app.

Swipe down: Swipe down from home screen to access quick settings.

Double tap to lock: Double tap a blank area of the home screen to turn off the screen and lock the device.

App Drawer: Displays all apps and allows you to search for an app in the drawer.

Notification dots: When enabled, the app icon will display dots to indicate new messages.

Icon pack: Set up icon styles for preset apps and some third-party apps

 
Home screen layout: Adjust the number of desktop grids and icon sizes.

Notification panel

When a new system notification or app notification is received, the status bar will display the corresponding icon. Pull down the notification panel by swiping down from the top of the application page or anywhere on the home screen.

- You can clear notifications by swiping right (Some notifications need to be cleared by closing the related app).
- **Long press** a notification bar to enter the notification settings for that app.

Quick Settings

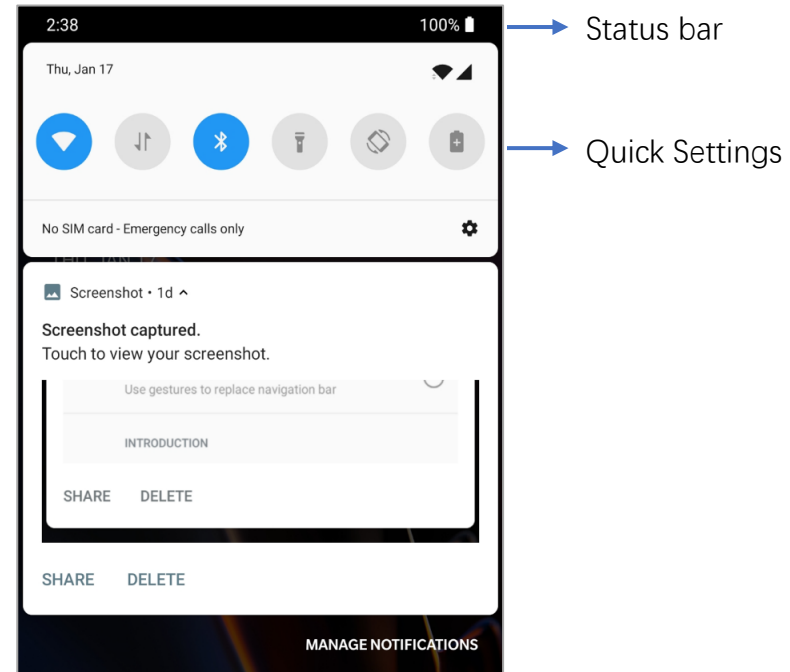

- Tap the quick settings icon to turn on/off specific functions quickly.
- Press and hold an icon in the quick settings menu to open the corresponding settings interface.
- View more buttons and brightness settings by swiping down from the status icons

Status icons

Status icons are displayed on the status bar at the top of the screen. The icons listed in the table below are the most common ones.

	Signal strength		Location service enabled
	Wi-Fi		Alarm enabled
	No SIM card		Silent mode enabled
	Roaming		Vibration mode enabled
	Connected to GPRS network		Airplane mode enabled
	Connected to EDGE network		Normal charging
	Connected to UMTS network		Battery capacity
	Connected to HSDPA network		NFC enabled
	Connected to HSPA+ network		Gaming mode enabled
	Connected to LTE network		Do not disturb mode enabled
	Bluetooth enabled		

Google assistant

Google Assistant is available 24/7.

* When using Google assistant for the first time, follow the prompts to log in to your Google account.

You can quickly access Google Assistant by pressing and holding down your home button or by simply saying, "Hey Google."

With Google Assistant, you can:

- Make quick phone calls on the go (e.g., "Call Mom")
- Send text messages (e.g., "Text Sara I am running late")
- Set reminders (e.g., "Remind me to buy a birthday gift for John")
- Take a selfie (e.g., "Take a selfie")
- Set calendar events (e.g., "Set a calendar event for dinner with Charlie tomorrow from 7-9")
- Play music (e.g., "Play jazz music on YouTube")
- Navigate to places (e.g., "Give me directions home")
- Weather information (e.g., "Do I need an umbrella today?")

Settings

Configure your phone's network
and account or set up your phone

Wi-Fi & internet

Wi-Fi

Connect to the internet through WLAN.

Connect to Wi-Fi

1. Enter **Settings** > **Wi-Fi & internet**, tap **Wi-Fi**.
2. Select a Wi-Fi network from the list.
3. You will automatically connect to an unencrypted Wi-Fi network that you have selected. To connect to an encrypted network, tap **Connect** and enter the password.

* You can also manually add a Wi-Fi network

by selecting **Add networks**.

Wi-Fi preferences

- **Turn on Wi-Fi automatically:** Enable this to turn Wi-Fi back on near high-quality saved networks, like your home network.
- **Intelligently select the best Wi-Fi:** Enable this for your phone to select and connect to the best Wi-Fi by analyzing connectivity and signal strength.
- **Auto switch to mobile data:** Enable this for your phone to automatically switch to mobile data when all Wi-Fi networks are poor quality and mobile data is turned on.
- **Scanning always available:** Enable this for

Settings

your phone to allow location services or other apps to scan for networks when Wi-Fi is off.

- **Open network notification:** Enable this for your phone to notify you when a high-quality public network is available.

SIM & network

Enable or disable mobile data

Go to **Settings > Wi-Fi & internet > SIM & network**, enable/disable **Mobile data**.

Roaming settings

Go to **Settings > Wi-Fi & internet > SIM & network**, enable/disable **Roaming**.

Enable this for your phone connect to data services when roaming.

NOTE: Roaming charges may apply. Check with your network provider for more details.

Preferred network type settings

Go to **Settings > Wi-Fi & internet > SIM & network**, select **Preferred network type**

- 2G/3G/LTE (automatic)
- 2G/3G (automatic)
- 3G/LTE
- 2G only

Hotspot & tethering

Settings

Share the network on your phone through Wi-Fi hotspots, USB connections, Bluetooth, and so on with other devices.

Wi-Fi hotspot

When Wi-Fi hotspot is turned on, your mobile data will be shared and other devices can connect on Wi-Fi. You can set the following options to manage your Wi-Fi hotspots:

- **Hotspot name:** The generated Wi-Fi network signal name.
- **Security:** There are 2 options: No password and WPA2 PSK encryption.

It is advisable to select WPA2 PSK encryption so you can create a password for your

hotspot.

- **Turn off hotspot automatically:** If the hotspot has no connected devices, there are 4 options you can select for turning off the hotspot:

- After 5 min of inactivity
- After 10 min of inactivity
- After 15 min of inactivity
- Always on

- **AP Band:** Select 2.4 GHz or 5 GHz.

USB tethering

To share your device's mobile data or Wi-Fi

Settings

network with your computer via USB, follow the steps below:

1. Connect your phone to your computer with a USB cable
2. Select the USB connection method as **USB tethering** in the control center.

* Some computers may need Android RNDIS driver to be installed separately.

Bluetooth tethering

To share your device's mobile data or Wi-Fi network with other devices by BLUETOOTH tethering, follow the steps below.

1. Go to **Mobile HotSpot & tethering** and

enable **Bluetooth tethering**.

2. Pair and connect your phone in the Bluetooth settings interface of other devices.

Bluetooth & device connection

Bluetooth

Bluetooth lets you connect to Bluetooth-enabled devices such as headsets and keyboards.

- **Pair new device:** Go to **Settings > Bluetooth & device connection**, choose **Pair new device**, select the device you want to connect from the list of available devices, and enter

Settings

the pairing code to complete pairing.

* When your Bluetooth device is turned on but cannot be found, check the device's manual and follow the instructions to switch the device to pairing mode to connect.

- **Previously connected devices:** View previously paired devices and tap to re-connect.
- **Discoverable:** Enable this for your phone to be visible to all nearby Bluetooth devices.
- **Connection preferences:** Go to **Settings > Bluetooth & device connection > Connection preferences > Bluetooth**. You can also rename the device.

NFC

When NFC is enabled, you can exchange data with another device when the two devices are touching.

Android Beam

Go to **Settings > Bluetooth & device connection > Connection preferences > Android Beam**

When this feature is turned on, you can beam app content to another NFC-capable device by placing the devices close together. For example, you can beam web pages, YouTube videos, and contacts.

Settings

Place the devices together (typically back to back) and then tap your screen. The app determines what is beamed.

Tap & pay

Go to **Settings > Bluetooth & device connection > Connection preferences > Tap & pay**

Before using the tap and pay, you need to set up the default payment app, open the payment service in the app, and set the tap and pay feature with the following settings options:

- **Payment default:** Choose an app, such as Google pay, to use when making a payment by tapping the payment terminal.

- **Use default:** You can set as **Always** and **Except when another payment app is open.**

Display

Go to **Settings > Display** to customize the screen display settings.

- **Adaptive brightness:** When enabled, the phone will optimize the screen brightness setting according to ambient light conditions. You can also manually adjust the slider bar below to set your preferences.
- **Sleep:** After the time is set, the screen will turn off automatically when the device is not in use.
- **Night mode:** When enabled, the device will

Settings

adjust to the color temperature you have set for minimizing eye fatigue.

- **Screen calibration:** Selecting a different color mode will give different display results.
 - **Ambient display:** You can set **WHEN TO SHOW** and there are 2 options:
 - Pick up your phone to show.
 - Tap the screen to show.
- You can set **WHAT TO SHOW:**
- Clock style.
 - Display message.
 - Enable/disable New Notifications.
- **Wallpapers:** Set your phone desktop

wallpaper and lock screen wallpaper.

- **Theme:** Set the color style of the UI.
- **Accent color:** Set the accent color.
- **Font:** Set the phone font style. You can select **Roboto** or **OnePlus Slate**.
- **Font size:** Set the size of the font.
- **Display size:** Set the display size of content (e.g., icons and fonts). Note that this may affect how some third-party apps are displayed.
- **Status bar:** You can set the style of the battery and time, enable/disable showing battery percentage, display network speed, and manage icons in the status bar.

Settings

- **Auto-rotate screen:** If enabled, the phone display will automatically rotate as the phone rotates.

Screen saver: Set the screen saver style (clock, colors and photos) and when the screen saver turns on (while charging, while docked, while charging or docked, or never).

Apps & notifications

Go to **Settings > Apps & notifications** to manage your device's apps, change their settings, view app info, set notifications and permissions, and more.

- **Recently opened apps:** Shows recently opened apps.

- **See all apps:** Displays all apps installed on your phone.

- **Notifications:** You can set the content of the notifications displayed on the lock screen:

- Show all notification content.
- Hide sensitive content.
- Don't show notifications at all.

You also can enable/disable **Allow notification dots**, set **Default notification sounds** and enable/disable **Do Not Disturb** mode.

- **Default apps:** Set the default apps for home, browser, phone, SMS, gallery, mail, and more.

Settings

- **App permissions:** Set app permissions to use location, microphone, contacts, storage, call logs, and more.
- **Data usage control:** Set apps' access to mobile data and Wi-Fi networks.
- **Emergency alerts:** You can enable/disable **Allow alerts**.

If enabled, you can choose to receive Amber alerts, extreme threats, severe threats and more.

You can set **alert preferences**.

- **Special app access:** You can set special app access such as Battery optimization, Device admin apps and Display over other apps.

Sound

Go to **Settings > Sound** to change the sound settings on your device.

Volume

- **Ring Volume:** Adjust the slider to set the ringtone volume for phone calls and notifications.
- **Media Volume:** Adjust the slider to set the volume for playing music, video and more.
- **Alarm Volume:** Adjust the slider to set the ringtone volume for alarms.

Do Not Disturb

Settings

When Do Not Disturb mode is turned on, your phone will not show new or existing notifications or make a sound or vibrate. Notifications will not appear when you swipe down from the top of your screen.

Note that critical notifications for phone activity and status will still appear.

- **Behavior:** Set notifications:
 - **No sound from notifications:** You will see notifications on your screen.
 - **No visuals or sound from notifications:** You will not see or hear notifications.
 - **Custom:** You can customize the settings.
- **Exceptions:** Choose special settings for calls,

messages, events & reminders and other sounds.

- **Schedule:** Set **Do not disturb** duration or set the time to automatically turn on and off.

Dolby Atmos

Dolby Atmos lets you choose different scenario-based enhancements, such as dynamic, movie, and music, and make custom adjustments for earphones.

Earphone mode

You can set preferences for connecting wired headsets and Bluetooth headsets such as automatic resume music playback, and

Settings

automatic call answering.

Ringtone

- **Phone ringtone:** Set the ringtone for incoming phone calls.
- **SMS ringtone:** Set the ringtone for text message (SMS) notifications.
- **Default notification sound:** Set the ringtone for other notifications.

Vibration

Set the vibration rhythm and intensity for calls, notifications and touch.

System

Enable or disable sound for touch tone, dial pad, screen lock and screenshot.

Buttons & gestures

Alert slider

The alert slider is located on the right side of the OnePlus 7 Pro. You can switch between 3 different modes: **Silent**, **Vibration** and **Ring**. Go to **Settings > Buttons & gesture > Alert slider** for custom settings.

- **Silent:** Calls and notifications are silent, except for alarms.
- **Vibration:** Calls and notifications are silent and set to vibrate only, except for alarms.

Settings

- **Ring:** Calls and notifications will ring.

Navigation bar & gestures

OnePlus 7 Pro supports three types of navigation bar & gestures. Go to **Settings > Buttons & gestures > Navigation bar & gestures**, choose navigation bar.

Back, Home, Recent

If enabled, the virtual "Back, Home, Recent" buttons are displayed at the bottom of the phone. Tap **Navigation bar customization** for custom settings.



- **Swap buttons:** Enable this to swap the

position of the Recent and back buttons.

- **Hide the navigation bar:** Enable this to add a button to hide or show the navigation bar.
- **Double tap action & Long press action:** Set **Double tap action or Long press action** on "Home, Recent, Back". Supports No action, Open/close Menu, Turn off screen, Open Shelf, Open/Close and more.

Back, Home

Enable this to display the virtual "Back and Home" buttons on the bottom of the screen. Tap **Navigation bar customization** for custom settings.



Settings

- **Swap buttons:** Enable this to swap the position (right or left side) of the back buttons.
- **Double tap action & Long press action:** Set **Double tap action or Long press action** on **HOME, Back**. Supports No action, Open/close Menu, Turn off screen, Open Shelf, Open/Close and more.

Navigation gestures

The virtual "Back, Home and Recent" buttons will be hidden.

- Swipe up from the bottom center of the screen to return to the desktop.
- Swipe up from the bottom center of the screen and then hold for one second to enter

multitasking/app switching mode.

- Swipe up from the left or right bottom of the screen to go back to the last page.
 - * Whether the device is used in landscape or portrait mode, the navigation gesture is always triggered from the bottom of the device.

Quick gestures

You can do the following actions quickly: **Flip to mute, Three-finger screenshot** and more, by using **Quick gestures**. Go to **Settings > Buttons & gestures > Quick gestures** to set your preferences.

System gestures

- **Flip to mute:** Enable this to flip the phone to mute when there is an incoming call.
- **Three-finger screenshot:** Enable this to take a screenshot by swiping down with three fingers.
- **Answer calls by gesture:** Enable this to answer calls by raising the phone to your ear when there is an incoming call.

Screen off gestures

Double tap to wake: Enable this to tap the screen twice to wake up the device.

Music control: Enable this to draw II with two

fingers to play or pause music, draw < or > for previous or next track.

Draw O / Draw V / Draw S / Draw M / Draw W /: These can be set as None, open camera, open front camera, record a video, turn on/off flashlight, open shelf and open apps that you select.

Quick turn on camera

Enable this to press the power button twice to quickly turn on the camera.

Quick activate the assistant app

Enable this to hold the power button for 0.5s to activate the assistant app, and 3s to power off.

Battery

Go to **Settings** > **Battery** to view battery details and set battery preferences.

View detailed usage: View battery usage details since full charge and the list of which processes use the most battery.

Battery Saver: Enable this to extend battery life. Battery saver will turn off some device features and restrict apps.

You can choose to manually turn it on or select **Turn on automatically** when the remaining battery is lower than the set value.

Battery optimization: Optimize battery life by controlling the background behavior of apps,

Tap **Battery optimization**, choose the apps to optimize, and select **Optimize**.

Adaptive Battery: Enabling this extends battery life by limiting battery for infrequently used apps. Your phone will learn how you use apps over time.

- Notifications may be delayed for these apps

Storage

Go to **Settings** > **Storage** to view storage details. You can free up storage space and view the amount of storage space occupied by various types of files.

- **Free up space:** Your phone will scan **Downloads & infrequently** used apps.

Settings

Select the content you want to delete and tap **FREE UP** to release the phone space.

- **Storage manager:** To help free up storage space, Storage manager removes backed up photos and videos from your device.

Security & lock screen

Security status

Google Play Protect

Google Play Protect regularly checks your apps and device for harmful behavior. You will be notified if any security risks are found.

- **Scan device for security threats:** Enable this

for Google to regularly check your device and prevent or warn you about potential risks.

- **Improve harmful app detection:** Enable this to send unknown apps to Google for better detection.

Find My Device

Find My Device helps you locate your device remotely and keeps your data safe if the device is lost.

Ways to locate your Android device

- Find My Device: Get it on Google Play.
- Web: Visit android.com/find.
- Google: Search "find my device".

Device security

Screen lock

Set the screen lock:

- **None:** Turn on the screen and enter the home screen.
- **Swipe:** Swipe up on screen to unlock.
- **Pattern:** Set a sliding pattern of more than four points to unlock.
- **PIN:** Set a 4-16 digits PIN to unlock.
- **Password:** Set a password of more than 4 characters to unlock.

Lock screen preferences

Set lock screen preferences.

- **On lock screen:** You can choose **Show all notification content**, **hide sensitive content** and **Don't show notifications at all**.
- **Add users from lock screen:** Enable this to add new users in lock screen state. (**Instructions:** Pull down the notification panel in the lock screen and tap  to add user.)

Lock screen message: Enter text content and save it for display on the lock screen.

- **Show lockdown option:** Enable to display the power button option that turns off Smart

Settings

Lock, fingerprint unlocking, and notifications on the lock screen.

Fingerprint

You can add/delete fingerprints and set fingerprint preferences through **Fingerprint**.

- **Add fingerprint:** Follow the on-screen prompts to add your fingerprint.
 - Add your fingerprint again after replacing the protective film.
 - Add only one fingerprint information at a time.
 - Press firmly on the phone screen to ensure

your fingerprint data is fully added.

- **Fingerprint animation effect:** Set animation effect. You can select one of the four from below:
 - Cosmos
 - Ripple
 - Stripe
 - None
- **Pick up your phone to show:** Enable this to show the fingerprint icon in ambient display when you pick up your phone.
- **Tap the screen to show:** Enable this to show the fingerprint icon in ambient display when

Settings

you tap your phone screen once.

*In addition to unlocking your phone, you can use your fingerprint to authorize purchases and access apps.

Face Unlock

You can add/delete face unlock and set face unlock preferences through **Face unlock**.

- **Add face data:** Follow the on-screen prompts to add your face data.

*Do so in a bright environment and ensure that you are facing your phone for the best results.

- **Face Unlock:** Enable this to use face unlock

to unlock your phone from the lock screen.

- **Swipe up to unlock:** This is the default way to unlock your phone with your face. Enable this to use face unlock when swiping up on the phone screen.
- **Auto unlock once the screen is on:** Enable this to unlock your phone with your face as soon as the screen turns on without swiping first.

Privacy

Location

- **Use location:** Enable this to allow apps to use location information.

Settings

- **Recent locations requests:** This shows recently requested location information.
- **App-level permissions:** Set permissions for apps to use location service.

*Location may use sources like GPS, Wi-Fi, mobile networks, and sensors to help estimate your device's location. Google may collect anonymized location data to improve location accuracy and location-based services.
- **Emergency information:** Add your emergency info.
- **Send SOS messages automatically:** Enable this to automatically send SOS messages to all emergency contacts after an emergency call.
- **Power button:** Emergency call trigger: There are three options:
 - Disable.
 - Quickly press the power button 3 times.
 - Quickly press the power button 5 times.

Show passwords

Enable this to display characters as you type and briefly convert them to an encrypted asterisk "*".

Emergency rescue

Device admin apps

- Find My Device: Enable to find your device or

Settings

to lock or erase data from a lost device.

- Google Pay: As a device administrator, Google Pay can help to make your phone more secure.

SIM card lock

Lock SIM card: Enable this to require your PIN to use the phone.

Accounts

- Google Account: Log in to your Google account, view Google account information, set synchronization items, and remove accounts.
- OnePlus Account: Log in to your OnePlus

Account, manage account information, and log out of your account (Tap the menu button in the top right corner and select **Exit Account**).

- Add account: You can add email accounts, Google accounts, and more.
- Automatically sync data: Enable this for apps to refresh data automatically. Turning off this option saves power, but you need to manually sync each account to get the latest updates and you will not receive notification of updates.

Utilities

- **Game mode:** Turn on game mode to

Settings

optimize your gaming experience. Refer to "[Gaming mode](#)" for more information.

- **Quick launch:** Enable this so that a long press on the fingerprint identification area launches quick pay or activates apps when the phone is locked.

Shortcuts settings: Add or delete shortcuts.

Introduction: Use quick launch

1. Continue to hold your finger after unlocking to open the quick launch panel.
 2. Swipe to select the shortcut and release your finger to launch it.
- **Parallel Apps:** Create multiple accounts for the same social media apps. Refer to "[Parallel](#)

[Apps](#)" for more information.

- **App locker:** You can add the apps that you want to lock with a password.

Hide notification contents: Enable this to hide notifications for apps locked by app locker.

- **Scheduled power on/off:** Set the time for power on/off.

- **Pocket mode:** Enable this to prevent accidental screen touches or fingerprint operations when the phone is in your pocket.

- **OnePlus Switch:** Quickly migrate data with OnePlus Switch. Refer to "[Transfer data to OnePlus 7 Pro](#)" for more information.

- **Quick reply in landscape**

You can quickly reply when you receive a message from WhatsApp or other landscape apps.

System

Accessibility

Refer to "[Accessibility](#)" for more information.

Language & input

Set your system language and input method.

- **Languages:** Set your system language.
 - Tap **Add a language** to add language.

- Press and drag the selected language to the top of the list to set the language to the system language.

- **Virtual keyboard:** Select the default input method and set the preferences for the input method.
- **Spell checker:** Enable this to automatically check spellings when you type.
- **Autofill service:** Enable this to automatically fill in saved data when you browse the web or enter your account password or in other scenarios. This function will require additional apps to be installed.

Date & time

Settings

Set system date and time.

- **Automatic date & time:** Enable this to use the network provider's set time as the system time.
- **Set date:** Set the system date manually.
- **Set time:** Set the system time manually.
- **Automatic time zone:** Enable this to use the network providers time zone.
- **Select time zone:** Set the system time zone manually.
- **Use 24-hour format:** Enable this for the system time to be in the 24-hour format or disable it to use the 12-hour format.

Reset options

In Reset options, you can reset settings, reset app preferences, and erase all data (factory reset).

- **Reset Wi-Fi, mobile & Bluetooth:** You can reset all network settings, including Wi-Fi, mobile data and Bluetooth.
- **Reset app preferences:**

This will reset all preferences for:

- **Disabled apps.**
- **Disabled app notifications.**
- **Default applications for actions.**

Settings

- **Background data restrictions for apps.**
- **Any permission restrictions.**

You will not lose any app data.

- **Erase all data (factory reset):** Refer to "[Factory reset](#)" for more information.

OTG storage

Transfer data via OTG. Automatically turns after 10 minutes of inactivity.

Recent app management

Set the type for clearing background tasks.

- **Normal clear:** Clear the task list and cache without clearing background processes.

- **Deep clear:** Clear background processes. Some apps may stop working and you may not receive notifications.

Multiple users

- **Add users from lock screen:** Add users from the lock screen.
- **Emergency information:** Add emergency info and contacts.
- **You (Owner):** Display the currently logged in user. Tap to change username (username defaults to the phone owner).
- **Guest:** Tap to switch to guest mode, and limit calls and some features. You can enable/disable the **Turn on phone calls by**

Settings

tapping the settings icon to the right of the **guest**.

- **Add user:** Share the device with other people by creating additional users.

RAM Boost

By learning how you use your phone, RAM Boost predicts the apps you want to launch and data to load, optimizing RAM capacity for faster performance.

System updates

Update system using OTA. Refer to "[System updates](#)" for details.

About phone

View basic phone information, system version, and more in the **About phone** option.

- Device name: Tap to edit the device name.
- Regulatory labels: Tap to view the verification information.
- Android version: This shows the android version.
- Build number: This shows the software version of the phone.
- Model: This shows the phone model.
- Legal information: Tap to view the privacy policy, agreements, etc.

Settings

- Status: Tap to view the phone number, signal, etc.
- Award: Tap to view Oxygen OS Contributors.

Apps

Learn about the apps on your
OnePlus device.

Phone

Dialing

- Method 1: Tap Keypad (dial pad), enter the contact number, and press the call button to dial the number.
- Method 2: Search for numbers in contacts, call records or your address book, and tap the number to dial it.
- Answer or refuse incoming calls: Slide up to accept a call and down to reject it.
- Incoming call during normal use: The green button is accept call and red is reject call.

Call screen

After accepting a call, the interface functions are as follows:

- **Speaker:** Enables loud speaker mode during call.
- **Keypad:** Opens the dial pad.
- **Mute:** Mutes the microphone.
- **Add call:** Adds multiple calls.
- **Hold:** Allows you to answer a new call by putting the current call on hold and then resume the current call when the new call ends.
- **Record:** Allows you to record a call.

Contacts

Apps

Contacts has following functions: Edit, delete, search, input/output, manage and backup contacts and blacklist.

Add a contact

1. Enter Contacts
2. Tap 
3. Enter contact information
4. Tap  to save it

Search contacts

- Method 1: Enter contact number/name on the dial pad.
- Method 2: Tap  and then search for a

Contact by name

- Method 3: Switch to the contacts list and tap or scroll through the letters on the right side for quick search.

Manage contacts

Enter Contacts, tap the menu button in the upper right corner, and then choose Settings.

- **Suggested merges:** The system will automatically identify similar contacts, tap merge and select reserved contacts to complete the merge.
- **Blocked numbers:**
You will not receive calls and messages from

Apps

blacklisted contacts.

- Block contact: Tap  and then enter phone number to add to the blacklist.
- Unblock: Tap  to unblock a phone number.

Spam: Browse the message/calling records in the blacklist.

Import/export contacts: You can import a VCF file exported from another device into this device, or export your device's contact into a VCF format.

File Manager

In File Manager you can quickly access and

manage a variety of files.

Enter the application drawer and open the File Manager application.

CATEGORIES: Check files by file category, including Documents, Downloads, Recent, Images, Videos, Audio and so on.

STORAGE: View and manage folders and documents stored on your phone.

FileDash: Fast and free to share files with nearby devices.

More operations:

Search file: Tap  and then enter key words to find your files.

Lockbox: Long press the file, tap the menu button in the upper right corner, then choose Move to Lockbox. You can assign a password or fingerprint to files in Lockbox.

Messages

Send, receive, and view Messages through the Messages app.

Send message

1. Open the Messages application.
2. Tap the floating button in the lower right corner.
3. Select recipient.

4. Enter SMS content.
5. Tap the send icon in the lower right corner to send a message.

View and reply message

Messages are sorted by time.

1. Open the Messages app.
2. Select the message you want to view from the list.
3. If you want to reply to a message, enter the message in the text box at the bottom of the screen, and then tap the send icon on the right to send it.

Message settings

Message settings include report delivery, auto-retrieve MMS while roaming, and set SMS center number. To set SMS preferences, tap the menu button on the upper right corner and select **Settings**.

Blacklist/interception

- **View the interception record:** Tap the menu button in the upper right corner of the main message interface and select **Spam** to view blocked records.
- **Add blacklist:** Tap the menu button in the upper right corner of the message

conversation screen and select **Block number**.

Weather

Provides the weather forecast and early warning function.

- **Check the weather: Open the app drawer and open the Weather app**

Provides information on weather, temperature, the last six days of weather, the last 24 hours of weather, air quality, wind direction, body temperature, humidity, visibility, pressure and more.

- **Add city:** Tap  , tap the "+" button, enter the city name to search, and select the city to

Apps

add.

- **Switch city:** Swipe left and right to switch between cities.

- **Settings**

Tap the menu button in the upper right corner and select **Settings**.

- **Temperature:** Select the temperature unit – Celsius or Fahrenheit.
- **Wind:** Select the wind unit, like Meters per second – m/s, Kilometers per hour – km/h.
- **Precipitation:** Millimeters – mm/ Inches/ Inches – in.
- **Visibility:** Select units of visibility,

Kilometers – km/ Mile – mi, Millimeters of mercury – mm/Hg, Inches of mercury – in/Hg.

- **Pressure:** Choose the unit of pressure, Hectopascals – hPa.

Weather alert: Enable this to receive weather notifications.

Calculator

Calculator provides common calculator functions.

Enter the application drawer and open the Calculator app.

- **Simple calculator:** Simple addition,

Apps

subtraction, multiplication and division can be performed.

- **Scientific calculator:** Slide the black bar to the left or rotate to landscape mode to switch to the scientific calculator.
- **View history:** Slide the top half blank area down to view the history, and tap the CLEAR button in the upper right corner to CLEAR it.

Recorder

Recorder provides recording and viewing functions.

Enter the application drawer and open the Recorder app.

● Record:

- **Start recording:** Tap  start recording.
- **Pause the recording:** Tap  to pause a recording.
- **Insert tags:** Tap  to insert tags.

Set the recording format: You can set the recording format (aac / wav) by selecting the settings in the upper right corner of the main interface.

● Recording playback and management:

Swipe left to enter the recording file list.

- **Play recording:** Tap the recording to play.
- **Delete recording:** Long press the

recording that needs to be deleted and tap the delete button.

Notes App

Sticky notes let you to take quick notes and edit text and pictures.

 
- **Add note:** Tap  to add a note. Supports text, album pictures, photos, lists, to-do items. Allows to delete notes, set reminders, etc.
- **Search notes:** Tap  and enter the keywords to search.
- **Delete a note:** Long press the note that you want to delete and tap the "delete" button.
- **Share a note:** Open the note you want to share, tap the menu button in the upper right corner, select the sharing method, and then press the page prompt to complete the sharing.
- **Add reminders to your notes:** Open the note and tap the "alarm" icon in the top bar to set the date and time for the reminder.

Camera

The OnePlus 7 Pro camera offers powerful photo and video capabilities, including portrait mode, pro mode, slow-motion video, panoramic mode, and more.

PHOTO

According to the number shown in the figure, the main interface functions of the camera are as follows:

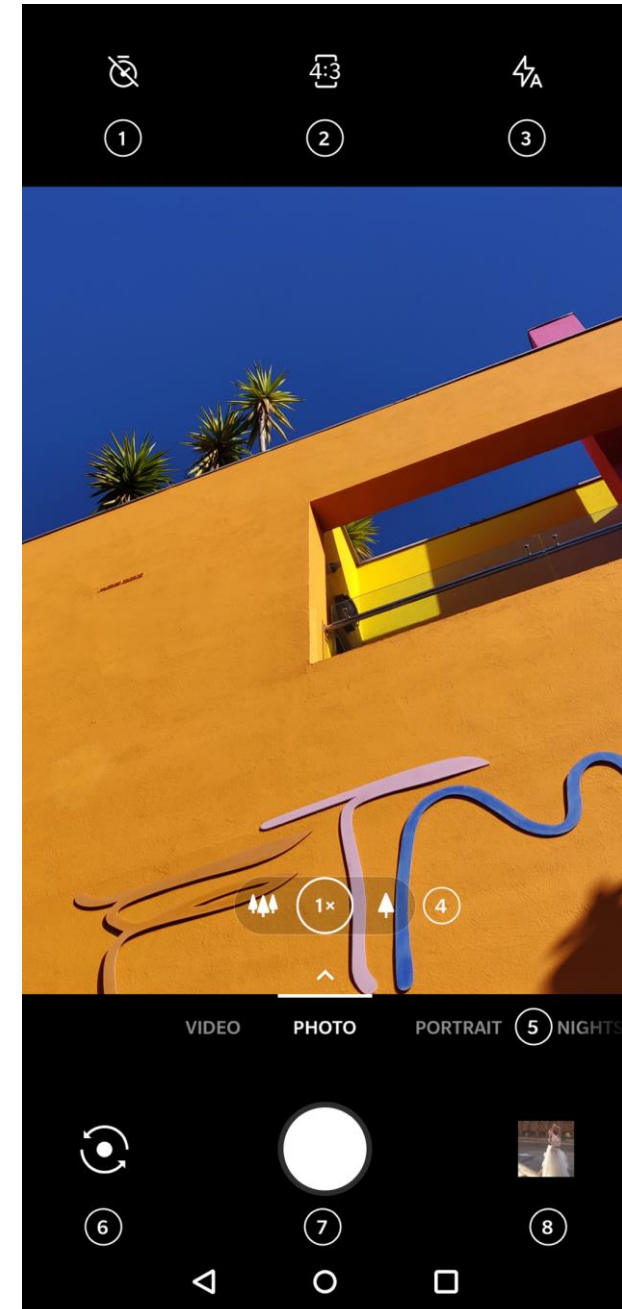


Apps

1. Timer: Set timer (optional: 3S, 5S, 10S). Gallery.
2. Photo scale: Tap to switch the photo aspect ratio.
3. Flash: Tap on/off/auto flash.
4. Zoom: Tap or drag the icon to zoom.
5. Common modes: Display common modes, swipe left or right or tap to switch modes.
6. Switch camera: Tap to switch the front/rear camera.
7. Photo button: Single tap to take a photo and long press to take multiple photos (burst mode).
8. Gallery: Tap to view the latest photos in

VIDEO

Go to the camera app and tap **VIDEO**. The video interface features are as follows:

 1. Video resolution: 1080P 30FPS, 1080P 60FPS, 4K 30FPS, 4K 60FPS are available.
2. Flash: Tap the flash on/off.
3. Zoom: Tap or drag the icon to zoom.
4. Switch camera: Tap to switch the front/rear camera.
5. Video: Tap to start/end video.
6. Gallery: Tap to view the latest photo in Gallery.

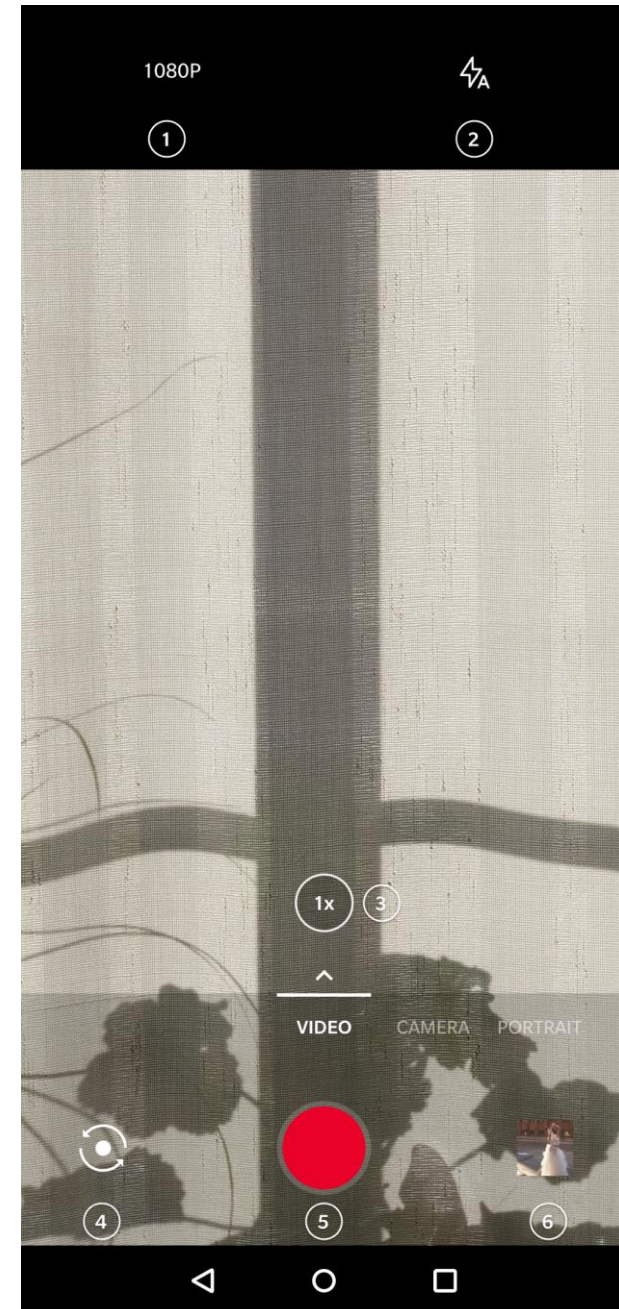

Model selection

Slide up to enter the camera mode selection interface.

- **Video:** Video shooting function.
- **Photo:** Simple photo taking function.
- **Portrait:** Portrait (depth effect) photo function. The professional portrait lighting effect makes portrait photos easy.
- **Nightscape:** Suitable for shooting city night scenes.
- **Pro Mode:** Photo mode with more professional settings.
- **Time-lapse:** Records videos at a high frame

rate. When played, the video appears to be moving faster.

- **Panorama:** Allows you to take images with a wide aspect ratio.
- **Slow motion:** Records videos at a high frame rate, which can be played in slow motion.

Gallery

All images and videos are saved by default in the Gallery app, which includes albums, recently deleted photos, and photo editing functions.

- **Photos:** Photos and videos are displayed in a timeline list view.
- **Collections:** This includes commonly used

Apps

albums, recently deleted albums and other albums. Tap albums to view specific lists and photos.

- **Places:** Locations are classified by image location information, showing photos/videos taken in different locations.

Clock

Includes alarm clock, world clock, timer, and stopwatch.

Alarm

- **Add alarm clock:** Tap the "+" button below to add and set a new alarm.
- **Alarm clock time:** Drag the blue dot in the

dial to set the hours. Drag it again to set the minutes. Tap AM/PM to select the time period.

- Tap the keyboard icon on the middle right to switch to the numeric keyboard to input the time.
- Repeat: You can choose Monday to Sunday. Select the calendar icon on the right to enter the calendar for custom selection.
- Alarm Ringtone: Select the alarm clock ringtone from system ringtones or local storage, or disable the ringtone.
- Vibrate: When the alarm clock rings, the phone will vibrate at the same time.

Apps

- **Label:** An alarm note will be displayed on the screen when it rings.
- **Delete alarm:** Tap the alarm you want to delete and select **DELETE** at the bottom of the screen.

World time clock

- **Add region:** Tap the earth icon at the bottom of the screen to check and select the cities from the list.
- **Comparison time:** Drag the dot on the dial to see the time of the city you added.

Countdown timer

- **Add countdown:** After entering the minutes

and seconds, press the start button to start the countdown.

After starting a countdown, you can select the button in the lower right corner to add another countdown.

- **Delete countdown:** Tap  to delete a specific countdown time.
- **Pause:** Tap  to pause a countdown.

Stopwatch

Start: Tap  to start the timer.

Pause: Tap  to pause the timer.

Mark: Tap  to mark.

OnePlus Switch

"OnePlus Switch" allows you to quickly migrate contacts, call logs, text messages, pictures, audio, video, notes, apps, downloads, documents, and other data from your previous phone to your new phone. OnePlus Switch also provides local backup and recovery.

Use OnePlus Switch to migrate your data

Use OnePlus Switch to quickly migrate data from an older phone to your new OnePlus phone.

Refer to "Transfer data to OnePlus 7 Pro" for

more details.

Use OnePlus Switch for local data backup and recovery

Use the "backup and restore" function to create a backup for subsequent recovery. You can also copy the backup to the computer and transfer it to another phone for recovery.

● Back up data

1. Open the OnePlus Switch app
2. Select **Backup and Restore > New Backup**
3. Select the data that you want to back up
4. Tap **BACKUP NOW** to start backup

Apps

● Recovery data

1. Open the OnePlus Switch app.
2. Select **Backup and Restore** > **Restore Backup**.
3. Select the data to be restored.
4. Tap **RESTORE NOW** and wait until the recovery process completes.

T-Mobile Apps

T-Mobile apps are built into the system. Visit t-mobile.com for more information.

T-Mobile

Get online access to account information such

as your current activity, billing information, service plans, downloads, and more.

Visual Voicemail

Visual Voicemail allows users to view, listen and save all voicemails in any order on your phone without having to call the voicemail system.

T-Mobile Name ID

T-Mobile Name ID identifies callers and displays the caller's name, city and state even if the caller is not in your contacts list. This is an optional add-on feature that can be purchased directly from your phone for an additional monthly charge.

Unlock

Apps

Your device is network-locked. Use Unlock to inquire about your device's unlock eligibility.

Google Apps

Enjoy applications powered by Google. Visit google.com to learn more.

Google

Find online content with tools that learn what you are interested in. Turn on your personalized feed to receive customized content.

Chrome

Browse the Internet with Chrome and bring your open tabs, bookmarks, and address bar data

from your computer to your mobile device.

Gmail

Send and receive email with Google's web-based email service.

Maps

Get directions and other location-based information. You must enable location services to use Google Maps.

YouTube

Watch and upload videos right from your device.

Drive

Apps

Open, view, and share files saved to your Google Drive cloud account.

Duo

A video calling app that allows you to connect with the people who matters most.

Play Music

Play music and audio files on your device.

Play Movies & TV

Watch movies and TV shows purchased from Google Play. You can also view videos saved on your device.

Photos

Store and back up your photos and videos automatically to your Google Account with Google Photos.

Advanced

Learn about advanced tips for your phone

Gaming mode

OxygenOS provides "Gaming mode" to stop you from being disturbed when you are gaming. You can configure this in **Settings > Utilities > Gaming mode**.

- 1. Answer calls via speaker:** Automatically switch any incoming call during a game to the background and enable hands-free mode.
- 2. How to show notifications:** Select the notification display mode when game mode is on. There are three modes: Heads up, Text only and Block.
- 3. Notifications for 3rd party calls:** The voice or video calls from social media apps will show

as notifications.

- 4. Disable automatic brightness:** Temporarily turn off auto brightness function off in game mode.
- 5. Gaming display enhancement:** Enhance the details of light and dark parts of the game screen
- 6. E-sports Mode:** In game mode, this is automatically enabled when a game is started and disabled after you quit a game.

Do Not Disturb

When you do not want to be disturbed by a message, enable Don Not Disturb mode. The phone will not ring or vibrate when it receives a

Advanced

notification, except for alarms and settings.

Scroll to the notification bar and tap to enable the "Do not disturb" function.

See [Do Not Disturb](#) for settings.

Cast

Before using the Miracast function, ensure that your TV, projector, screen and other display devices are compatible with the Miracast function, and that the function of the device is turned on.

Instructions:

1. Go to **Settings > Bluetooth & device connection > Connection preferences >**

Cast

2. Tap the menu button in the upper right corner and select **Enable wireless display**
3. Select the device that needs to be projected and wait for the phone screen to be projected onto the display device

Scheduled power on/off

For the convenience of users, the time switch on/off function is built in. You can go to **Settings > Utilities > Scheduled power on/off**. to set this function

Recent app management

Go to **Settings > System > Recent app**

management. There are two ways to clear background tasks.

- **Normal clear:** Clear task list and cache without clearing background processes.
- **Deep clear:** Clear background processes, some apps may stop working and you may not receive notifications.

Screen pinning

When screen pinning is enabled, you will not be able to switch to the main desktop or open the notification panel and enter the multi-task management interface.

- **Enable screen pinning:** Go to **Settings > Security & lock screen > Screen pinning.**

Tap switch to enable this function.

- **Use the screen pinning:** You can use this feature to fix the current screen until it is cancelled.
- To use this function:
 1. Make sure screen pinning is turned on.
 2. Open overview.
 3. Tap the app icon at the top of the screen then tap pin.
- **Cancel screen pinning:** If you turn on screen pinning and select **Ask for unlock pattern before unpinning**, you will be asked to input an unlock pattern to cancel screen pinning.

Parallel Apps

Create a new copy for the application to login to different accounts.

Go to **Setting > Utilities > Parallel Apps**. The list will show you the applications that supports the Parallel apps. Tap the application to open Parallel apps.

Picture-in-picture

You can go to **Settings > application & notify > special app access > picture-in-picture**. When you open the specified application in picture-in-picture mode, the app will create a picture-in-picture window when you open or leave the

application (such as continue to watch video), which displays on top of the other apps you are currently using.

* This function needs to be supported by the application itself.

FileDash

This feature supports file transfers between phones without a network, which you can use

to transfer files to another OnePlus phone or other phone. Tap the bottom tab "FileDash" in the File Manager, select the file to send, and then wait for another mobile phone to connect.

1. If the receiving side is also a OnePlus phone, let the receiver select **RECEIVE** from FileDash,

Advanced

and then follow the instructions.

Space by tapping the + sign in the top right.

2. If the receiver is not a OnePlus phone, you can find the Wi-Fi hotspot that has been created automatically by your phone. Then enter the URL provided by the OnePlus device in the browser to display the file in the browser. You only need to save or download it. You can also scan the QR code in the OnePlus phone to connect and begin the file transfer.

Hidden Space

From the app drawer, swipe right from the left edge of the screen to enter the Hidden Space in the application drawer interface. You can hide the apps displayed on the desktop in the Hidden

Reboot, Update, Backup, Recovery

Learn to upgrade and reset your
OnePlus device

Reboot or force reboot

Most issues can be resolved by rebooting your device in the following two ways:

1. When powered on, long press the power button to restart the device, and then tap to reboot the device.
2. When powered on, long press the power button and volume button for 10 seconds, the phone will shut down, and then press the power button to turn on the device again.

System updates

Your OnePlus devices provides two update modes: OTA and Local.

OTA upgrade

1. Enter **Settings > System > System updates**. Tap **CHECK FOR UPDATES**.
2. Follow the screen prompts to download and update.

* If your device is up to date, you will not see a notification.

Local update

1. Access the [OnePlus support page](#) to download the required update package and save it in the phone root directory.
2. Open **Settings > System > System updates**, tap the settings button in the upper right

corner and select **Local update**.

3. Tap the installation package in the list to upgrade.
4. Restart the phone to complete the update.

Backup and Restore

Create a backup or recovery when needed.

Backup and restore by OnePlus Switch

Refer to "[OnePlus Switch](#)" for more information.

Use Google drive for backup and recovery

Create backup

1. Access **Settings** > **Accounts**, login **Google account** and enable **Account sync**.
2. Wait for the system to complete synchronization automatically.
3. Use the Wi-Fi network to back up your device as the data size may be too large to back up using mobile data.

Restore Backup

After a factory reset or when you switch to a new device, log in to your Google account on the device and enable Account sync to restore the data on the phone.

Factory reset

Note:

1. Restoring factory settings will wipe all app data, contacts, text messages, and so on. Backup important data before a factory reset.
2. If "Erase internal storage" is enabled, ensure that all important files, such as photos and documents in the phone and local backup, have first been copied to another device.

Operating guidelines:

1. **Settings > System > Reset option > Erase all data** (factory reset)
2. Tap **RESET PHONE**

3. Enter passcode.
4. Wait till the factory reset is complete.

Accessibility

Learn about Special features that make using the device easier for people with physical disabilities.

Magnify with triple-tap

Go to **Settings > System > Accessibility > Magnify with triple-tap**. Once enabled, use one finger to quickly tap three times on the screen to zoom in.

- Drag with two or more fingers to scroll.
- Fold inward or open outward with two or more fingers to adjust the zoom level.
- Quickly tap three more times to exit zoom.

To zoom in temporarily, quickly tap on the screen three times and hold your finger on the last tap.

- Drag your finger to move around the screen.

- Loosen the fingers and return to the original position.

Note:

You can't use zoom function on the keyboard or navigation bar.

Power button ends call

Go to **Settings > System > Accessibility** and then enable "Power button ends call".

Color inversion

Go to **Settings > System > Accessibility** to invert the display colors.

Color correction

Accessibility

- **Deuteranomaly:** red-green
- **Protanomaly:** red-green
- **Tritanomaly:** blue-yellow

High contrast text

Go to **Settings > System > Accessibility > High contrast text**. Enable this function to increase the contrast with background.

Safety information

View Safety information for your device.

Legal Notice

Declaration

Without prior written permission of OnePlus, reproduction, transfer, distribution or storage of the contents in this document in any form is prohibited. OnePlus operates a policy of ongoing development. Thus, OnePlus reserves the right to make changes or improvements to any of the products described in this document without prior notice. The contents of this document are all provided “as is”. Except as required by applicable law, no warranties of any kind, either express or implied, are made in relation to the accuracy of this document. To the

maximum extent permitted by applicable law, under no circumstances shall OnePlus or any of its licensors be responsible for any loss of data or incur any special, incidental, consequential, or indirect damages caused.

Availability of product supplies, application software, and accessories may vary. For detailed information, please refer to an authorized OnePlus distributor. This device may contain commodities, technology, or software subject to export laws and regulations. Diversion contrary to law is prohibited.

Trademarks and Permissions

OnePlus and  are trademarks or registered

Safety information

trademarks of OnePlus Technology (Shenzhen) Co., Ltd. All rights reserved. Android™ is a trademark of Google Inc. LTE is a trade mark of ETSI. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.



The N-Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.

Other trademarks, product, service and company names mentioned may be the property of their respective owners.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Atmos, and the double-D symbol are trademarks of Dolby Laboratories.

Privacy Policy

OnePlus is constantly striving to protect your personal information. To better understand how we protect your personal information, you can read our "Privacy Policy" in the Setup Wizard when you turn on your phone for the first time. You can also check our "Privacy Policy" by following the steps: Settings > About Phone > Legal Information > Privacy Policy.

Safety

Please read all the safety and health information carefully before using your device to ensure its safe and proper operation.

General Safety Information

Failure to follow these guidelines may cause harm to your device, property, yourself, or others.

- Do not switch on the device where prohibited or when it may cause interference or danger.
- Do not use device at gas stations, service stations, or near fuel or chemicals.
- Please do not store or carry your mobile phone or accessories near liquid or flammable gas.
- Do not place the phone near magnetic cards or other magnetic objects, since information stored on floppy discs, memory cards and credit cards could be damaged by magnetic radiation.
- Do not place the battery, phone or charger in a microwave oven or other high voltage equipment. Otherwise, it may cause circuit damage, fires, or other damage.
- All wireless devices, including mobile phones, might be susceptible to interference, and it can also cause interference. Please check all laws and regulations when using your mobile phone, especially in airplanes, hospitals or medical institutions.
- Only use branded accessories and batteries that are approved by OnePlus. Accessories which are not approved by OnePlus may damage the phone or violate local regulations for radio devices. OnePlus will not take any

Safety information

responsibility for accidents or problems caused by using accessories that are not approved by OnePlus.

- The device is designed for water resistance under certain conditions, but OnePlus does not recommend excessive submersion. Liquid damage will void the warranty.
- When connecting with other devices, please follow the safety guidelines presented in this manual. Do not attempt to connect your device with incompatible products.
- Please do not use the phone if antenna is damaged. Otherwise, it could cause injury.
- Please keep metallic objects away from phone receiver. Small metallic objects may be attracted

to the device and personal injury or device damage could occur.

- Only connect to power sources with USB 2.0 or above.

Battery Safety

- Please do not attempt to repair, disassemble or modify the battery. Replacing battery by an incorrect type could lead to explosion. Your phone can only use OnePlus authorized batteries. Using third-party products may cause battery leakage, overheating or fires.
- Do not place or use battery near fires, heaters, direct sunlight, or other heat sources. Prolonged exposure to heat may cause battery leakage,

Safety information

explosions, or fires.

- Please do not place pressure on or pierce the battery with hard objects. Damaging the battery could cause battery leakage, overheating, or fires.
- If you experience any battery abnormalities, such as high temperature, discoloration, distortion, or leakage, immediately discontinue usage of the device and contact customer support.
- All batteries have a limited lifespan and will begin to lose capacity after several hundred charges/discharges.
- Do not dispose of the battery as household waste. Refer to local regulations.

Charging Safety

- The charger is intended for indoor use only.
- Do not charge the battery under the following conditions: in direct sunlight, in temperatures below 5°C; in areas with humidity, dust or strong vibrations; in areas near a TV, radio or other electrical appliances.
- The charger shall be installed near the equipment and shall be easily accessible.
- The maximum ambient charging temperature of the equipment declared by manufacturer is 35°C.
- Sockets that are dirty may cause poor contact with the charger and your phone may fail to

Safety information

charge properly.

- Please only use the official OnePlus charger. Using unauthorized chargers can be dangerous and can void your warranty.

- Make sure to only use outlets with the correct voltages (as label led on the charging brick). Using an incorrect voltage can damage your phone and/or battery and lead to injury.
- Do not use unsafe plugs or outlets.

- Do not use a short-circuit charger.

- Do not connect your device to a high-voltage power supply or the battery could become damaged.

- Do not disassemble or modify charger, as this

may lead to personal injury, electric shock or fire.

- Do not touch the charger, cable or power socket with wet hands, as this may cause electric shock.

- Do not place heavy objects on the power cord or attempt to modify any cables.

- Make sure to grasp the charger firmly while unplugging it.

- Do not pull the power cord as this may lead to damage and cause electric shock or fire.

- Before cleaning the device, unplug the power plug from the socket.

- Unplug the charger from electrical outlets and the device when not in use.

Driving Safety

- Safety should take priority when you are operating a vehicle. Be sure to obey related regulations in the area or country in which you drive.
- Do not place your phone or accessories near safety air bags.
- Compass and GPS information are only used for reference purposes.
- If you do not wish to disclose your location, be sure not to use applications that can record your location.

Health Information



- To prevent possible hearing damage, do not listen at high volume levels for long periods.
- Damage to the display or battery could lead to leakage of the liquid. If this liquid comes in contact with your eyes, skin or clothes, immediately rinse your eyes (do not rub) or wash skin with water thoroughly and seek medical attention.
- Some people may get dizzy or experience medical problems in response to flashing lights. If you are at risk, please consult your doctor before using this device. If you have the following symptoms: headache, dizziness, convulsion, eyes or muscle cramps, loss of

Safety information

consciousness, or involuntary body movements, please stop using the device immediately and seek medical attention. Avoid using the device for extended periods and keep proper distance from your eyes.

Laser Safety Statement

If this product employs a Laser system. To ensure proper use of this product, please read this owner's manual carefully and retain for future reference. Should the unit require maintenance, contact an authorized service center. Use of controls, adjustments, or the performance of procedures other than those specified herein may result in hazardous radiation exposure. To prevent direct exposure

to laser beam, do not try to open the enclosure or make direct contact with the laser.

CLASS 1 LASER PRODUCT

EU Regulatory Conformance

CE Statement

Hereby, OnePlus Technology (Shenzhen) Co., Ltd. declares that the radio equipment type Smart Phone is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity (DoC) is available at the following internet address
<https://www.oneplus.com/support/manuals>.

Safety information

Notice: Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU).

RF Exposure Information (SAR)

- The SAR limit of Europe is 2.0W/kg. The highest SAR value of this device complies with this limit. And please see the “Quick Start Guide” to find the highest SAR value.
- This device was tested for typical operation with the back of the handset kept 5mm from the body. To maintain compliance with RF exposure requirements, use accessories that maintain a 5mm separation distance between your body

and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with RF exposure requirements, and should be avoided.

- The SAR value of the device may depend on factors such as proximity to the network tower or use of accessories.
- Cases with metal parts may change the RF performance of the device, including its compliance with RF exposure guidelines, in a manner that has not been tested or certified, and use such accessories should be avoided.

Conforme`ment a` la re`glementation

Safety information

française, nous sommes obligés d'inclure les recommandations suivantes concernant les mesures de précaution : vous pouvez limiter votre exposition à l'énergie de radiofréquences

(a) en utilisant votre appareil mobile dans des zones de bonne couverture réseau, ou

(b) à l'aide d'un kit mains libres pour maintenir votre appareil mobile éloigné de votre visage et de votre corps. Dans ce dernier cas, il est conseillé aux femmes enceintes d'éloigner

leur appareil mobile de leur abdomen. Il est également recommandé aux adolescents d'éloigner leurs appareils mobiles du bas ventre.

Restrictions in 5GHz band

The device is restricted to indoor use only when operating in the 5150 to 5350 MHz frequency range in following countries:

	AT	BE	BG	HR	CY	CZ	DK
	EE	FI	FR	DE	EL	HU	IE
	IT	LV	LT	LU	MT	NL	PL
	PT	RO	SK	SI	ES	SE	UK

Frequency Bands and Power

Safety information

(a) Frequency bands in which the radio equipment operates:

Some bands may not be available in all countries or all areas. Please contact the local carrier for more details. (b) Maximum radio-frequency power transmitted in the frequency bands in which the radio equipment operates: The maximum power for all bands is less than the highest limit value specified in the related Harmonized Standard. please see the “Quick Start Guide” to find the frequency bands and transmitting power.

Correct Disposal of this Product



The crossed-out wheeled-bin symbol on your product, battery, literature or packaging indicates that the product and its electronic accessories should not be disposed of with other household waste. To safely recycle your device, please use return and collection system or contact the retailer where the device was originally purchased.

RoHS Compliance

This product complies with directive 2011/65/EU and its amendments, on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

FCC Regulatory Conformance

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference; and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this

equipment. Such modifications or changes could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful to part interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this

Safety information

equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution

- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- The antenna(s) used for this transmitter must not be collocated or operate in conjunction with any other antenna or transmitter.
- The country code selection is for non-US model only and is not available for all US models. Per FCC regulation, all Wi-Fi products marketed in US must be fixed to US operation channels only.

RF Exposure Information (SAR)

Safety information

- This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.
- The SAR limit set by the FCC is 1.6W/kg. The highest SAR value of this device type complies with this limit. And please see the “Quick Start Guide” to find the highest SAR value reported to FCC.
- Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.
- Although the SAR is determined at the highest

certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

- While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement.
- This device has also been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and positions

Safety information

the handset a minimum of 15mm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. Position the handset a minimum of 15mm from your body when the device is switched on.

- Choose the belt clips, holsters, or other similar body-worn accessories which do not contain metallic components to support the minimum distance of body-worn operation. Cases with metal parts may change the RF performance of the device, including its compliance with RF exposure guidelines, in a manner that has not been tested or certified, and use such accessories should be avoided.

Hearing Aid Compatibility (HAC) regulations for Mobile phones

- Your phone is compliant with the FCC Hearing Aid Compatibility requirements.
- The FCC has adopted HAC rules for digital wireless phones. These rules require certain phone to be tested and rated under the American National Standard Institute (ANSI) C63.19-2011 hearing aid compatibility standards.
- The ANSI standard for hearing aid compatibility contains two types of ratings.
- M-Ratings: Rating for less radio frequency

Safety information

interference to enable acoustic coupling with hearing aids.

- T-Ratings: Rating for inductive coupling with hearing aids in tele-coil mode.
- Not all phones have been rated, a phone is considered hearing aid compatible under FCC rules if it is rated M3 or M4 for acoustic coupling and T3 or T4 for inductive coupling. These ratings are given on a scale from one to four, where four is the most compatible. Your phone meets the M3/T3 level rating.
- However, hearing aid compatibility ratings don't guarantee that interference to your hearing aids won't happen. Results will vary, depending on the level of immunity of your

hearing device and the degree of your hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

- This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider

Safety information

or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

- Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. For more information about FCC

Hearing Aid Compatibility, please go to <http://www.fcc.gov/cgb/dro>.



Industry Canada Conformance

IC Statement

This device complies with Industry Canada's licence exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes (1) l'appareil ne doit pas produire de brouillage, et. (2) l'utilisateur de l'appareil doit accepter tout

Safety information

brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This device complies with the Canadian ICES-003 Class B specifications. CAN ICES-3(B)/NMB-3(B).

Cet appareil numérique de la Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Restrictions in 5GHz band

The device could automatically discontinue transmission in case of absence of information

to transmit, or operational failure. Note that this is not intended to prohibit transmission of control or signaling information or the use of repetitive codes where required by the technology. The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;

In addition, high-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650- 5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

-Les dispositifs fonctionnant dans la bande 5150-5250 MHz sont réservés uniquement pour

Safety information

une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux. -De plus, les utilisateurs devraient aussi être avisés que les utilisateurs de radars de haute puissance sont désignés utilisateurs principaux (c.-à-d., qu'ils ont la priorité) pour les bandes 5250-5350 MHz et 5650-5850 MHz et que ces radars pourraient causer du brouillage et/ou des dommages aux dispositifs LAN-EL)

RF Exposure Information (SAR)

The SAR limit set by the ISED is 1.6W/kg. The highest SAR value of this device type complies with this limit. And please see the "Quick Start Guide" to find the highest SAR value reported to

the IC.

This device has also been tested and meets the ISED RF exposure guidelines for use with an accessory that contains no metal and positions the handset a minimum of 15mm from the body.

Use of other accessories may not ensure compliance with ISED RF exposure guidelines. Position the handset a minimum of 15mm from your body when the device is switched on.

Déclaration d'exposition aux radiations:

Le produit est conforme aux limites d'exposition pour les

appareils portables RF pour les États-Unis et le

Safety information

Canada établies pour un environnement non contrôlé. Le produit est sûr pour un fonctionnement tel que décrit dans ce manuel.

La réduction aux expositions RF peut être augmentée si l'appareil peut être conservé aussi loin que possible du corps de l'utilisateur ou que le dispositif est réglé sur la puissance de sortie la plus faible si une telle fonction est disponible. Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé.

Cet équipement doit être installé et utilisé avec un minimum de 15mm de distance entre la source de rayonne

India Regulatory Conformance

E-waste Information

The products manufactured by OnePlus comply with the E-waste Rules 2016 and its amendments. Considering the exemption listed in SCHEDULE II of the E-waste Rules, the content of hazardous substances is as follows:

1. Lead (Pb) – not over 0.1% by weight;
2. Cadmium (Cd) – not over 0.01% by weight;

Safety information

3. Mercury (Hg) – not over 0.1% by weight;
4. Hexavalent chromium (Cr6+) – not over 0.1% by weight;
5. Polybrominated biphenyls (PBBs) – not over 0.1% by weight;
6. Polybrominated diphenyl ethers (PBDEs) – not over 0.1% by weight.



For the purpose of recycling and reducing the effect of the environment, the Electrical & Electronic Equipment should not be disposed of with other household waste, please separate these items from other types of waste and

recycle them to the authorized e-waste company. As a part of E-waste recycling initiative, OnePlus has partnered with an authorized E-waste company named AS Attero. You can contact AS Attero to recycle your E-waste product. For further information about the OnePlus E-waste partner named AS Attero, you can contact at Website:www.attero.in

Email:info@attero.in Phone:1800-103-6328

Languages & Input

You can choose your language according to the following steps:

Settings > System > Languages & input > Languages > Choose your preference language.

Safety information

Mobile phone supports all the below mentioned Indian Official Languages for readability test as per IS 16333(Part-3):2017

ASSAMESE, BANGLA, BODO, DOGRI, GUJARATI, HINDI, KANNADA, KASHMIRI, KONKANI, MAITHILI, MALAYALAM, MANIPURI (BENGALI), MANIPURI (MEETEI MAYEK), MARATHI, NEPALI, ODIA(ORIYA), PANJABI(PUNJABI), SANTHALI (OI CHIKI), SANTHALI (DEVANAGRI), SANSKRIT, SINDHI(DEVANAGARI), TAMIL, TELUGU, URDU, ENGLISH

This mobile supports inputting for below mentioned Indian Official Language as per IS 16333(Part-3):2017

HINDI, MARATHI, ENGLISH

Care and Maintenance

The following suggestions will help you maintain and prolong the life of your device.

- Only qualified and authorized personnel should make repairs to this product.
- Disabling features such as Bluetooth and Wi-Fi when not in use and dimming the screen can help you save energy and extend battery life.
- Clean your phone and charger with a soft, clean, dry cloth. If the screen comes into contact with liquid or dust, please clean it immediately. Do not use alcohol or irritating chemicals to clean the device.
- Touching the screen with a sharp object may

Safety information

cause the screen to be scratched.

- Please do not touch the connection port of the phone, as static electricity may harm components in the device.
- Ideal operating temperatures are 0°C to 35°C, Ideal storage temperatures are -20°C to +45 °C.
- Only operate your phone between 35% to 85% humidity.
- Do not place the phone on uneven or stable surfaces.
- Do not hit, press, shake or drop the phone to avoid damage and injury.
- Charger are not waterproof. Please do not use these devices in the bathroom, areas of high temperature, humidity or dust; please avoid rain.

- When the phone is transmitting data or saving information, do not remove the SIM card.
- Please keep the phone out of reach of children in order to prevent injuries or property damage.

OnePlus Device Warranty Information

OnePlus devices purchased on oneplus.com/authorized sales channels come with a limited warranty. The duration of this warranty is dependent on the original country or region of purchase and is only redeemable within the original country or region. Unless otherwise specified, this warranty covers the hardware components of the product as

Safety information

originally supplied and does not cover, or partially covers, software, consumable items, or accessories, even if packaged or sold together with the product. The limited warranty only covers functional defects of product caused by workmanship or build materials. For more details, please contact OnePlus Customer Support by visiting oneplus.com/support.

The limited warranty does not cover

1. Defects or damage resulting from accidents, neglect, misuse, or abnormal use; abnormal conditions or improper storage; exposure to liquid, moisture, dampness, sand or dirt; unusual physical, electrical or electromechanical stress.

2. Scratches, dents and cosmetic damage, unless caused by OnePlus.

3. Defects or damage resulting from excessive force or use of metallic objects on the touch screen.

4. Devices that have the serial number or the IMEI number removed, defaced, damaged, altered or made illegible.

5. Ordinary wear and tear.

6. Defects or damage resulting from the use of the product in conjunction or connection with accessories, products, or ancillary/peripheral equipment not furnished or approved by OnePlus.

Safety information

7. Any physical feature defects or damage resulting from improper testing, operation, maintenance, installation, service, or adjustment not furnished or approved by OnePlus.

8. Defects or damage resulting from external causes such as collision with an object, fire, flooding, dirt, windstorm, lightning, earthquake, exposure to weather conditions, theft, blown fuse, or improper use of any electrical source. 9. Defects or damage resulting from cellular signal reception or transmission, or viruses and 3rd party software problems introduced into the product.

10. Free warranty replacements and repairs are only valid in the country or region of purchase.

Please contact OnePlus Customer Support for more details.

Return Policy (Limited to North America & Europe)

OnePlus phones and accessories are made to the highest standards and undergo rigorous testing. If you are not satisfied with your OnePlus product for any reason, you may request a return within 15 calendar days of delivery. Once we approve your return request and receive the product, we will perform standard inspection. And if the product passes the inspection, we will give you a full refund. Any shipping and handling fees incurred in the return process are

Safety information

not covered by the refund.

Return requests made outside of the 15-day period will not be accepted. We may also choose not to accept returns within these circumstances:

1. Defects or damages caused by misuse, neglect, physical damage, tampering, incorrect adjustment, normal wear and tear or incorrect installation after purchase.
2. Price fluctuations being the sole reason for return.
3. Customized customer contracts. In accordance with the U.K. Consumer Rights Act 2015, any goods that are not (1) of satisfactory quality; (2) fit for their given purpose; or (3) as

described, may be returned free of charge within 30 days of delivery. Please submit a ticket describing the problem with your device. In order to be eligible for a refund, you must contact us within 30 days and describe in detail how the goods were defective, damaged, or materially different. We may choose not to accept returns for any of the above mentioned circumstances. In all cases, we will inspect the product and verify the fault. To qualify for a replacement or refund, device must be in “as new” condition and include all original contents of the package. We reserve the right to refuse a refund or exchange if the product returned is deemed to have been damaged.

Please contact OnePlus Customer Support to

Safety information

request a return at oneplus.com/support.

US

OnePlus Customer Support

Support information and assistance go to:

www.oneplus.com/support

Download manuals:

www.oneplus.com/support/manuals

DE

OnePlus Kundenbetreuung

Weitere Informationen finden Sie in
unserem Support Center:

www.oneplus.com/de/support

Bedienungsanleitungen im Download:

www.oneplus.com/de/support/manuals

FR

OnePlus Service Clients

Visitez le site d'assistance en ligne pour
obtenir plus d'informations:

www.oneplus.com/fr/support

Téléchargez et Manuels:

www.oneplus.com/fr/support/manuals

ES

OnePlus Atención al Cliente

Para información, soporte y asistencia
vaya a: www.oneplus.com/es/support

Descarga el manual en:

www.oneplus.com/es/support/manuals

IT

OnePlus Assistenza Clienti

Per informazioni di supporto e assistenza vai su: www.oneplus.com/it/support

Scarica manuali:

www.oneplus.com/it/support/manuals

PT

Suporte ao Cliente OnePlus

Para informações, suporte e assistência, acesse:

www.oneplus.com/pt/support

Descarregar manual:

<https://www.oneplus.com/pt/support/manuals>

SE

OnePlus Kundsupport

För supportinformation och hjälp gå

till: www.oneplus.com/se/support

Ladda ned manualer:

www.oneplus.com/se/support/manuals

IN

OnePlus Customer Support

Support information and assistance go to:

www.oneplus.in/support

Download manuals:

www.oneplus.in/support/manuals