

PURE

Pop Midi with Bluetooth



Pure Warranty Statement for Australia

This statement replaces any reference to warranty which may be contained elsewhere within this manual.

What do you need to do now?

- Keep your proof of purchase as evidence of your purchase date. This proof of purchase would need to be presented if warranty service was ever required.
- Register your purchase on-line at:
<http://www.pure.com/au/product-registration/> for free technical support.

If you have any questions about your warranty you can call us toll free on 1800 988 268.

What's covered by this warranty?

- Pure agrees to refund, repair or replace, at your election, without charge to you, any part found to be defective during the warranty period.
- If equipment has been used according to its accompanying instruction manual and is used in a domestic situation, a three year warranty period applies (excludes rechargeable ChargePAK where fitted. A one year warranty period applies to all ChargePAKs).

How do you make your claim?

Call 1800 988 268 for instructions on how to return your Pure product for warranty service or go to <http://support.pure.com/au/> and complete the contact us form.

What's NOT covered by this warranty?

Under this express warranty Pure will not be liable for loss or damage of any kind whatsoever, whether direct, indirect, incidental, consequential or otherwise.

 
- Replacement of parts due to normal wear and tear.
- Products with serial number defacement, modification or removal.
- Water damage or corrosion caused by dampness.
- Any damage or deterioration due to shipment.
- Any product which has been subjected to misuse, abuse or accident.

Australian consumers — The benefits to the consumer given by this express warranty are in addition to other rights and remedies of the consumer under a law in relation to the goods or services to which this warranty relates. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



Pure is distributed and supported in Australia by PIONEER ELECTRONICS AUSTRALIA PTY LTD, 5 ARCO LANE, HEATHERTON, VICTORIA, 3202.

Pop Midi with Bluetooth

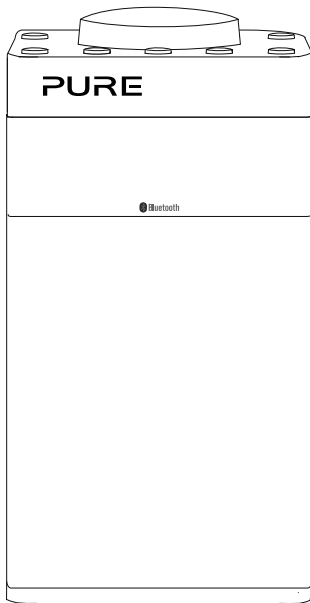Thank you for choosing Pop Midi with Bluetooth. This manual will help you get your product up and running in no time and explains how to get the best out of all its great features. If you need any further assistance, please visit the support pages on our website at support-uk.pure.com.



Safety instructions

1. WARNING: Do not use the included power supply (with model number ZDD055200 or ZDD055200BS) to power up another apparatus as this may cause damage.
2.   Use only power supplies listed in the user manual/user instructions (supplied by Pure with model number ZDD055200 or ZDD055200BS).
3. Fit the mains adapter to an easily accessible socket, located near the radio and ONLY use the mains power adapter supplied
4. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and objects filled with liquids, such as vases, shall not be placed on apparatus.
5. CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
6. WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or similar.
7. WARNING: The direct plug-in adapter is used as a disconnect device, the disconnect device shall remain readily operable.
8. Keep the radio away from heat sources such as radiators, heaters or other appliances that produce heat.
9. Do not expose the unit to direct sunlight.
10. Do not use the radio near water.
11. Avoid objects or liquids getting into the radio.
12. Do not remove screws from or open the radio casing.
13. Always switch the radio off and disconnect it from mains power before inserting or removing a ChargePAK.
14. Should not be immersed in water, used in shower or bathroom if plugged into the mains.
15. The mark label is on the exterior of the bottom of the apparatus.

Contents

4 Introduction

- 4 Top panel
- 5 Rear panel
- 6 Display

7 Getting started

- 7 Quick set up

9 Using your Pop

- 9 Listening to digital radio
- 9 Listening to FM radio

10 Storing and selecting presets

- 10 To quick-store a station to a preset button (1–4)
- 10 To store a station to the preset list (1–10)
- 10 To recall a preset when listening to a digital or FM radio station

11 Using Bluetooth

12 Alarms and timers

- 12 Setting an alarm
- 13 Cancelling a sounding alarm
- 13 Snoozing a sounding alarm
- 13 Disabling an alarm
- 13 Setting the sleep timer
- 13 Setting the kitchen timer

14 Options and settings

 
- 14 General settings
- 15 Audio settings
- 15 Display settings
- 16 Clock settings
- 18 Bluetooth settings
- 18 FM stereo

19 Appendix

- 19 Installing a ChargePAK D1 or four AA batteries
- 20 Changing Pop Midi's removable sleeve
- 21 Help and advice
- 22 Technical specifications


Introduction

Top panel

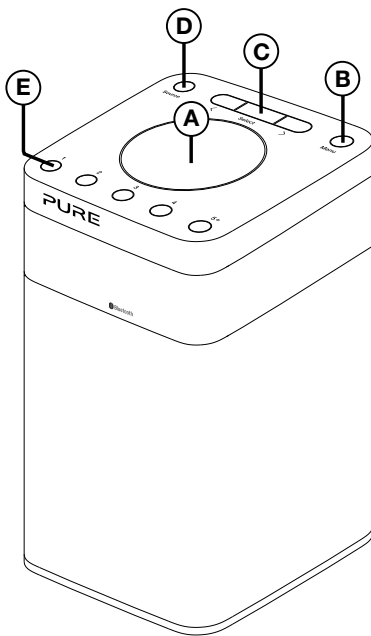


- A. **Power/Volume dial:** Push to switch Pop on/off. Turn to adjust volume.
- B. **Menu button:** Press to change various settings on Pop (see page 14 for more information).
- C. **Select buttons:** Press to change radio stations (see page 9) or press to scroll and select menu options.
- D. **Source:** Press to switch between listening to digital radio and FM radio.
- E. **Presets 1 - 5+:** Store up to 10 digital or 10 FM radio preset stations (see page 10 for more information).

 
Rear panel

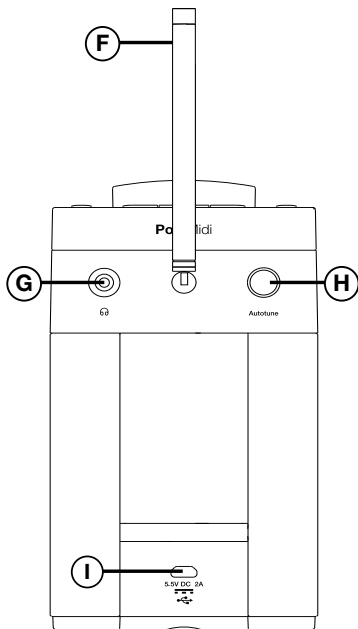

- F. Aerial:** Rotate the aerial and fully extend it for best reception.
- G. Stereo headphone socket (3.5mm)**
- H. Autotune button:** Press to automatically scan for new digital radio stations and remove inactive ones.
- I. Micro-B USB 5.5V power connector:** Connect to supplied mains adapter only.

 Display

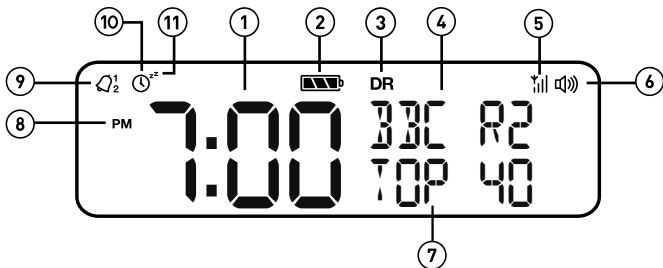


1. Displays current time.
2. ChargePAK or battery indicator.
3. Source indicator (DR= digital radio, FM= FM radio,  = Bluetooth).
4. Station name.
5. Signal strength.
6. Volume indicator.
7. Displays date, scrolling text, settings and station information (see page 16).
8. AM/PM indicator.
9. Alarm set indicator (see page 12).
10. Sleep and kitchen timer indicator (see page 13).
11. Snooze indicator (page 13).

Getting started

Quick set up


Note: If you have a ChargePAK D1 rechargeable battery (sold separately) or AA rechargeable batteries fit them now before plugging Pop in. See page 19 for more information.

 1

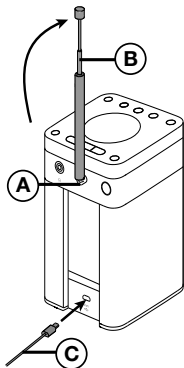


- Rotate the aerial and fully extend it (steps **A** and **B**).
- Insert the jack of the supplied mains adapter into the socket on the rear of the radio (**C**).

 2

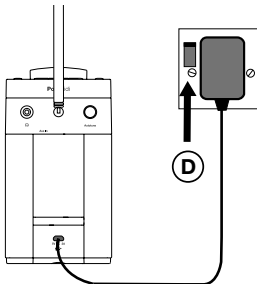


- Plug the mains adapter into the mains supply (**D**).

 3

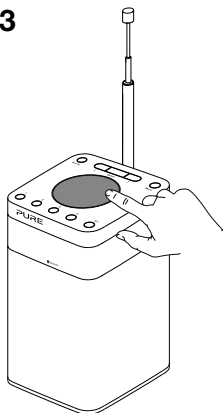

- Push down and release the power button to switch Pop on.

 4

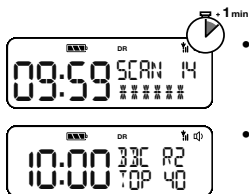

- Wait for Pop to complete an Autotune for all available digital radio stations.
- When the Autotune is complete, a digital radio station will be selected.

Using your Pop



Listening to digital radio

Press the **Source** button to switch to digital radio.



Changing digital stations

1. Press the < > buttons to scroll through the list of stations.
2. When you have found the station that you want to listen to, press the **Select** button to tune in.



Listening to FM radio

Press the **Source** button to switch to FM radio.



Changing FM stations

Manual tuning

Press the < > buttons to step up or down 0.05 MHz.



Seek tuning

Press and hold the < > buttons to seek to the next or previous FM radio station that has a strong signal.



Storing and selecting presets

You can store up to 10 digital and 10 FM radio stations for quick access.



To quick-store a station to a preset button (1–4)

Tune in to the digital or FM radio station that you want to store. Press and hold one of the numbered preset buttons (1–4) for two seconds to save the current station as a preset. You can save over existing presets.

To store a station to the preset list (1–10)

1. Tune in to the digital radio or FM radio station you want to store.
2. Press and hold the **5+** button to view the numerical list of stored presets, then press **< >** to choose any preset number between 1 and 10. You can overwrite existing presets.
3. Press the **Select** button until you see the 'Preset stored' message.

To recall a preset when listening to a digital or FM radio station

To tune to presets 1 to 4, press the corresponding numbered button on Pop (1 to 4).

To access the full list of presets (from 1 to 10):

1. Press and release the **5+** button.
2. Press **< >** to scroll through the list of presets and push the **Select** button to tune to the selected preset.

Using Bluetooth

You can use Bluetooth to stream any music from your phone or tablet to Pop.

Note: When using Bluetooth to stream music to Pop, you will need to use your phone or tablet's volume controls to change Pop's volume.

Pairing a mobile device with Pop

Before you can stream audio to Pop, you will need to pair your phone or tablet with Pop.

Note: Bluetooth pairing varies on different mobile devices. See your mobile device manual for specific information.

To pair with Pop using Bluetooth:

1. Enable Bluetooth on your mobile device.
2. On your mobile device, select the option to add a new Bluetooth device. On some mobile devices you may need to select the search or scan option.
3. Start the pairing process on your mobile device. Do this by selecting 'Pop' from the list of available devices that appear on the mobile device's screen. This will connect automatically once paired.

Disconnecting a mobile device from Pop

You can only have one mobile device connected to Pop via Bluetooth at any one time. If you want to stream audio from a different mobile device, you will need to disconnect any mobile device that is currently connected to Pop via Bluetooth first.

If your mobile device goes out of Pop's Bluetooth range (this is usually around 10m (30ft)) the mobile device's Bluetooth connection is disconnected automatically.

 
 
 
To manually disconnect your mobile device from Pop, you will need to open the Bluetooth settings on your mobile device (see your mobile device's manual for more information).

When you disconnect a mobile device from Pop, Pop will remain in the 'Bluetooth' source. To select another source, e.g. digital radio, press the **Source** button.

Note: For more help with Bluetooth, see our 'Help and advice' on page 21.

Alarms and timers

Note: If Pop is running on batteries or a ChargePAK, Pop's alarm function will not work if you turn Pop off after setting an alarm.



Setting an alarm

Pop has two alarms which can switch the radio on and tune to a digital or FM radio station or sound an alarm tone.

1. Press the **Menu** button and scroll **< >** to 'Alarm'.
2. Scroll **< >** to 'Alarm1' or 'Alarm2' and press the **Select** button.
3. Scroll **< >** to 'On' and press the **Select** button.
4. Scroll **< >** to set the hour for the alarm and press the **Select** button. Repeat to set the minute for the alarm.
5. Scroll **< >** to set the duration of the alarm and press the **Select** button.
6. Scroll **< >** to specify 'FM', 'Digital' or 'Tone' and press the **Select** button to confirm. If you are specifying a tone alarm, skip to step 8.
7. Scroll **< >** to specify which station should be played when the alarm goes off. You have the option of selecting one of your preset stations or you can select 'Last Used' to select the station that you were last listening to. Press **Select** to confirm.
8. Scroll **< >** to specify one of the following alarm repeat options: 'Daily', 'Weekdays', 'Weekends' or 'Once' and press the **Select** button to confirm.
9. Use **< >** to set the volume that the radio will play at when the alarm sounds and press the **Select** button to confirm.
10. The alarm icon will light steadily on the display to show that the alarm has set.

Canceling a sounding alarm

To cancel a sounding alarm, press the **Source**, **<Select>** or **Menu** buttons.

Snoozing a sounding alarm

To snooze a sounding alarm, press one of the **Preset** buttons. By default, Pop's snooze time is set to eight minutes. To change the Pop's default snooze time see page 17.

Disabling an alarm

To disable an alarm after it has been set:

1. Press the **Menu** button and scroll **< >** to 'Alarm' and press the **Select** button.
2. Scroll **< >** to the alarm that you want to disable ('Alarm1' or 'Alarm2') and press the **Select** button.
3. Scroll **< >** to 'Off' and press the **Select** button.
4. The alarm icon will turn off on Pop's display to show that the alarm has been disabled.

Setting the sleep timer

The sleep timer can be set to switch Pop off after a specific period of time.

Note: If Pop is running on batteries or a ChargePAK, Pop's sleep function is disabled.

1. Press the **Menu** button.
2. Scroll **< >** to 'Sleep' and press the **Select** button.
3. Scroll **< >** and press the **Select** button to set the timer for up to 90 minutes or choose 'Off' to cancel.

Setting the kitchen timer

Pop has a countdown kitchen timer which will sound an alarm after a set time period.

1. Press the **Menu** button.
2. Scroll **< >** to 'Timer' and press the **Select** button.
3. Scroll **< >** to change the hours and press the **Select** button.
4. Scroll **< >** again to change the minutes and push to confirm and start the countdown timer.

The alarm will sound after the time period you have set whether the radio is on or in standby. Cancel the beeping alarm tone by pressing either the **Source**, **<Select>** or **Menu** buttons.

Options and settings

General settings

Changing the language shown on the display

To switch the display language on Pop between English, French, German, Italian and Spanish:

1. Press the **Menu** button.
2. Scroll < > to 'Settings' and press the **Select** button.
3. Scroll < > to 'Lang.' and press the **Select** button.
4. Scroll < > and press the **Select** button to choose the language that you want Pop to display.

Resetting Pop to factory settings

Resetting your Pop radio removes all presets, clears the station list and resets all options to defaults. To carry out a factory reset:

1. Press the **Menu** button.
2. Scroll < > to 'Settings' and press the **Select** button.
3. Scroll < > to 'Reset' and press the **Select** button.
4. Scroll < > to 'Yes' and press the **Select** button.

Displaying Pop's software version

To display software version that is currently running on Pop:

1. Press the **Menu** button.
2. Scroll < > to 'Settings' and press the **Select** button.
3. Scroll < > to 'Version' and press the **Select** button.

Updating Pop to the latest version of software

Contact Pure technical support (<http://support-uk.pure.com>) for more information on how to update Pop to the latest software version.

Audio settings

You can use Pop's audio menu to adjust the bass and treble.

1. Press the **Menu** button.
2. Scroll < > to 'Audio' and press the **Select** button.
3. Scroll < > to 'Bass' or 'Treble' and press the **Select** button.
4. Scroll < > to adjust the bass or treble levels. You can choose a level between '-3' and '+3'.
5. Press the **Select** button to confirm the bass or treble level.

Display settings

Adjusting the display brightness

You can adjust the brightness of the display when Pop is switched on or in standby. To change the brightness of Pop's display:

1. Press the **Menu** button.
2. Scroll < > to 'Display' and press the **Select** button.
3. Scroll < > to 'Backlight' and press the **Select** button.
4. Scroll < > to 'Active' and press the **Select** button to change the settings that apply when Pop is switched on, or scroll to < > 'Standby' and press the **Select** button to change settings that apply in standby.
5. Scroll < > to 'Level' and press the **Select** button.
6. Scroll < > to choose a brightness level between '1' and '5'.
7. Press the **Select** button to confirm the brightness setting.

Adjusting how long the display backlight stays on for

You can adjust how long Pop's display backlight stays on for:

1. Press the **Menu** button.
2. Scroll < > to 'Display' and press the **Select** button.
3. Scroll < > to 'Backlight' and press the **Select** button.
4. Scroll < > to 'Active' and press the **Select** button to change the settings that apply when Pop is switched on, or scroll to < > 'Standby' and press the **Select** button to change settings that apply in standby.
5. Scroll < > to 'Duration' and press the **Select** button.
6. Scroll < > and press the **Select** button to choose one of the following options:

On: Choose this option if you want the backlight to always stay on.

Off: Choose this option if you want the backlight to turn off after 10 seconds

Changing the information shown on Pop's display

If you are listening to a digital or FM radio station, you can change the information that is shown on Pop's display:

1. Press the **Menu** button.
2. Scroll < > to 'Display' and press the **Select** button.
3. Scroll < > to 'Info' and press the **Select** button.
4. Scroll < > and press the **Select** button to choose one of the following options:

Text: Choose this option if you want to display the information broadcast by the station you are currently listening to. The information displayed may include song titles, programme details, news, etc.

Strength: Choose this option if you want to display the signal strength of the radio station you are currently listening to. The number of asterisks indicate the reliable reception level.

Date: Choose this option if you want to display the current date.

Clock settings

Setting the time and date

The time and date on Pop are automatically set by the FM or digital radio signal. If the time/date on Pop is not updating automatically, you can manually set it.

1. Press the **Menu** button.
2. Scroll < > to 'Clock' and press the **Select** button.
3. Scroll < > to 'Time/date' and press the **Select** button.
4. Scroll < > to set the hour and press the **Select** button. Repeat to set the minutes.
5. Scroll < > to set the day and press the **Select** button. Repeat to set the month and the year.

Changing the time format

1. Press the **Menu** button.
2. Scroll < > to 'Clock' and press the **Select** button.
3. Scroll < > to '12/24 hr' and press the **Select** button.
4. Scroll < > to choose between '12 hour' and '24 hour' and press the **Select** button to confirm.

Changing the date format

1. Press the **Menu** button.
2. Scroll < > to 'Clock' and press the **Select** button.
3. Scroll < > to 'Format' and press the **Select** button.
4. Scroll < > to choose between displaying the date in day, month and year order 'DD-MM-YYYY' or in month, day and year order 'MM-DD-YYYY' and press the **Select** button to confirm.

Clock synchronization options

You can select the radio sources that you want to use for setting the time. By default, Pop uses both the FM and digital radio signals to synchronize the time.

To specify the clock synchronization options:

1. Press the **Menu** button.
2. Scroll < > to 'Clock' and press the **Select** button.
3. Scroll < > to 'Sync to' and press the **Select** button.
4. Scroll < > to choose the required clock synchronization option and press the **Select** button to confirm.

Changing the snooze time

You can change the amount of time an alarm will snooze for when you press one of Pop's preset buttons during a sounding alarm. By default, Pop's snooze time is set to eight minutes.

To change Pop's snooze time:

1. Press the **Menu** button.
2. Scroll < > to 'Clock' and press the **Select** button.
3. Scroll < > to 'Snooze' and press the **Select** button.
4. Scroll < > to choose a snooze time between '5' and '59' minutes and press the **Select** button to confirm.

Bluetooth settings

You can use the Bluetooth menu to make Pop visible or invisible to other Bluetooth devices.

To change Pop's Bluetooth visibility setting:

1. Press **Menu**.
2. Scroll < > to 'Bluetooth' and press the **Select** button.
3. Scroll < > and press the **Select** button to choose one of the following options:
 - On:** Select this option if you want Pop to be visible to all Bluetooth devices.
 - Hidden:** Select this option if you want to hide Pop from other Bluetooth devices. You will still be able to pair to Pop when Bluetooth is hidden, but you will need to enter Pop's name manually on the device you want to pair with.
 - Off:** Select this option if you want to disable Pop's Bluetooth connection.

FM stereo

You can use the FM stereo menu to make switch between stereo and mono reception. You may want to select 'Mono' to try and improve weaker reception.

Note: The 'FM stereo' option is only visible when you have selected 'FM' as the radio source.

 
To change Pop's FM stereo setting:

1. Press **Menu**.
2. Scroll < > to 'FM stereo' and press the **Select** button.
3. Scroll < > to choose between 'Stereo' and 'Mono' and press the **Select** button to confirm.


Appendix

Installing a ChargePAK D1 or four AA batteries


1

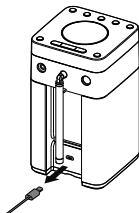


2

 

3

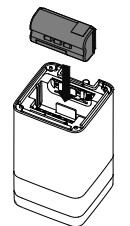 


ChargePAK D1

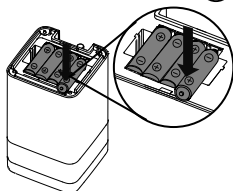 


4x AA batteries






 
4

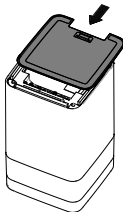

5

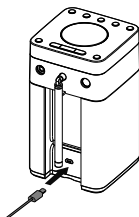 

Changing Pop Midi's removable sleeve

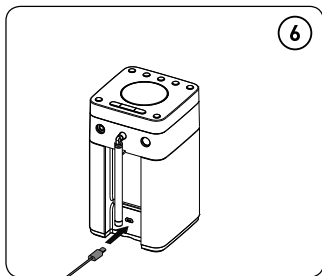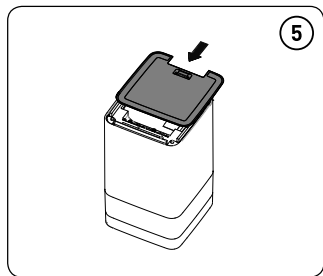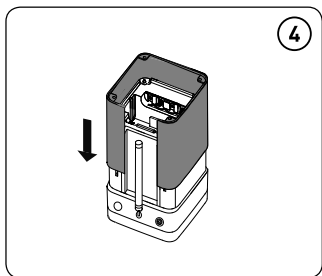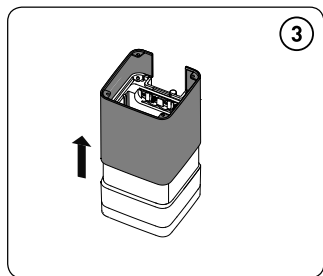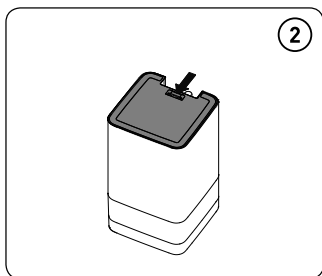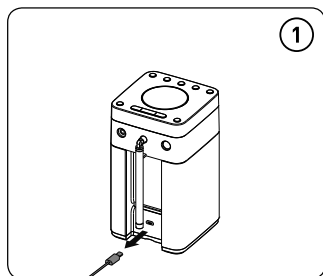      

Help and advice

Secondary and inactive stations

(</>) Secondary digital radio services

Some stations have accompanying secondary services which provide extra information or alternative content and may only be broadcast at certain times. If a station has a secondary service available, the station shows '>' next to its name in the station list and the secondary service appears next to the station in the list. A secondary service has a '<' before its name in the station list.

(?) Inactive or unavailable digital radio stations

Inactive or unavailable stations appear on the station list preceded by '?' and cannot be tuned to. A station may be inactive or unavailable because the station is not broadcasting at the current time (check with the station) or has stopped broadcasting altogether. Also, you may not have a strong enough signal to receive the Multiplex on which the station is broadcast.

Hints and tips

Display says 'No stations available'

Press the **Autotune** button on the back of your Pop to search for digital stations. Try adjusting your aerial or radio position.

Receiving new digital radio stations that have started broadcasting

Press the **Autotune** button on the back of your Pop to search for new digital stations. Try adjusting your aerial or radio position.

I can't see Pop in the list of available Bluetooth devices on my mobile device

This may be because your Pop Bluetooth visibility setting is set to 'Hidden' or 'Off' (see page 18). Your Bluetooth setting will need to be set to 'On' to be visible on your mobile device.

My mobile device is prompting me for a passcode when I try to pair with my Pop

Some legacy Bluetooth devices may prompt you to enter a passcode when trying to pair with Pop. If this occurs, enter the code '0000'.

Technical specifications

Radio	Digital and FM radio
Frequencies	DAB/DAB+, FM radio 87.5-108 MHz
Bluetooth	Built-in Bluetooth with A2DP support
Speaker	Full-range 3" drive unit
Audio power output	4.3W RMS
Input connectors	5.5V DC power adaptor socket (230V supplied)
Output connectors	3.5mm stereo headphone socket
Presets	10 digital radio and 10 FM radio presets
Power supply	230V AC to 5.5V (2.0A) DC external power adapter (supplied), optional ChargePAK D1 rechargeable battery pack or four AA batteries)
Power consumption	<p>(Standby mode) - 0.5W (limit 1W)</p> <p>Networked Standby mode activated - Automatic after no Bluetooth detected</p> <p>Power Consumption (Networked Standby mode) – 1.0W</p> <p>Wireless Network(s) On/Off switch - Only single Bluetooth wireless network connection and the network connection is always activated</p> <p>Standby And/Or Off mode activated – Standby mode, press the large circular button/knob so that it is in the 'down' position and level with the top panel</p>
Dimensions	93 mm wide x 173 mm high x 102 mm deep
Aerial	Telescopic aerial
Approvals	<p>CE CE marked. Hereby, Pure, declares that this Band II LPD device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.</p> <p>The Declaration of Conformity may be consulted at: http://www.pure.com/R&TTE-DoC.</p> <p>ETSI EN 300 401 compliant</p> <p>Australian C-Tick N1600 and Electrical Safety</p>

Copyright

Copyright 2015 by Imagination Technologies Limited. All rights reserved. No part of this publication may be copied or distributed, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language, in any form or by any means, electronic, mechanical, magnetic, manual or otherwise, or disclosed to third parties without the express written permission of Imagination Technologies Limited.
Version 1 April 2015.

Trademarks

Pop Midi with Bluetooth, ChargePAK, Pure, the Pure logo, Imagination Technologies, and the Imagination Technologies logo are trademarks or registered trademarks of Imagination Technologies Limited. All other product names are trademarks of their respective companies.

Warranty Information

Imagination Technologies Limited warrants to the end user that this product will be free from defects in materials and workmanship in the course of normal use for a period of three years from the date of purchase. This guarantee covers breakdowns due to manufacturing or design faults; it does not apply in cases such as accidental damage, however caused, wear and tear, negligence, adjustment, modification or repair not authorised by us. Please visit www.pure.com/product-registration from the UK or www.pure.com/au/product-registration from Australia to register your product with us. Should you have a problem with your unit please contact your supplier or contact Pure Support at the address shown on the rear of this manual.

Disclaimer

Imagination Technologies Limited makes no representation or warranties with respect to the content of this document and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, Imagination Technologies Limited reserves the right to revise this publication and to make changes in it from time to time without obligation of Imagination Technologies Limited to notify any person or organisation of such revisions or changes.

Correct disposal of this product



This marking indicates that this product should not be disposed with other household waste throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection system or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

PURE

www.pure.com
connect.pure.com
www.facebook.com/pure

Pure

Imagination Technologies Limited
Home Park Estate
Kings Langley
Herts, WD4 8LZ
United Kingdom
www.pure.com
<http://support.pure.com>

Pure

Friedrich-Ludwig-Jahn-Straße 2-14
64589 Stockstadt/Rhein
Deutschland
<http://support.pure.com/de>

Pure Australasia Pty Ltd

PO Box 5049
Wonga Park
Victoria 3115
Australia
sales.au@pure.com
<http://support.pure.com/au>

Pure - Vertrieb über: TELANOR AG

Unterhaltungselektronik
Bachstrasse 42
4654 Lostorf
Schweiz/Switzerland
info@telanor.ch
www.telanor.ch