

This guide is meant to serve as a quick reference for operating your Hyundai Tiller. It is for convenience and not intended to replace the information found in the product manual provided. Use outdoors only.

Petrol Tillers produce carbon monoxide — a poisonous, colourless & odourless gas that can cause death or serious injury. Petrol is highly flammable, always handle with extreme care and in a well ventilated area. Always remove HT lead from spark plug when checking machine or changing parts.

**You Tube** HYUNDAI POWER EQUIPMENT  
OUT OF THE BOX & ASSEMBLY VIDEO AVAILABLE

### This product includes:

- Main unit
- 4 steel tines
- Drag bar
- 2x Spanners
- 1x Spark plug spanner
- Manual



\*Contents may vary model to model

Do not attempt to lift the tiller out of the box on your own, instead seek assistance or cut each corner of the box and lay the sides flat. At this point, check that you have all of the included items listed above. If any are missing or damaged, call 01646 687 880 or email [info@hyundaipowerequipment.co.uk](mailto:info@hyundaipowerequipment.co.uk).


### ASSEMBLY:




**Handle Assembly:**  
Hold the handles onto the support bracket (1) and insert the bolts into the holes (2), fasten and tighten the retaining nuts (3).



**Fitting The Cables:**  
Secure the two cables to the handle using the clip provided (4). Hook the end of the clutch handle cable into its holder (5) and insert the adjustment screw into the holding arm (6).

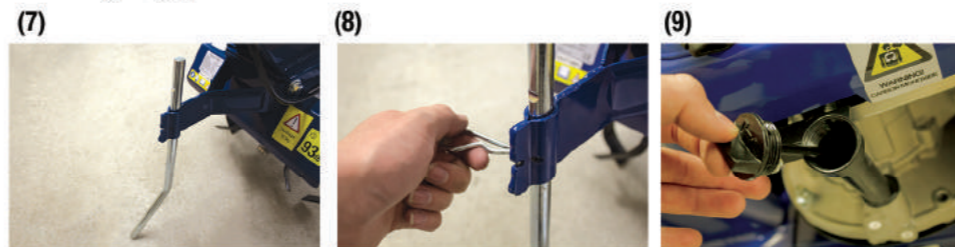


**Depth Bar / Wheels:**  
Attach the depth bar onto its support bracket (7), guide the depth bar to the depth needed and fix in place with the supplied 'B' clip (8).

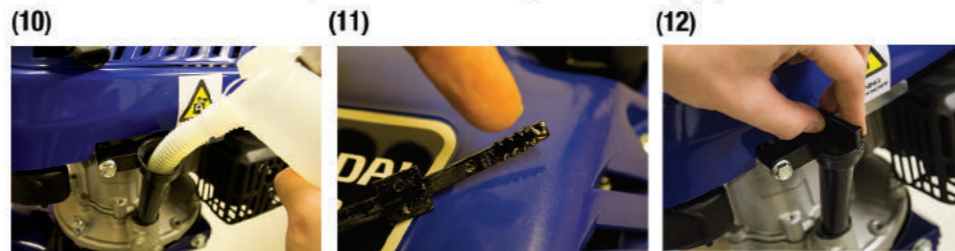

**Oil and Fuel:**  
Undo the oil filler cap and remove the dipstick (9) and fill with approximately 550ml of SAE15w40 engine oil (10). Check the oil level with the dipstick (11) (the oil should be to the upper mark without threading the dipstick all the way in). Replace the dipstick and filler cap (12).



Remove the fuel tank cap (13) and pour in the fresh unleaded petrol, do not overfill, leave room for expansion-25mm at top of tank (14). Replace the fuel tank cap (15).

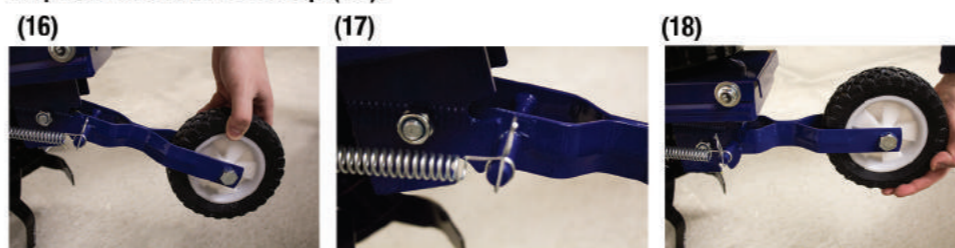

**Adjusting The Wheel:**  
Before operating place the transport wheel into the operating position, lift the front wheel out and upwards against the spring tension (16 & 17). Use the spring tension to guide the wheel into the horizontal operating position (18).



### Starting Procedure

Move the throttle lever to the forward position (choke) (19) and push the primer bulb in 3 times (20). Pull the recoil starter gently until resistance is felt, briskly repeat until engine starts (21).



### Starting Procedure

With engine running, adjust throttle to desired speed (22). Engage the clutch (23) to turn the blades. Releasing the clutch (24) will stop the blades.



### Stopping Procedure

To stop the machine, release the clutch (25) and move the throttle lever past idle to the off position (26), engine will then slow before coming to a complete stop (27).



### Warranty Registration

To register the warranty of your tiller, locate the serial number (28). Visit [hyundaipowerequipment.co.uk/support/warranty-registration](http://hyundaipowerequipment.co.uk/support/warranty-registration). Enter your details (29). Now your ready to use your new Hyundai Tiller. (30)

PLEASED WITH YOUR PURCHASE? FOR A CHANCE TO WIN A £500 HYUNDAI GIFT VOUCHER LEAVE A PRODUCT REVIEW (see leaflet within box or visit [www.genpower.co.uk/rewards](http://www.genpower.co.uk/rewards)).

T: 01646 687 880

E: [info@hyundaipowerequipment.co.uk](mailto:info@hyundaipowerequipment.co.uk)  
[www.hyundaipowerequipment.co.uk](http://www.hyundaipowerequipment.co.uk)