

# AZATOM® Storm

Portable Bluetooth™ Speaker with 3D Sound Technology



## User Manual



*This manual is available to download online at [www.azatom.com](http://www.azatom.com)*

Thank you for shopping with AZATOM® Please read this manual carefully before using your new device and keep it safe for future reference.

The **Storm** is one of our most advanced Bluetooth™ speakers with premium speaker drivers and dual sub-woofers combined with sound processing technology for rich, crisp fuller sounding music.

The **Storm** is small enough to put in a bag and take with you but provides a rich, powerful sound a world away from standard portable speakers.

Bluetooth™ allows you to stream your content wirelessly from any Bluetooth-enabled device including phones, tablets and laptops.

A custom amplifier combined with High Fidelity Drivers ensure that whether you are streaming music, a podcast or the soundtrack to a film, the **Storm** delivers superb quality.


# Contents

<b>Section:</b>	<b>Page:</b>
Controls & Interface.....	1
What's In The Box?.....	3
Using the Storm.....	4
Maintenance.....	7
Technical Specifications.....	8
Troubleshooting Guide.....	9
Important Safety Information.....	10


1.

# Controls & Interface

## Top View

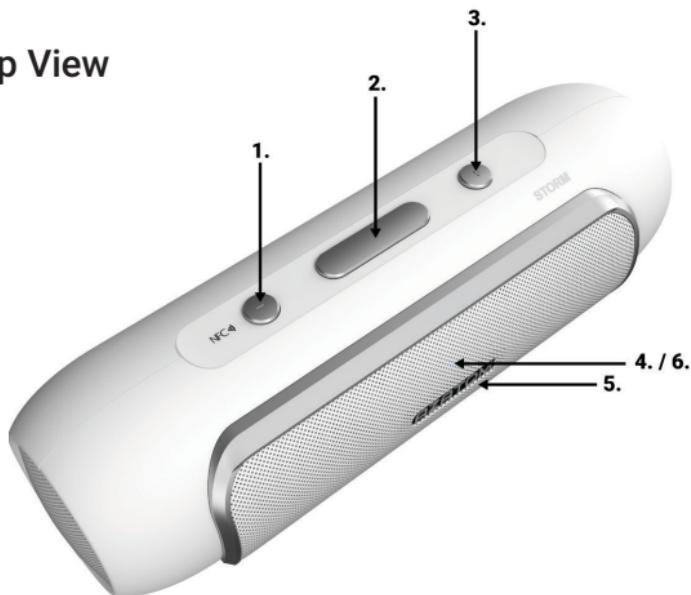

## Back View

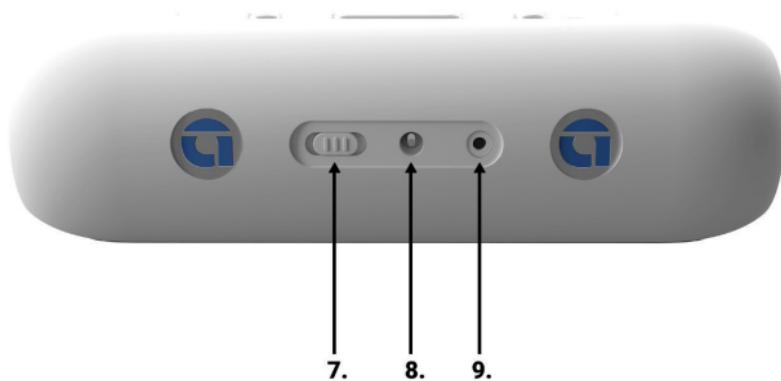

(1) Long press for "Volume - / Down Rapidly"  
Short press for "Volume - / Down One level at a time"

(2) Play/Pause  
(Answer/Refuse/Hang Up & Redial in Handsfree Mode),  
MUTE when AUX-IN Mode

(3) Long press for "Volume + / Up Rapidly"  
Short press for "Volume + / Up One level at a time"

(4) Mode Light: Flashing Orange/Blue = Pairing Bluetooth  
Mode Light: Solid Blue Light = Paired/connected Bluetooth  
Mode Light: Solid Orange = AUX- in

(5) Microphone

(6) Battery Charge Light: *Red Light On*  
Battery Charging or *Red Light Off* – Fully Charged

(7) Power Switch (*On/Off*)

(8) Mains adapter Port

(9) Aux-in Port

# What's in the box?



- **AZATOM® Portable Bluetooth™ Speaker with 3D Sound**
- **User Manual**
- **Power Adapter**
- **Aux Cable**
- **AZATOM® Warranty Card**

# Using the Storm

## Getting Started.

There are 2 ways of powering your Storm speaker:

1. Connecting to a power source using the mains adapter (*supplied*).
2. Charging up the built-in battery.

We recommend leaving your Storm plugged into the mains for at least 10 hours for the first charge. To power the Storm using the cable, simply attach the cable to the DC Input on the speaker and the other end to a power source. This will automatically charge up the battery as well as allowing you to use the speaker.

## AUX Input Mode...

The Aux Mode is selected automatically by connecting the Aux cable to the Storm.

Connecting the 3.5mm Jack Cable will prevent the Storm playing as a Bluetooth speaker so please ensure the cable is disconnected when you wish to stream your music through Bluetooth.

*When in Aux Mode the Storm buttons can control the speaker but not the Bluetooth device.*

## Bluetooth Mode...

Pairing your Storm with a Bluetooth-enabled device for the first time:

- (1) When you turn on the Storm it will alert you by speaking "Power ON". It will also automatically go into Bluetooth Pairing Mode (*indicated by the Blue light flashing rapidly*).

*The Storm will auto-reconnect to the last paired device if in range. Otherwise, if it has not been connected to a Bluetooth device before, the Storm will make itself visible to any Bluetooth device which is actively searching.*

- (2) Once in Bluetooth Pairing Mode, activate the Bluetooth function on the media device (ie. the phone, tablet, iPod etc.) so that it does a search of nearby Bluetooth devices.
- (3) Select the Speaker from the list of devices. It should show up as "AZATOM® STORM". (*Most devices require that you select Bluetooth™ devices by either tapping or double tapping – please see the User Manual of your Bluetooth device to check*).
- (4) If you are prompted to enter a password, please enter "0000". When the Storm is connected, it'll say "Pairing Completed - Connected"

*When you switch off your Bluetooth, the speaker will let you know, by saying: "Disconnected".*

**Pairing your Storm with different Bluetooth-enabled devices:**

If you wish to connect to a different device which has not previously been connected, you can put the Storm into Bluetooth Pairing Mode anytime by switching the Bluetooth Off on the connected device to disconnect and then pressing and holding the PLAY/PAUSE button until the Storm goes into 'Pairing Mode'. It will say "Disconnected...Pairing".

If you wish to reconnect to a second Bluetooth™ device which the unit has paired with previously, the process is the same as above and when the speaker goes into pairing mode it will find the second Bluetooth device.

## Connecting to more than 1 device...

The Storm can connect to 2 phones at the same time:

- (1) Connect to the first phone and then to the 2nd as normal - the 2nd phone will now be connected.
- (2) Now go back to the list of Bluetooth™ devices on the 1st phone and select/reconnect to the Storm.
- (3) The Storm can now operate as a 'handsfree' speaker from both phones. The Storm speaker buttons will function with the last connected phone.

## Using your Storm as a 'handsfree' speaker...

When connected to 1 (or 2) phones, the Storm can operate 'handsfree'.

- (1) To answer a call, short press the Play/Pause button (*volume can be adjusted on the speaker unit*).
- (2) A long press of the Play/Pause button will refuse the call.
- (3) During a call short press the Play/Pause button to hang up.
- (4) Short pressing the Play/Pause button twice, will redial the last number called.

## Pairing via NFC...

- (1) Enable the NFC functionality on your audio player device (*Phone, Tablet etc.*) and hover it over the NFC symbol on the Storm.
- (2) A prompt will appear on your device, follow the on-screen instructions/prompts to continue pairing.

# Maintenance

**Please use these instructions to keep your Storm the best it can be :**

- (1) If you have not used the speaker for over 45 days, the battery switches into Protection Mode. To ensure the lifespan of the battery, please fully discharge and recharge the unit every 45 Days.
- (2) To clean the exterior surface of your Storm, you can wipe it using a soft, dry cloth.  
•*do not use solvents, chemicals or sprays*  
•*do not allow liquids or other objects to enter the speaker*
- (3) Permanent hearing damage or hearing loss may occur if you play music at a high volume, particularly for extended periods. If you hear a "hissing" noise in your ears, or if you experience discomfort, lower the volume, or temporarily discontinue use of this product until discomfort subsides.
- (4) Observe all signs or instructions that require electrical devices to be switched off.
- (5) It is recommended that you allow the battery to fully charge before using the device for the first time.  
*(Ideally we recommend leaving the unit in to charge for 10 hours).*
- (6) The effective range for this wireless device is 10 metres. Performance may be affected by distance and interference from other devices or conditions within the operating environment.
- (7) Other electrical items and wireless devices may affect the performance of the speaker.
- (8) Check the laws and regulations on the use of mobile phones and hands-free equipment in areas you intend to use this product.

# Technical Specifications

- **2.0 Stereo Output with 2 Passive Subwoofers**
- **Power Output: 2 x 12W**
- **Speaker Units: 2x 52mm XL Drivers**
- **Frequency Response: 20Hz -20kHz**
- **S/N Ratio:  $\geq 75\text{dB}$**
- **Bluetooth Chipset: 4.0**
- **Supports: A2DP, AVRCP, HFP, HSP**
- **Working Range: 10m**
- **Built-in Battery: 3.7V 1,800mAh, rechargeable lithium battery**
- **Music Streaming time: upto 24 hours (at 40% Volume)**
- **Charging time: 3 to 8 hours - DC-IN: 5V 1A**  
*(depending on whether the Storm is playing music and at what volume).*
- **Dimensions: 215 x 70 x 65mm**
- **Weight: 490gms**

# Troubleshooting Guide

## LEDs are not lighting up:

- Check the Power button is switched on.
- Check the battery is out of power / connect the Storm to the Mains.
- Check the connection to the Mains.
- Make sure you are using the original mains adapter
- Battery may be in Protection mode, connect to mains outlet to restore the battery to Operational mode

## Connection Failure or No Sound:

- Verify the Bluetooth function of smart phone or other devices are turned on. Try switching off the Bluetooth on your Phone, Tablet etc. and then switching it back on only when the Storm is in 'Pairing Mode'.
- Check that there is not another Bluetooth device already connected to the Storm. Check by disconnecting the paired device and repairing with the current one.
- Make sure the Aux Cable is not attached to the speaker.
- Make sure the input password is correct (*if requested by the player device: 0000*).
- The Bluetooth device may be out of range of the speaker – please move the two closer together.
- Clear the pairing list of Bluetooth devices on your audio player and try again.
- Check the Bluetooth software is incorrectly installed on the PC or Laptop and if necessary re-install your software / drivers.
- Make sure the Volume on both the Speaker and the Bluetooth device are turned up.
- Make sure Mute has not been selected on your Bluetooth device.

## Sound is distorted:

- Check whether the sound is too loud and decrease volume if necessary.
- Try playing a different Track or music from a different source to ensure the cause is not a corrupt music file or source.

# IMPORTANT SAFETY INFORMATION

1. Read these instructions.
2. Keep these instructions. Instructions are also available for download at [www.azatom.com](http://www.azatom.com)
3. Heed all Warnings.
4. Follow all instructions.
5. Do not clean the apparatus near or with water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug this apparatus during light storms or when unused for long periods of time.
12. Refer all servicing to qualified service personnel.

**Servicing is required when the apparatus has been damaged in any way, such as powersupply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.**

13. No naked flame sources, such as lit candles, should be placed on the apparatus.
14. Dispose of used electrical products and batteries safely according to your local authority and regulations.

## ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on apparatus.

Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely.

Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

## RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.



This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

**IMPORTANT: Please read all instructions carefully before use and keep for future reference**



- Risk of electric shock.  
Do not open



- Read all instructions carefully before use and keep for future reference.



- When servicing, use only identical replacement parts.



**AZATOM®**  
ADVANCING AUDIO TECHNOLOGY



[www.azatom.com](http://www.azatom.com)



@Azatom



@Azatom



@Azatom.Online