

Nikon

DIGITAL CAMERA

COOLPIX B500

Reference Manual



Quick Topic Search

- Read this manual thoroughly before using the camera.
- To ensure proper use of the camera, be sure to read "For Your Safety" (page vi).
- After reading this manual, keep it in a readily accessible place for future reference.

En

Quick Topic Search

You can return to this page by tapping or clicking  in the lower right of any page.

Main Topics

Introduction	iii
Table of Contents	x
Parts of the Camera	1
Getting Started	9
Basic Shooting and Playback Operations	16
Connecting to a Smart Device (SnapBridge)	23
Shooting Features	32
Playback Features	68
Movies	80
Connecting the Camera to a TV, Printer, or Computer	91
Using the Menu	102
Technical Notes	148

Common Topics



For Your Safety



Connecting to a
Smart Device



Selecting a
Shooting Mode



Using the Zoom



Continuous
Shooting



Editing Images
(Still Images)



Troubleshooting



Index

Introduction

Read This First

Thank you for purchasing the Nikon COOLPIX B500 digital camera.

Symbols and Conventions Used in This Manual

- Tap or click  in the lower right of each page to display "Quick Topic Search" (iii).
- Symbols

Symbol	Description
	This icon marks cautions and information that should be read before using the camera.
	This icon marks notes and information that should be read before using the camera.
	This icon marks other pages containing relevant information.

- SD, SDHC, and SDXC memory cards are referred to as "memory cards" in this manual.
- Smartphones and tablets are referred to as "smart devices."
- The setting at the time of purchase is referred to as the "default setting."
- The names of menu items displayed on the camera screen, and the names of buttons or messages displayed on a computer screen appear in bold.
- In this manual, images are sometimes omitted from screen display samples so that screen indicators can be more clearly shown.



Information and Precautions

Life-Long Learning

As part of Nikon's "Life-Long Learning" commitment to ongoing product support and education, continually updated information is available online at the following websites:

- For users in the U.S.A.: <http://www.nikonusa.com/>
- For users in Europe: <http://www.europe-nikon.com/support/>
- For users in Asia, Oceania, the Middle East, and Africa: <http://www.nikon-asia.com/>

Visit these websites to keep up-to-date with the latest product information, tips, answers to frequently asked questions (FAQs), and general advice on digital imaging and photography. Additional information may be available from the Nikon representative in your area. Visit the website below for contact information.

<http://imaging.nikon.com/>

Use Only Nikon Brand Electronic Accessories

Nikon COOLPIX cameras are designed to the highest standards and include complex electronic circuitry. Only Nikon brand electronic accessories (including battery chargers, batteries, and AC adapters) certified by Nikon specifically for use with this Nikon digital camera are engineered and proven to operate within the operational and safety requirements of this electronic circuitry.

THE USE OF NON-NIKON ELECTRONIC ACCESSORIES COULD DAMAGE THE CAMERA AND MAY VOID YOUR NIKON WARRANTY.

For more information about Nikon brand accessories, contact a local authorized Nikon dealer.

Before Taking Important Pictures

Before taking pictures on important occasions (such as at weddings or before taking the camera on a trip), take a test shot to ensure that the camera is functioning normally. Nikon will not be held liable for damages or lost profits that may result from product malfunction.



About the Manuals

- No part of the manuals included with this product may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form, by any means, without Nikon's prior written permission.
- Illustrations and screen content shown in this manual may differ from the actual product.
- Nikon reserves the right to change the specifications of the hardware and software described in these manuals at any time and without prior notice.
- Nikon will not be held liable for any damages resulting from the use of this product.
- While every effort was made to ensure that the information in these manuals is accurate and complete, we would appreciate it were you to bring any errors or omissions to the attention of the Nikon representative in your area (address provided separately).

Comply with Copyright Notices

Under copyright law, photographs or recordings of copyrighted works made with the camera can not be used without the permission of the copyright holder. Exceptions apply to personal use, but note that even personal use may be restricted in the case of photographs or recordings of exhibits or live performances.

Disposing of Data Storage Devices

Please note that deleting images or formatting data storage devices such as memory cards or built-in camera memory does not completely erase the original image data. Deleted files can sometimes be recovered from discarded storage devices using commercially available software, potentially resulting in the malicious use of personal image data. Ensuring the privacy of such data is the user's responsibility.

Before discarding a data storage device or transferring ownership to another person, make sure to reset all of the camera's settings in **Reset all** in the setup menu (103). After resetting, erase all data in the device using commercial deletion software, or format the device in **Format memory** or **Format card** in the setup menu (103), then completely refill it with images containing no private information (for example, images of empty sky).

Care should be taken to avoid injury or damage to property when physically destroying memory cards.

Conformity Marking

Follow the procedure below to display some of the conformity markings that the camera complies with.

Press the **MENU** button →  menu icon → Conformity marking →  button



For Your Safety

To prevent damage to property or injury to yourself or to others, read "For Your Safety" in its entirety before using this product.

Keep these safety instructions where all those who use this product will read them.



DANGER

Failure to observe the precautions marked with this icon carries a high risk of death or severe injury.



WARNING

Failure to observe the precautions marked with this icon could result in death or severe injury.



CAUTION

Failure to observe the precautions marked with this icon could result in injury or property damage.



WARNING

- Do not use while walking or operating a motor vehicle. Failure to observe this precaution could result in accidents or other injury.
- Do not disassemble or modify this product. Do not touch internal parts that become exposed as the result of a fall or other accident. Failure to observe these precautions could result in electric shock or other injury.
- Should you notice any abnormalities such as the product producing smoke, heat, or unusual odors, immediately disconnect the batteries or power source. Continued operation could result in fire, burns or other injury.
- Keep dry. Do not handle with wet hands. Do not handle the plug with wet hands. Failure to observe these precautions could result in fire or electric shock.
- Do not let your skin remain in prolonged contact with this product while it is on or plugged in. Failure to observe this precaution could result in low-temperature burns.
- Do not use this product in the presence of flammable dust or gas such as propane, gasoline or aerosols. Failure to observe this precaution could result in explosion or fire.
- Do not aim the flash at the operator of a motor vehicle. Failure to observe this precaution could result in accidents.



- Keep this product out of reach of children. Failure to observe this precaution could result in injury or product malfunction. In addition, note that small parts constitute a choking hazard. Should a child swallow any part of this product, seek immediate medical attention.
- Do not entangle, wrap or twist the straps around your neck. Failure to observe this precaution could result in accidents.
- Do not use batteries, chargers, or AC adapters not specifically designated for use with this product. When using batteries, chargers, and AC adapters designated for use with this product, do not:
 - Damage, modify, forcibly tug or bend the cords or cables, place them under heavy objects, or expose them to heat or flame.
 - Use travel converters or adapters designed to convert from one voltage to another or with DC-to-AC inverters.Failure to observe these precautions could result in fire or electric shock.
- Do not handle the plug when using the AC adapter during thunderstorms. Failure to observe this precaution could result in electric shock.
- Do not handle with bare hands in locations exposed to extremely high or low temperatures. Failure to observe this precaution could result in burns or frostbite.

CAUTION

- Turn this product off when its use is prohibited. Disable wireless features when the use of wireless equipment is prohibited. The radio-frequency emissions produced by this product could interfere with equipment onboard aircraft or in hospitals or other medical facilities.
- Remove the batteries and disconnect the AC adapter if this product will not be used for an extended period. Failure to observe this precaution could result in fire or product malfunction.
- Do not touch moving parts of the lens or other moving parts. Failure to observe this precaution could result in injury.
- Do not fire the flash in contact with or in close proximity to the skin or objects. Failure to observe this precaution could result in burns or fire.
- Do not leave the product where it will be exposed to extremely high temperatures, for an extended period such as in an enclosed automobile or in direct sunlight. Failure to observe this precaution could result in fire or product malfunction.





DANGER for Batteries

- Do not mishandle batteries. Failure to observe the following precautions could result in the batteries leaking, overheating, rupturing, or catching fire:
 - Do not attempt to recharge non-rechargeable batteries.
 - Do not expose batteries to flame or excessive heat.
 - Do not disassemble.
 - Do not short circuit the terminals by touching them to necklaces, hairpins, or other metal objects.
 - Do not expose batteries or the products in which they are inserted to powerful physical shocks.
- Recharge all EN-MH2 rechargeable batteries in each pack of four simultaneously. Failure to observe this precaution could result in the batteries leaking, overheating, rupturing, or catching fire.
- If battery liquid comes into contact with the eyes, rinse with plenty of clean water and seek immediate medical attention. Delaying action could result in eye injuries.



WARNING for Batteries

- Do not remove or damage the battery casing. Never use batteries with damaged casing. Failure to observe this precaution could result in the batteries leaking, overheating, rupturing, or catching fire.
- Keep batteries out of reach of children. Should a child swallow a battery, seek immediate medical attention.
- Do not immerse this product in water or expose to rain. Failure to observe this precaution could result in fire or product malfunction. Immediately dry the product with a towel or similar object should it become wet.
- Discontinue use immediately should you notice any changes in the batteries, such as discoloration or deformation. Cease charging EN-MH2 rechargeable batteries if they do not charge in the specified period of time. Failure to observe this precaution could result in the batteries leaking, overheating, rupturing, or catching fire.
- Insert batteries in the correct orientation. Do not mix old and new batteries or batteries of different types. Failure to observe this precaution could result in the batteries leaking, overheating, rupturing, or catching fire.
- Prior to disposal, insulate battery terminals with tape. Overheating, rupture, or fire may result should metal objects come into contact with the terminals. Recycle or dispose of batteries in accord with local regulations.



- If battery liquid comes into contact with a person's skin or clothing, immediately rinse the affected area with plenty of clean water. Failure to observe this precaution could result in skin irritation.



Table of Contents

Quick Topic Search	ii
Main Topics.....	ii
Common Topics	ii
Introduction	iii
Read This First.....	iii
Symbols and Conventions Used in This Manual	iii
Information and Precautions	iv
For Your Safety	vi
Parts of the Camera	1
The Camera Body.....	2
The Monitor	4
Switching the Information Displayed on the Screen (DISP Button).....	4
For Shooting.....	5
For Playback.....	7
Getting Started.....	9
How to Attach the Camera Strap and Lens Cap	10
Inserting the Batteries and Memory Card.....	11
Applicable Batteries.....	11
Removing the Batteries or Memory Card.....	12
Memory Cards and Internal Memory.....	12
Changing the Angle of the Monitor.....	13
Camera Setup.....	14
Basic Shooting and Playback Operations	16
Shooting Images.....	17
Using the Flash	19
Recording Movies	19
Playing Back Images	20
Deleting Images	21
The Image Selection Screen for Deletion	22



Connecting to a Smart Device (SnapBridge)	23
Installing the SnapBridge App	24
Connecting the Camera and a Smart Device	25
Disabling or Enabling the Wireless Connection	28
Image Upload and Remote Photography	29
Image Upload	29
Remote Photography	30
If a Dialog Related to Wi-Fi Connections Is Displayed in iOS	30
If Images Cannot Be Uploaded Successfully	31
Shooting Features	32
Selecting a Shooting Mode	33
■ (Auto) Mode	34
Using the Creative Slider	34
Scene Mode (Shooting Suited to the Shooting Conditions)	36
Tips and Notes About Scene Mode	37
Shooting with Easy Panorama	43
Playback with Easy Panorama	45
Creative Mode (Applying Effects When Shooting)	46
Smart Portrait Mode (Enhancing Human Faces When Shooting)	48
Using Smile Timer	49
Using Self-Collage	50
Setting Shooting Functions with the Multi Selector	51
Flash Mode	52
Self-timer	54
Macro Mode (Taking Close-up Pictures)	56
Exposure Compensation (Adjusting Brightness)	57
Using the Zoom	58
Focusing	60
The Shutter-release Button	60
Using Target Finding AF	60
Using Face Detection	61
Using Skin Softening	62
Subjects Not Suitable for Autofocus	62
Focus Lock	63
Default Settings (Flash, Self-timer, and Macro Mode)	64
Functions That Cannot Be Used Simultaneously When Shooting	66



Playback Features.....	68
Playback Zoom	69
Thumbnail Playback/Calendar Display.....	70
List by Date Mode.....	71
Viewing and Deleting Images in a Sequence.....	72
Viewing Images in a Sequence.....	72
Deleting Images in a Sequence	73
Editing Images (Still Images)	74
Before Editing Images	74
Quick Effects: Changing Hue or Mood	74
Quick Retouch: Enhancing Contrast and Saturation	75
D-Lighting: Enhancing Brightness and Contrast	75
Red-eye Correction: Correcting Red-eye When Shooting with the Flash	76
Glamour Retouch: Enhancing Human Faces.....	76
Small Picture: Reducing the Size of an Image	78
Crop: Creating a Cropped Copy.....	79
 Movies	 80
Basic Operations of Movie Recording and Movie Playback	81
Capturing Still Images While Recording Movies	84
Short Movie Show Mode (Combining Movie Clips to Create Short Movies)	85
Using Special Effects.....	87
Operations During Movie Playback	88
Editing Movies	89
Extracting Only the Desired Portion of a Movie	89
Saving a Frame from a Movie as a Still Image	90
 Connecting the Camera to a TV, Printer, or Computer.....	 91
Utilizing Images.....	92
Viewing Images on a TV	93
Printing Images Without a Computer.....	95
Connecting the Camera to a Printer	95
Printing Images One at a Time	96
Printing Multiple Images	97
Transferring Images to a Computer (ViewNX-i).....	99
Installing ViewNX-i.....	99
Transferring Images to a Computer	99



Using the Menu.....	102
Menu Operations.....	103
The Image Selection Screen.....	105
Menu Lists	106
The Shooting Menu.....	106
The Movie Menu.....	107
The Playback Menu.....	107
The Network Menu	108
The Setup Menu	109
The Shooting Menu (The Common Shooting Options).....	110
Image Mode (Image Size and Quality).....	110
The Shooting Menu (for  (Auto) Mode).....	111
White Balance (Adjusting Hue).....	111
Continuous Shooting.....	113
ISO Sensitivity	115
AF Area Mode.....	116
Autofocus Mode	119
The Smart Portrait Menu.....	120
Self-Collage	120
Blink Proof	121
The Movie Menu	122
Movie Options.....	122
Autofocus Mode	126
Movie VR	127
Wind Noise Reduction	127
Frame Rate.....	128
The Playback Menu.....	129
Mark for Upload.....	129
Slide Show	130
Protect.....	131
Rotate Image.....	131
Copy (Copy Between the Memory Card and Internal Memory).....	132
Sequence Display Options	133
The Network Menu	134
Operating the Text Input Keyboard.....	135



The Setup Menu	136
Time Zone and Date	136
Monitor Settings	138
Date Stamp	139
Photo VR	140
AF Assist	140
Digital Zoom	141
Sound Settings	141
Auto Off	142
Format Card/Format Memory	143
Language	143
Image Comment	144
Copyright Information	145
Location Data	146
Reset All	146
Battery Type	147
Conformity Marking	147
Firmware Version	147
 Technical Notes	 148
Notices	149
Notes About Wireless Communication Functions	151
Caring for the Product	154
The Camera	154
Batteries	155
Memory Cards	156
Cleaning and Storage	157
Cleaning	157
Storage	157
Error Messages	158
Troubleshooting	161
File Names	169
Optional Accessories	170
Specifications	171
Memory Cards That Can Be Used	175
Index	177




Parts of the Camera

The Camera Body	2
The Monitor	4




The Camera Body

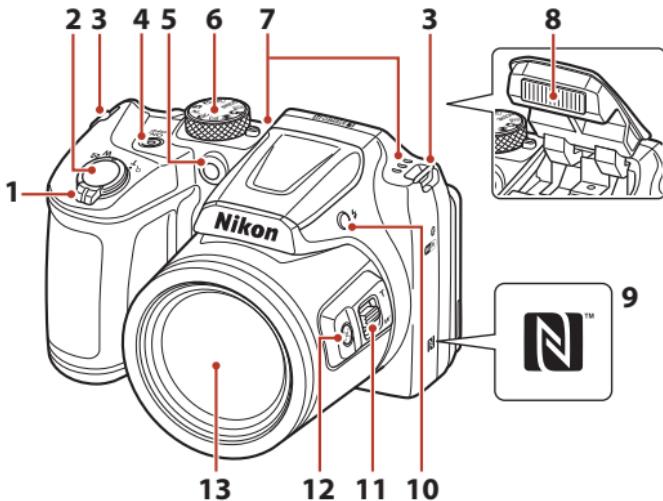

1	Zoom control	58
	W : Wide-angle	58
	T : Telephoto	58
	Thumbnail playback	70
	Playback zoom	69
2	Shutter-release button	18
3	Eyelet for camera strap	10
4	Power switch/power-on lamp	14
5	Self-timer lamp	54
6	AF-assist illuminator	54
	Mode dial	17, 33

7	Microphone (stereo)	58
8	Flash	19, 52
9	N-Mark (NFC antenna)	25
10	Flash pop-up button	19, 52
11	Side zoom control	58
12	Snapshot (snap-back zoom) button	59
13	Lens	



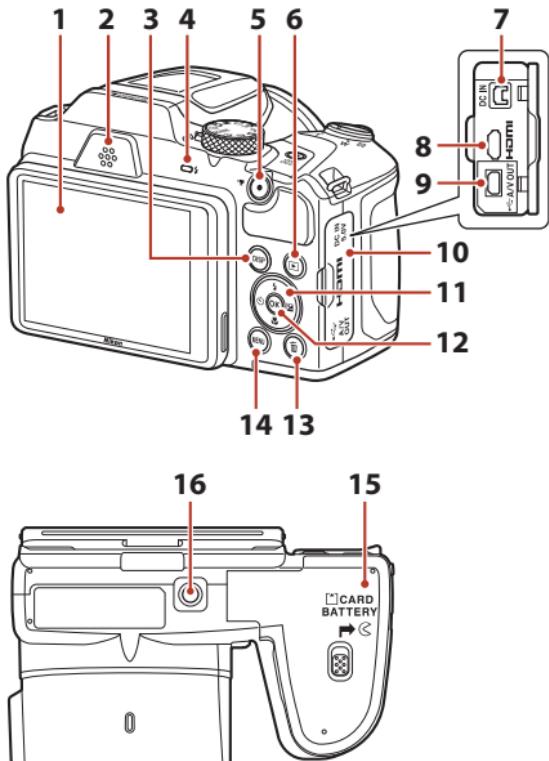

1	Monitor.....	4, 13
2	Speaker.....	
3	DISP (display) button	4
4	Flash lamp.....	52
5	● (movie-record) button.....	81
6	▶ (playback) button	20
7	DC input connector (for AC adapter available separately from Nikon)	170
8	HDMI micro connector (Type D)	92
9	USB/audio/video output connector	92
10	Connector cover.....	92
11	Multi selector	103
12	OK (apply selection) button.....	103
13	trash (delete) button	21
14	MENU (menu) button.....	103
15	Battery-chamber/ memory card slot cover	11
16	Tripod socket	173




The Monitor

The information that is displayed on the shooting or playback screen changes depending on the camera's settings and state of use.

Switching the Information Displayed on the Screen (DISP Button)

To switch the information displayed on the screen during shooting or playback, press the **DISP** (display) button.

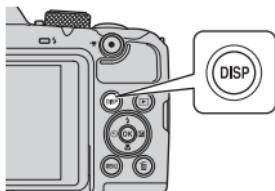

For Shooting



Show information



Movie frame
Display the range of a movie in a frame.




Hide information

For Playback



Show information

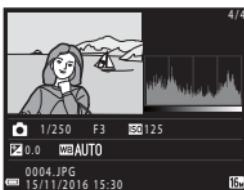


Tone level information (except movies)
Display a histogram, tone level and shooting information (8).



Hide information




For Shooting

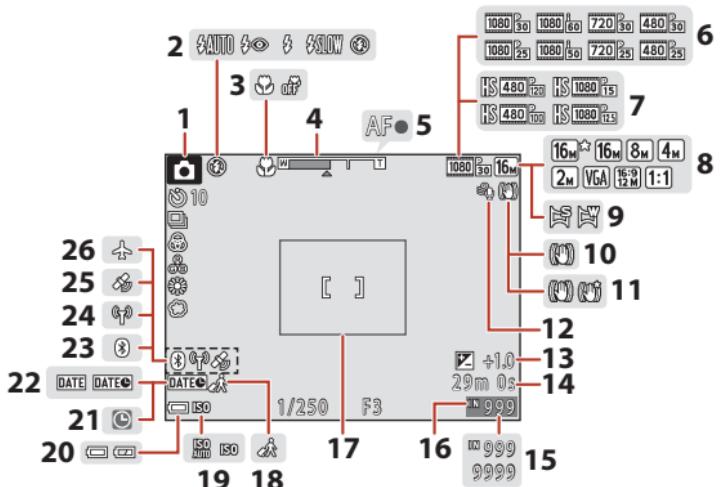

1	Shooting mode	33
2	Flash mode.....	52
3	Macro mode	56
4	Zoom indicator.....	56, 58
5	Focus indicator.....	18
6	Movie options (normal speed movies)	122
7	Movie options (HS movies)	123
8	Image mode.....	110
9	Easy panorama.....	43
10	Photo VR icon	140
11	Movie VR icon.....	127
12	Wind noise reduction	127
13	Exposure compensation value	34, 48, 57
14	Remaining movie recording time....	81
15	Number of exposures remaining (still images).....	17
16	Internal memory indicator	17
17	Framing border (Moon or Bird-watching scene mode, or snap-back zoom).....	42, 59
18	Travel destination icon.....	136
19	ISO sensitivity.....	115
20	Battery level indicator.....	17
21	“Date not set” indicator	162
22	Date stamp.....	139
23	Bluetooth communication indicator	135
24	Wi-Fi communication indicator	134
25	Location data	146
26	Airplane mode	134




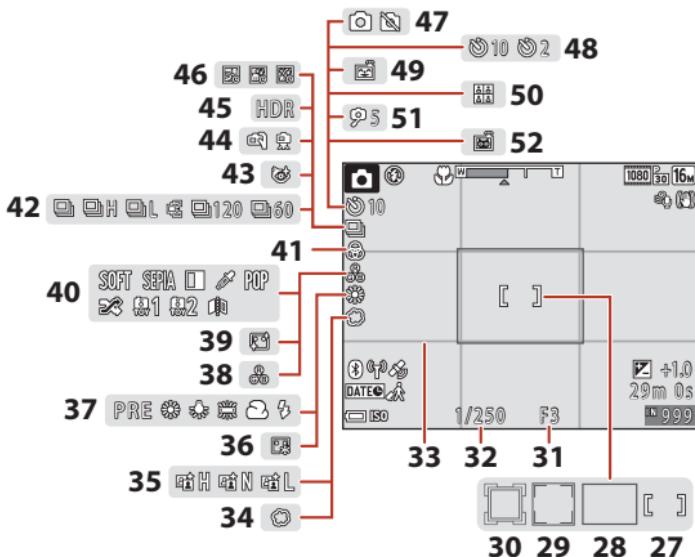

27	Focus area (manual or center)	63, 116
28	Focus area (target finding AF)	60, 117
29	Focus area (face detection, pet detection)	41, 48, 61, 116
30	Focus area (subject tracking)	117, 118
31	F-number	60
32	Shutter speed	60
33	View/hide framing grid	138
34	Soft	48
35	Active D-Lighting	34
36	Foundation makeup	48
37	White balance	111
38	Hue	34
39	Skin softening	48
40	Special effects	87
41	Vividness	34
42	Continuous shooting mode	41, 113
43	Blink proof icon	121
44	Hand-held/tripod	37, 38
45	Backlighting (HDR)	38
46	Multiple exp. Lighten	39
47	Still image capture (during movie recording)	84
48	Self-timer indicator	54
49	Smile timer	49
50	Self-Collage	50, 120
51	Self-portrait timer	54
52	Pet portrait auto release	41



For Playback

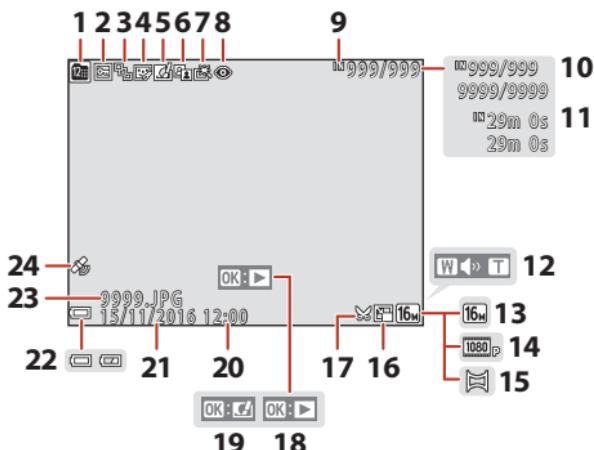


1	List by date icon	71
2	Protect icon	131
3	Sequence display (when Individual pictures is selected)	133
4	Glamour retouch icon	76
5	Quick effects icon	74
6	D-Lighting icon	75
7	Quick retouch icon	75
8	Red-eye correction icon	76
9	Internal memory indicator	
10	Current image number/total number of images	
11	Movie length or elapsed playback time	
12	Volume indicator	88
13	Image mode	110
14	Movie options	122
15	Easy panorama	45
16	Small picture icon	78
17	Crop icon	69, 79
18	Easy panorama playback guide	
19	Sequence playback guide	
20	Movie playback guide	
21	Quick effects guide	
22	Time of recording	17
23	Date of recording	
24	Battery level indicator	
25	File number and type	169
26	Recorded location data indicator	146



Tone Level Information Display

You can check for loss of contrast detail in highlights and shadows from the histogram that is displayed, or the display for the tone level. These provide guidelines when adjusting the image brightness with functions such as exposure compensation.

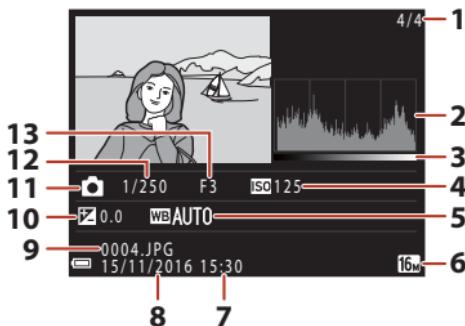

¹ A histogram is a graph showing the distribution of tones in the image. The horizontal axis corresponds to pixel brightness, with dark tones to the left and bright tones to the right. The vertical axis shows the number of pixels.

² The tone level indicates the brightness level.





Getting Started

How to Attach the Camera Strap and Lens Cap.....	10
Inserting the Batteries and Memory Card	11
Changing the Angle of the Monitor	13
Camera Setup	14



How to Attach the Camera Strap and Lens Cap

Attach the lens cap to the camera strap, and then attach the strap to the camera.

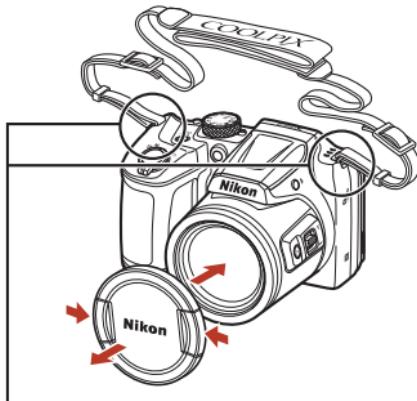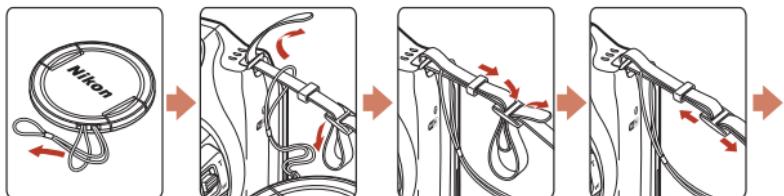



Attach the strap at two places.

✓ Lens Cap

- When the camera is not in use, attach the lens cap to the lens to protect it.
- If you turn on the camera without removing the lens cap, the message "**Turn the camera off and then on again.**" is displayed. Remove the lens cap, and turn the camera off and then on again.



Inserting the Batteries and Memory Card

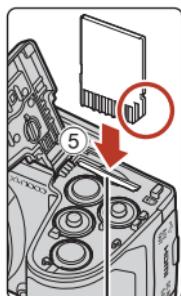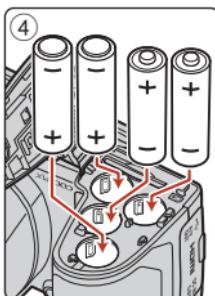

Memory card slot

- Hold the camera upside down to prevent the batteries from falling out, confirm that the positive (+) and negative (-) terminals of the batteries are oriented correctly, and insert the batteries.
- Slide the memory card in until it clicks into place (⑤).
- Be careful not to insert the batteries or memory card upside-down or backward, as this could cause a malfunction.
- When closing the cover, slide it while securely holding down the area marked ⑦.

✓ Formatting a Memory Card

The first time you insert a memory card that has been used in another device into this camera, make sure to format it with this camera.

- **Note that formatting a memory card permanently deletes all images and other data on the memory card.** Be sure to make copies of any images you wish to keep before formatting the memory card.
- Insert the memory card into the camera, press the **MENU** button, and select **Format card** in the setup menu (103).

Applicable Batteries

- Four LR6/L40 (AA-size) alkaline batteries (included batteries*)
- Four FR6/L91 (AA-size) lithium batteries
- Four EN-MH2 Rechargeable Ni-MH (nickel metal hydride) batteries

 
EN-MH1 Rechargeable Ni-MH batteries cannot be used.

- * Although the batteries are described as being "included" in this manual, the batteries may not be included depending on the country or region in which the camera was purchased.




✓ Notes About the Batteries


- Do not combine old and new batteries or batteries of different makes or types.
- Batteries with the following defects cannot be used:



Batteries with peeling

 

 Batteries with insulation
that does not cover the
area around the
negative terminal



Batteries with a flat
negative terminal

✓ Notes About EN-MH2 Rechargeable Ni-MH Batteries

When using EN-MH2 batteries with the camera, charge four batteries at a time using MH-73 Battery Charger (155).

⊖ Alkaline Batteries

Performance of alkaline batteries may vary greatly depending on the brand.

Removing the Batteries or Memory Card

Turn the camera off and make sure that the power-on lamp and screen have turned off, and then open the battery-chamber/memory card slot cover.

- Gently push the memory card into the camera to partially eject the memory card.
- Be careful when handling the camera, batteries, and memory card immediately after using the camera, as they may be hot.


Memory Cards and Internal Memory

Camera data, including images and movies, can be saved either on a memory card or in the camera's internal memory. To use the camera's internal memory, remove the memory card.



Changing the Angle of the Monitor

The angle of the monitor can be lowered down to approx. 85° or raised upward to approx. 90°.

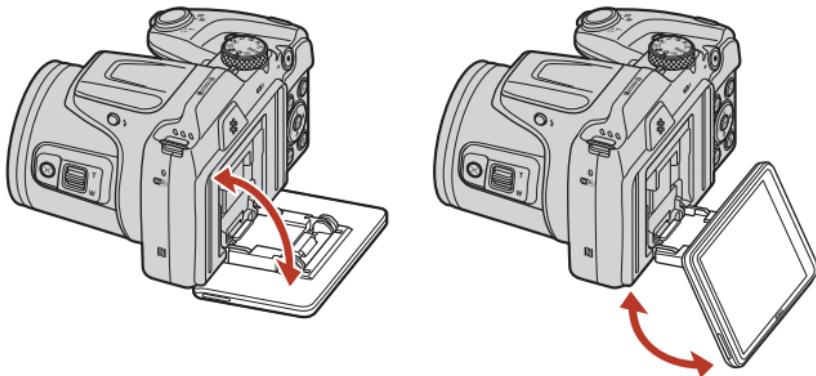

✓ Notes About the Monitor

- Do not apply excessive force when changing the angle of the monitor.
- The monitor cannot be moved to the left or right.
- Put the monitor back in the original position when using in normal situations.




Camera Setup

Remove the lens cap before turning on the camera.

1 Press the power switch to turn on the camera.

- Use the multi selector to select and adjust settings.


Power switch

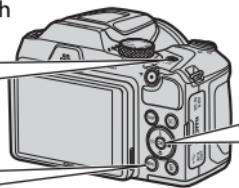


MENU button

Multi selector

OK button
(apply selection)

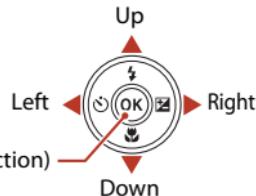


- A language selection dialog will be displayed. Press $\blacktriangle\blacktriangledown$ on the multi selector to highlight a language and press the OK button to select.
- The language can be changed at any time using the setup menu (103) \rightarrow **Language**.

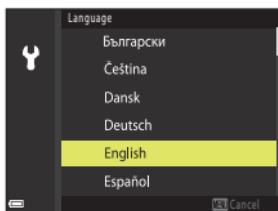

2 When the dialog at right is displayed, follow the instructions below and press the MENU button or OK button.

- If you will not establish a wireless connection with a smart device: Press the MENU button and proceed to step 3.
- If you will establish a wireless connection with a smart device: Press the OK button. See "Connecting to a Smart Device (SnapBridge)" (23) for information about the setup procedure.

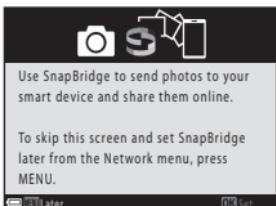

3 When prompted to set the camera clock, press $\blacktriangle\blacktriangledown$ to highlight Yes and press the OK button.



4 Highlight your home time zone and press the **OK** button.


- Press **▲** to set daylight saving time. When it is on, the time is one hour earlier and  is displayed at the top of the map. Press **▼** to turn daylight saving time off.



5 Press **▲▼** to select a date format and press the **OK** button.

6 Enter the current date and time and press the **OK** button.

- Press **◀▶** to highlight items and press **▲▼** to change.
- Press the **OK** button to set the clock.

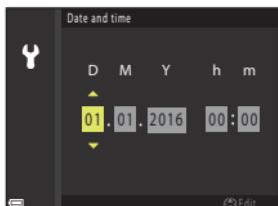

7 When prompted, select **Yes** and press the **OK** button.

- Setup is complete when the camera switches to the shooting screen.
- The time zone and date can be changed at any time using the setup menu (103) **→ Time zone and date**.



Basic Shooting and Playback Operations


Shooting Images.....	17
Playing Back Images.....	20
Deleting Images.....	21




Shooting Images

 (auto) mode is used here as an example.  (auto) mode enables you to perform general shooting in a variety of shooting conditions.

1 Rotate the mode dial to .


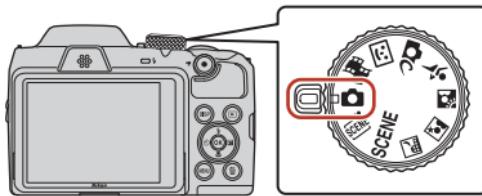


- Battery level indicator
: The battery level is high.
: The battery level is low.
- Number of exposures remaining
 is displayed when no memory card is inserted in the camera, and images are saved in the internal memory.
- Press the **DISP** (display) button to switch the information displayed on the screen each time.

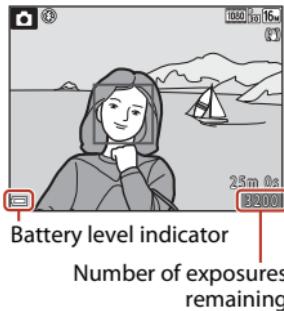


2 Hold the camera steady.

- Keep fingers and other objects away from the lens, flash, AF-assist illuminator, microphone, and speaker.

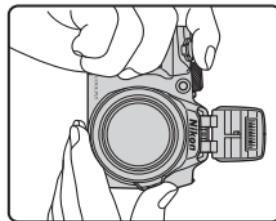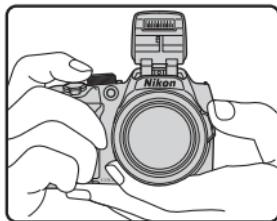


3 Frame the picture.

- Move the zoom control or the side zoom control to change the zoom lens position.
- If you lose sight of the subject while shooting with the lens in telephoto position, press the  (snap-back zoom) button to temporarily widen the visible area so that you can frame the subject more easily.

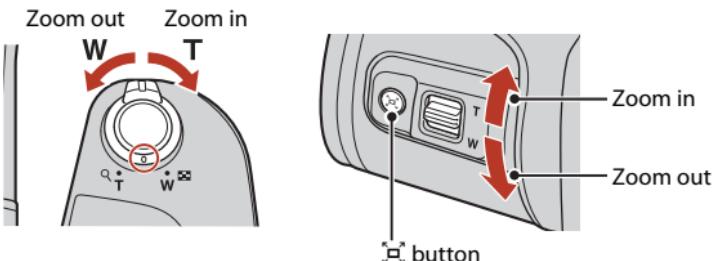

4 Press the shutter-release button halfway.

- To press the shutter-release button "halfway" means to press and hold the button at the point where you feel a slight resistance.
- When the subject is in focus, the focus area or focus indicator is displayed in green.
- When you are using digital zoom, the camera focuses in the center of the frame and the focus area is not displayed.
- If the focus area or focus indicator flashes, the camera is unable to focus. Modify the composition and try pressing the shutter-release button halfway again.

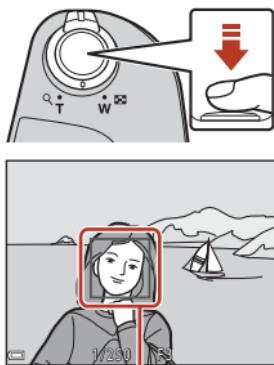

Focus area

5 Without lifting your finger, press the shutter-release button all the way down.



Notes About Saving Images or Movies

The indicator showing the number of exposures remaining or the indicator showing the remaining recording time flashes while images or movies are being saved. **Do not open the battery-chamber/memory card slot cover or remove the batteries or memory card** while an indicator is flashing. Doing this could result in loss of data, or in damage to the camera or the memory card.



The Auto Off Function

- When no operations are performed for about one minute, the screen turns off, the camera enters standby mode, and then the power-on lamp flashes. The camera turns off after remaining in standby mode for about three minutes.
- To turn the screen back on while the camera is in standby mode, perform an operation such as pressing the power switch or shutter-release button.


When Using a Tripod

- We recommend using a tripod to stabilize the camera in the following situations:
 - When the flash is lowered in dark locations or when using a shooting mode in which the flash does not fire
 - When the zoom is at a telephoto position
- When using a tripod to stabilize the camera during shooting, set **Photo VR** to **Off** in the setup menu (103) to prevent potential errors caused by this function.

Using the Flash

In situations where a flash is needed, such as in dark locations or when the subject is backlit, press the  (flash pop-up) button to raise the flash.

- When not using the flash, gently push to lower the flash until it clicks shut.

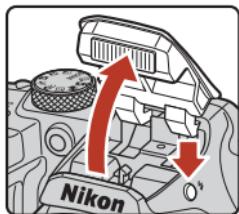

Recording Movies


Display the shooting screen and press the  (movie-record) button to start recording a movie. Press the  button again to end recording.



Playing Back Images

1 Press the **▶** (playback) button to enter playback mode.

- If you press and hold down the **▶** button while the camera is turned off, the camera turns on in playback mode.

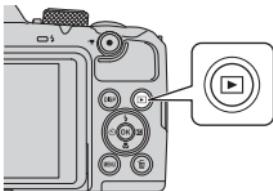

2 Use the multi selector to select an image to display.

- Press and hold down **▲▼◀▶** to scroll through the images quickly.
- Press the **DISP** (display) button to switch the information displayed on the screen each time.
- To play back a recorded movie, press the **OK** button.
- To return to shooting mode, press the **▶** button or shutter-release button.
- When **OK:** is displayed in full-frame playback mode, you can press the **OK** button to apply an effect to the image.

Display the previous image



Display the next image



- Move the zoom control toward **T (Q)** in full-frame playback mode to zoom in on an image.




- In full-frame playback mode, move the zoom control toward **W (□)** to switch to thumbnail playback mode and display multiple images on the screen.




Deleting Images

1 Press the  (delete) button to delete the image currently displayed on the screen.

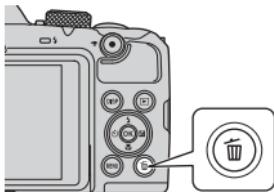


2 Use the multi selector  to select the desired deletion method and press the  button.

- To exit without deleting, press the **MENU** button.

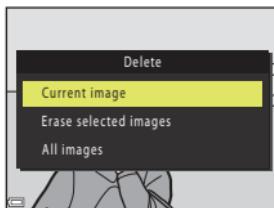

3 Select **Yes** and press the  button.

- Deleted images cannot be recovered.

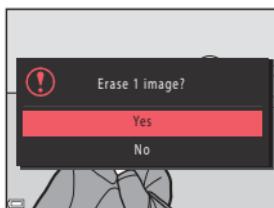

Deleting Images in a Sequence

- Images captured continuously, or with the multiple exposure, lighten, creative mode, or self-collage function, are saved as a sequence, and only one image in the sequence (the key picture) is displayed in playback mode (default setting).
- If you press the  button while a key picture is displayed for a sequence of images, all images in the sequence are deleted.
- To delete individual images in a sequence, press the  button to display them one at a time and press the  button.



Deleting the Image Captured While in Shooting Mode

When using shooting mode, press the  button to delete the last image that was saved.



The Image Selection Screen for Deletion

1 Use the multi selector to select the image that you want to delete.

- Move the zoom control (2) toward **T** (Q) to switch to full-frame playback, or **W** (F) to switch to thumbnail playback.



2 Use to select **ON** or **OFF**.

- When **ON** is selected, an icon is displayed under the selected image. Repeat steps 1 and 2 to select additional images.



3 Press the button to apply the image selection.

- A confirmation dialog is displayed. Follow the on-screen instructions to operate.



Connecting to a Smart Device (SnapBridge)

Installing the SnapBridge App.....	24
Connecting the Camera and a Smart Device	25
Image Upload and Remote Photography	29



Installing the SnapBridge App

When you install the SnapBridge app and establish a wireless connection between a SnapBridge-supported camera and smart device, you can upload images captured with the camera to the smart device, or use the smart device to release the camera shutter (29).



- Procedures are described using the SnapBridge app Version 2.0. Use the latest version of the SnapBridge app. The operating procedures may vary depending on the camera's firmware, version of the SnapBridge app, or OS of the smart device.
- See the documentation provided with the smart device for information on how to use it.

1 Install the SnapBridge app on the smart device.

- Download the app from the Apple App Store® for iOS, and from Google Play™ for Android™. Search for "snapbridge" and then install it.




- Visit the applicable download site for more information about supported OS versions.
- The "SnapBridge 360/170 app" cannot be used with this camera.

2 Enable Bluetooth and Wi-Fi on the smart device.

- **Use the SnapBridge app to connect to the camera. You cannot connect from the Bluetooth settings screen on the smart device.**

Screens in the SnapBridge App

- ① You can view notices from Nikon and the SnapBridge app Help, as well as configure the app's settings.
- ② Primarily perform connection settings for smart devices and cameras.
- ③ You can view, delete, or share images downloaded from the camera.

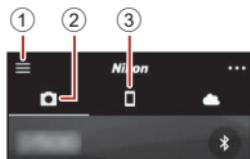


Connecting the Camera and a Smart Device

- Use a sufficiently charged battery so that the camera does not turn off during the procedure.
- Insert a memory card with sufficient free space into the camera.



1 Camera: Select Network menu (103) → Connect to smart device, and press the **OK** button.

- The dialog in step 2 is displayed when you turn on the camera for the first time. This step is unnecessary in such cases.

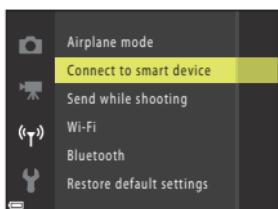


2 Camera: Press the **OK** button when the dialog on the right is displayed.

- A dialog prompting you whether to use the NFC function is displayed. If you will use the NFC function, touch the NFC antenna of the smart device to **N** (N-mark) on the camera. When **Start pairing?** is displayed on the smart device, tap **OK** and proceed to step 6. If you will not use the NFC function, press the **OK** button.

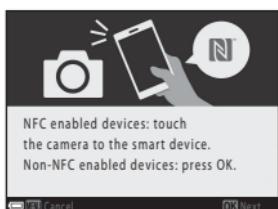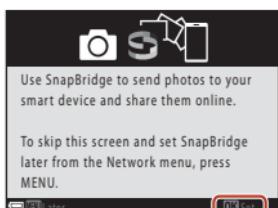

3 Camera: Confirm that the dialog on the right is displayed.

- Prepare the smart device and proceed to the next step.

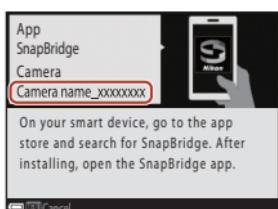


4 Smart device: Launch the SnapBridge app and tap **Pair with camera**.

- When the dialog to select a camera is displayed, tap the camera you want to connect to.
- If you did not connect to the camera by tapping **Skip** at the upper-right of the screen when launching the SnapBridge app for the first time, tap **Pair with camera** in the  tab and proceed to step 5.




5 Smart device: In the **Pair with camera** screen, tap the camera name.

- For iOS, if a dialog explaining the procedure is displayed when connecting, confirm the details and tap **Understood** (if it is not displayed, scroll down the screen). Tap the camera name again when the screen to select an accessory is displayed (it may take some time for the camera name to be displayed.).

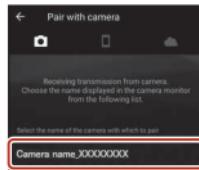


6 Camera/smart device: Confirm that the camera and smart device display the same number (six digits).

- For iOS, the number may not be displayed on the smart device depending on the OS version. Proceed to step 7 in such cases.

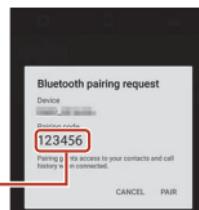


7 Camera/smart device: Press the **OK** button on the camera and **PAIR** in the SnapBridge app.

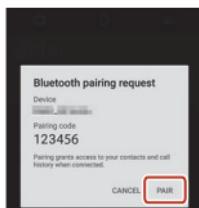

8 Camera/smart device: Finish the connection settings.

Camera: Press the **OK** button when the dialog on the right is displayed.

Smart device: Tap **OK** when the dialog indicating that pairing is complete is displayed.

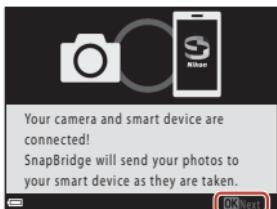

9 Camera: Follow the on-screen instructions to complete the setup process.

- To record location data with photographs, select **Yes** when prompted and enable the location data features. Enable location data features on the smart device, and in the **Camera** tab of the SnapBridge app → **Auto link options** → enable **Synchronize location data**.
- You can synchronize the camera clock to the time reported by the smart device by selecting **Yes** when prompted. In the **Camera** tab of the SnapBridge app → **Auto link options** → enable **Synchronize clocks**.

Connecting the camera and smart device is complete.

Still images captured with the camera are automatically uploaded to the smart device.

To Learn More About the SnapBridge App


See the online help for details on how to use the SnapBridge app (after connecting, refer to the SnapBridge app menu → **Help**).

<https://nikonimglib.com/snbr/onlinehelp/en/index.html>



If the Connection Is Unsuccessful

- If the camera displays **Could not connect.** when connecting
 - Press the **OK** button and repeat the procedure from step 2 (25) in "Connecting the Camera and a Smart Device" to connect again.
 - Press the **MENU** button to cancel the connection.
- The issue may be solved by relaunching the app. Close the SnapBridge app completely and then tap the app icon again to launch it. When the app launches, repeat the procedure from step 1 (25) in "Connecting the Camera and a Smart Device."
- If the camera cannot connect and an error occurs in iOS, the camera may be registered as a device in iOS. Launch the iOS settings app and deregister the device (camera name) in such cases.

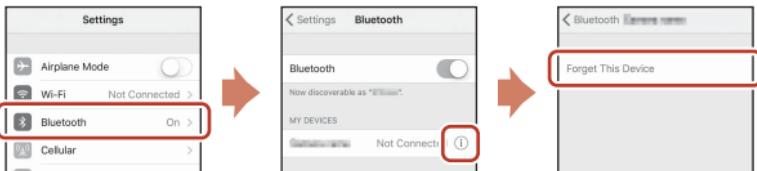

Disabling or Enabling the Wireless Connection

Use any of the following methods to disable or enable the connection.

- Switch the setting in **Network menu** → **Airplane mode** in the camera. You can set it to **On** to turn off all communication functions in places where wireless communication is prohibited.
- Switch the setting in **Network menu** → **Bluetooth** → **Connection** in the camera.
- Switch the setting in the **Camera** tab → **Auto link options** → **Auto link** in the SnapBridge app.

You can reduce battery consumption of the smart device by disabling this setting.



Image Upload and Remote Photography

Image Upload


There are three ways to upload images.

Automatically upload images to the smart device every time they are captured ^{1,2}	Network menu in the camera → Send while shooting → set Still images to Yes . Movies cannot be uploaded automatically.
Select images in the camera and upload them to the smart device ^{1,2}	Playback menu in the camera → use Mark for upload to select images. Movies cannot be selected for upload.
Use the smart device to select images in the camera and download them to the smart device	 tab in the SnapBridge app → tap Download pictures . A dialog related to Wi-Fi connections is displayed. Tap OK ³ and select images.

- 1 The size of images that are uploaded is 2 megapixels (images captured using **Easy panorama** scene mode are uploaded at their original size).
- 2 When **Network menu** → **Bluetooth** → **Send while off** in the camera is set to **On**, images are uploaded to the smart device automatically even when the camera is turned off.
- 3 Depending on the iOS version, you must select the camera SSID when you tap **OK**. See "If a Dialog Related to Wi-Fi Connections Is Displayed in iOS" (30).

Notes About When in a Wi-Fi Connection

 - If the smart device enters sleep mode or you switch from the SnapBridge app to another app, the Wi-Fi connection will be disconnected.
- Some functions of the SnapBridge app cannot be used during a Wi-Fi connection. To cancel a Wi-Fi connection, tap the  tab →  → **Yes**.



Remote Photography

You can tap the  tab in the SnapBridge app → **Remote photography** to release the camera shutter using a smart device.


- Follow the instructions in the SnapBridge app to switch to a Wi-Fi connection. In iOS, a dialog related to Wi-Fi connections may be displayed. In such a case, see "If a Dialog Related to Wi-Fi Connections Is Displayed in iOS" (□30).

If a Dialog Related to Wi-Fi Connections Is Displayed in iOS

The SnapBridge app normally connects the camera and smart device via Bluetooth. However, switch to a Wi-Fi connection when using **Download pictures** or remote photography. Depending on the iOS version, you must switch the connection manually. In such a case, use the following procedure to set the connection.

1 Write down the camera SSID (camera name at default) and password displayed in the smart device, and then tap **View options**.

- You can change the SSID or password by using **Network menu** → **Wi-Fi** → **Network settings** in the camera. To protect your privacy, we recommend that you change the password regularly. Disable the wireless connection when changing the password (□28).

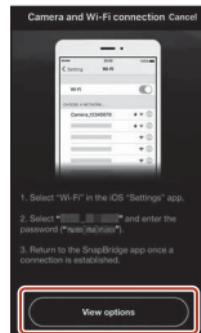


2 Select the SSID you wrote down in step 1 from the list of connections.

- When you connect for the first time, input the password you wrote down in step 1 while taking note of uppercase and lowercase characters. Inputting the password is unnecessary after the first time connecting.
- The Wi-Fi connection is complete when  is displayed next to the camera SSID as shown in the screen on the right. Return to the SnapBridge app and operate the app.



If Images Cannot Be Uploaded Successfully

- If the connection is disconnected while uploading images through the **Send while shooting** or **Mark for upload** function in the camera, the connection and image upload may resume when you turn the camera off and then on again.
- You may be able to upload by canceling the connection and then establishing a connection again. Tap the  tab in the SnapBridge app →  → **Forget camera** → camera whose connection you want to cancel → **Yes*** to cancel the connection, and then follow the instructions in "Connecting the Camera and a Smart Device" (25) to establish a connection again.
 - * For iOS, a dialog about device registration will be displayed. Launch the iOS settings app and deregister the device (camera name).

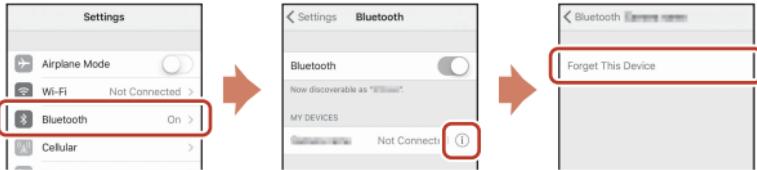

✓ Notes About Image Upload and Remote Photography

- When the camera is being operated, you may be unable to upload images or uploading may be canceled, or you may be unable to perform remote photography using the SnapBridge app.
- When the camera is set to the following, you cannot upload images or use remote photography. Change the settings or switch to playback mode.
 - **Night landscape** (when  **Hand-held** is selected), **Night portrait** (when  **Hand-held** is selected), **Backlighting** (when **HDR** is set to **On**), **Sports**, **Multiple exp.**, **Lighten**, **Easy panorama**, **Pet portrait** (when  **Continuous** is selected), or **Bird-watching** (when  **Continuous** is selected) scene mode
 - **Self-Collage**
 - When **Blink proof** is set to **On**
 - When **Continuous** is set to **Continuous H**, **Continuous L**, **Pre-shooting cache**, **Continuous H: 120 fps**, or **Continuous H: 60 fps**




Shooting Features

Selecting a Shooting Mode	33
■ (Auto) Mode	34
Scene Mode (Shooting Suited to the Shooting Conditions)	36
Creative Mode (Applying Effects When Shooting)	46
Smart Portrait Mode (Enhancing Human Faces When Shooting)	48
Setting Shooting Functions with the Multi Selector	51
Flash Mode	52
Self-timer	54
Macro Mode (Taking Close-up Pictures)	56
Exposure Compensation (Adjusting Brightness)	57
Using the Zoom	58
Focusing	60
Default Settings (Flash, Self-timer, and Macro Mode)	64
Functions That Cannot Be Used Simultaneously When Shooting	66



Selecting a Shooting Mode

You can rotate the mode dial to align the desired shooting mode with the indicator mark on the camera body.

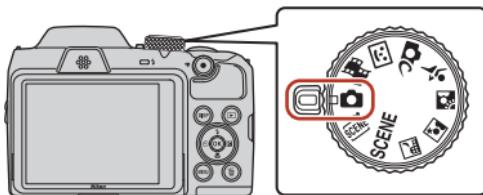

- **Auto (Auto) mode**

Select this mode to perform general shooting in a variety of shooting conditions.

- **SCENE, SCENE, SCENE, SCENE, SCENE (Scene) modes**

Select any one of scene modes based on the shooting conditions, and you can take pictures with the appropriate settings for those conditions.

- **SCENE**: Press the **MENU** button and select a scene mode.
- **SCENE** (scene auto selector): The camera recognizes the shooting conditions when you frame a picture, and you can take pictures in accordance with the conditions.
- **night landscape**: Use this mode to shoot night landscapes.
- **night portrait**: Use this mode to shoot evening and night portraits that include background scenery.
- **backlighting**: Use this mode to shoot backlit subjects.
- **sports**: Use this mode to shoot sports photos.

- **C (Creative) mode**

The camera saves four images with effects and one image without effects simultaneously in one shot.

- **Smart portrait mode**

Use glamour retouch to enhance human faces during shooting, and use the smile timer or self-collage function to take pictures.

- **Short movie show mode**

The camera creates a short movie that is up to 30 seconds long (**1080/30p** or **1080/25p**) by recording and automatically combining multiple movie clips that are several seconds long.

Help Display

The descriptions of functions are displayed while changing the shooting mode or while the setting screen is displayed.


Press the shutter-release button halfway to quickly switch to shooting mode. You can show or hide the descriptions using **Help display** in **Monitor settings** in the setup menu.



■ (Auto) Mode

Select this mode to perform general shooting in a variety of shooting conditions.

- The focus area for autofocus varies depending on the setting of **AF area mode** (116). The default setting is **Target finding AF** (60).

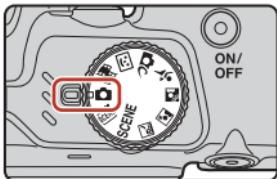

Functions Available in ■ (Auto) Mode

- Creative slider (34)
- Flash mode (52)
- Self-timer (54)
- Macro mode (56)
- Shooting menu (110, 111)

Using the Creative Slider


You can adjust the brightness (exposure compensation), vividness, hue, and Active D-Lighting when shooting.

- 1 Press the multi selector ►.




- 2 Use ◀▶ to select an item.

- Hue**: Adjust the hue (reddish/bluish) of the entire image.
- Vividness**: Adjust the vividness of the entire image.
- Brightness (Exp. +/-)**: Adjust the brightness of the entire image.
- Active D-Lighting**: Reduce the loss of details in highlights and shadows. Select **H** (High), **N** (Normal), **L** (Low) for the amount of effect.

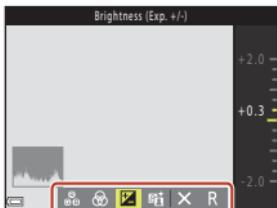

3 Use **▲▼** to adjust the level.

- You can preview the results on the screen.
- To set another item, return to step 2.
- Select **☒ Exit** to hide the slider.
- To cancel all settings, select **R Reset** and press the **OK** button. Return to step 2 and adjust the settings again.

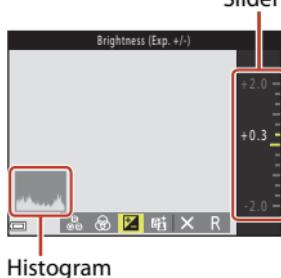

4 Press the **OK** button when setting is complete.

- The settings are applied and the camera returns to the shooting screen.

Creative Slider Settings

- This function may not be available to use in combination with other functions (66).
- The settings for brightness (exposure compensation), vividness, hue, and Active D-Lighting are saved in the camera's memory even after the camera is turned off.
- See "Using the Histogram" (57) for more information.

Active D-Lighting Versus D-Lighting

- The **Active D-Lighting** option in the shooting menu captures images while reducing loss of details in highlights, and adjusts the tone when saving images.
- The **D-Lighting** (75) option in the playback menu adjusts the tone of saved images.



Scene Mode (Shooting Suited to the Shooting Conditions)

Select any one of scene modes based on the shooting conditions, and you can take pictures with the appropriate settings for those conditions.

(scene auto selector) ([37](#))




The camera recognizes the shooting conditions when you frame a picture, and you can take pictures in accordance with the conditions.



-  Night landscape^{1, 2} ([37](#)),
-  Night portrait ([38](#)),
-  Backlighting² ([38](#)),
-  Sports² ([39](#))

Rotate the mode dial to , , or  and take pictures.

SCENE

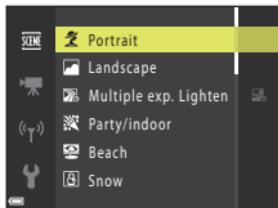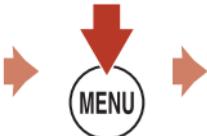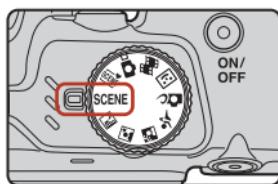

Press the **MENU** button to display the scene menu and select one of the following scene modes using the multi selector.

 Portrait (default setting)	 Close-up (40)
 Landscape ^{1, 2}	 Food (40)
 Multiple exp. Lighten ^{3, 4} (39)	 Fireworks show ^{1, 3} (40)
 Party/indoor ² (40)	 Easy panorama ² (43)
 Beach ²	 Pet portrait (41)
 Snow ²	 Moon ^{1, 2} (42)
 Sunset ^{2, 3}	 Bird-watching ^{1, 2} (42)
 Dusk/dawn ^{1, 2, 3}	

¹ The camera focuses at infinity.

² The camera focuses on the area in the center of the frame.

³ Use of a tripod is recommended, because the shutter speed is slow. Set **Photo VR** ([140](#)) to **Off** in the setup menu when using a tripod to stabilize the camera during shooting.

⁴ When **Nightscape + light trails** is selected, the camera focuses on the area in the center of the frame. When **Nightscape + star trails** or **Star trails** is selected, the camera focuses at infinity.



Tips and Notes About Scene Mode

Scene auto selector

- The camera automatically recognizes the shooting conditions when you frame a picture, making it easier to take pictures in accordance with those conditions.
- When the camera automatically recognizes the shooting conditions, the shooting mode icon displayed on the shooting screen changes accordingly.

	Portrait (for taking close-up portraits of one or two people)
	Portrait (for taking portraits of large numbers of people, or images in which the background takes up a large portion of the frame)
	Landscape
	Night portrait* (for taking close-up portraits of one or two people)
	Night portrait* (for taking portraits of large numbers of people, or images in which the background takes up a large portion of the frame)
	Night landscape*
	Close-up
	Backlighting (for taking pictures of subjects other than people)
	Backlighting (for taking portrait pictures)
	Other shooting conditions

* One image is captured at a slow shutter speed.

- Under some shooting conditions, the camera may not select the desired settings. In this case, select another shooting mode (33).
- When the digital zoom is in effect, the shooting mode icon changes to .

Night landscape

- Press the **MENU** button to select  **Hand-held** or  **Tripod** in **Night landscape**.
-  **Hand-held** (default setting):
 - While the  icon on the shooting screen is displayed in green, press the shutter-release button all the way to capture a series of images which are combined into a single image and saved.
 - Once the shutter-release button is pressed all the way, hold the camera still until a still image is displayed. After taking a picture, do not turn the camera off before the screen switches to the shooting screen.
 - The angle of view (i.e., the area visible in the frame) seen in the saved image is narrower than that seen on the shooting screen.
-  **Tripod**:
 - One image is captured at a slow shutter speed when the shutter-release button is pressed all the way.
 - Vibration reduction is disabled even when **Photo VR** (140) in the setup menu is set to **On**.



Night portrait

- Raise the flash before shooting.
- Press the **MENU** button to select  **Hand-held** or  **Tripod** in **Night portrait**.
- **Hand-held** (default setting):
 - While the  icon on the shooting screen is displayed in green, press the shutter-release button all the way to capture a series of images which are combined into a single image and saved.
 - Once the shutter-release button is pressed all the way, hold the camera still until a still image is displayed. After taking a picture, do not turn the camera off before the screen switches to the shooting screen.
 - If the subject moves while the camera is shooting continuously, the image may be distorted, overlapped, or blurred.
- **Tripod**:
 - One image is captured at a slow shutter speed when the shutter-release button is pressed all the way.
 - Vibration reduction is disabled even when **Photo VR** (140) in the setup menu is set to **On**.

Backlighting

- Press the **MENU** button to select **On** or **Off** to enable or disable the high dynamic range (HDR) function in **HDR** based on the shooting conditions.
- **Off** (default setting): The flash fires to prevent the subject from being hidden in shadow. Shoot images with the flash raised.
 - Press the shutter-release button all the way to capture one image.
- **On**: Use when taking pictures with very bright and dark areas in the same frame.
 - When the shutter-release button is pressed all the way, the camera shoots images continuously and saves the following two images.
 - A non-HDR composite image
 - An HDR composite image in which the loss of details in highlights or shadows is minimized
 - If there is only enough memory to save one image, an image processed by D-Lighting (75) at the time of shooting, in which dark areas of the image are corrected, is the only image saved.
 - Once the shutter-release button is pressed all the way, hold the camera still until a still image is displayed. After taking a picture, do not turn the camera off before the screen switches to the shooting screen.
 - The angle of view (i.e., the area visible in the frame) seen in the saved image is narrower than that seen on the shooting screen.
 - Under some shooting conditions, dark shadows may appear around bright subjects or bright areas may appear around dark subjects.



Sports

- While the shutter-release button is held all the way down, images are captured continuously.
- The camera can capture up to about 7 images continuously at a rate of about 7.7 fps (when **Image mode** is set to **16 4608x3456**).
- The frame rate for continuous shooting may become slow depending on the current image mode setting, the memory card used, or shooting conditions.
- Focus, exposure, and hue for the second and subsequent images are fixed at the values determined with the first image.

SCENE → **Multiple exp. Lighten**

- The camera automatically captures moving subjects at regular intervals, compares each image and composites only their bright areas, and then saves them as one image. Light trails such as the flow of car lights or motion of stars are captured.
- On the screen displayed when **Multiple exp. Lighten** is selected, select  **Nightscape + light trails**,  **Nightscape + star trails**, or  **Star trails**.

Option	Description
 Nightscape + light trails	Use to capture the flow of car lights against a night landscape background. <ul style="list-style-type: none">• Shots are taken at a shutter speed of 4 seconds every 4 seconds. When 50 shots are taken, the camera automatically stops shooting.• For every 10 shots taken, one composite image with trails overlapped from the start of shooting is automatically saved.
 Nightscape + star trails	Use to capture the motion of stars with a night landscape in the frame. <ul style="list-style-type: none">• Shots are taken at a shutter speed of 20 seconds every 25 seconds. When 300 shots are taken, the camera automatically stops shooting.• For every 30 shots taken, one composite image with trails overlapped from the start of shooting is automatically saved.
 Star trails	Use to capture the motion of stars. <ul style="list-style-type: none">• Shots are taken at a shutter speed of 25 seconds every 30 seconds. When 300 shots are taken, the camera automatically stops shooting.• For every 30 shots taken, one composite image with trails overlapped from the start of shooting is automatically saved.

- The screen may turn off during the shooting interval. The power-on lamp lights while the screen is off.
- To end shooting before it automatically ends, press the  button.
- When you have obtained the desired trails, end shooting. If you continue shooting, details in the composited areas may be lost.
- The images automatically saved during shooting and the image composited when shooting ends are grouped as a sequence, and the image composited when shooting ends is used as the key picture (72).



✓ Notes About Multiple Exp. Lighten

- The camera cannot capture images when a memory card is not inserted.
- Do not rotate the mode dial or insert a new memory card until shooting ends.
- Use batteries with a sufficient amount of charge remaining to prevent the camera from turning off during shooting.
- Exposure compensation cannot be used (57).

⌚ Time Remaining

You can check the time remaining until shooting automatically ends on the screen.



SCENE ➔ 🎉 Party/indoor


- To avoid the effects of camera shake, hold the camera steady. Set **Photo VR** (140) to **Off** in the setup menu when using a tripod to stabilize the camera during shooting.

SCENE ➔ 📸 Close-up

- Macro mode (56) is enabled and the camera automatically zooms to the closest position at which it can focus.
- You can move the focus area. Press the **OK** button, use the multi selector **▲▼◀▶** to move the focus area, and press the **OK** button to apply the setting.

SCENE ➔ 🍔 Food

- Macro mode (56) is enabled and the camera automatically zooms to the closest position at which it can focus.
- You can adjust hue by using the multi selector **▲▼**. The hue setting is saved in the camera's memory even after the camera is turned off.
- You can move the focus area. Press the **OK** button, use the multi selector **▲▼◀▶** to move the focus area, and press the **OK** button to apply the setting.

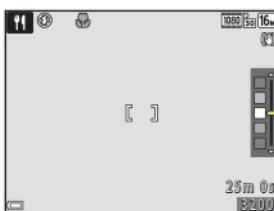

SCENE ➔ 🎆 Fireworks show

- The shutter speed is fixed at four seconds.
- Exposure compensation cannot be used (57).



SCENE ➔ Pet portrait

- When you point the camera at a dog or cat, the camera detects the pet's face and focuses on it. By default, the shutter is automatically released when a dog or cat face is detected (pet portrait auto release).
- On the screen displayed when  **Pet portrait** is selected, select  **Single** or  **Continuous**.
 -  **Single**: Whenever a dog or cat face is detected, the camera captures one image.
 -  **Continuous**: Whenever a dog or cat face is detected, the camera captures three images continuously.


Pet Portrait Auto Release and Self-portrait Timer

Press the multi selector  (◎) to select one of the following options.

-  **Pet portrait auto release**: The shutter is automatically released when the camera detects the face of a dog or cat.
 - This option automatically switches to **OFF** after five bursts.
 - You can also release the shutter manually by pressing the shutter-release button. If  **Continuous** is set, you can take pictures continuously by holding the shutter-release button all the way down.
-  **5s Self-portrait timer**: The shutter is released 5 seconds after you press the shutter-release button all the way down.
Frame the picture after you press the shutter-release button all the way down.
 - See "Self-timer" (54) for more information.
 - The camera focuses on the face of a dog, cat, or human when detected.
 - The camera cannot shoot images continuously.
- OFF**: The shutter is released when you press the shutter-release button all the way down.
 - The camera focuses on the face of a dog, cat, or human when detected.
 - If  **Continuous** is set, you can take pictures continuously by holding the shutter-release button all the way down.

Focus Area

- When the camera detects a face, the face is displayed inside a yellow border. When the camera acquires focus on a face displayed inside a double border (focus area), the double border changes to green. If no faces are detected, the camera focuses on the subject in the center of the frame.
- Under some shooting conditions, the face of a dog, cat, or human may not be detected and other subjects may be displayed inside a border.

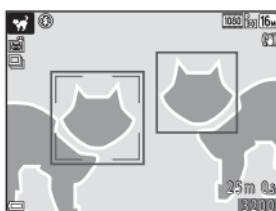

SCENE ➔ ● Moon

- At the wide-angle zoom position, the framing border is displayed to indicate the angle of view equivalent to that of a 900 mm lens (in 35mm [135] format). When you frame the moon inside the framing border and press the  button, the angle of view becomes equivalent to that of a 900 mm lens.
- You can adjust hue by using the multi selector   . The hue setting is saved in the camera's memory even after the camera is turned off.
- Adjust the brightness with exposure compensation (57) according to shooting conditions such as the waxing and waning of the moon and shooting requirements.

SCENE ➔ ⚜ Bird-watching

- On the screen displayed when  **Bird-watching** is selected, select  **Single** or  **Continuous**.
- Single**: One image is shot each time the shutter-release button is pressed.
- Continuous**: While the shutter-release button is held all the way down, images are captured continuously.
The camera can capture up to about 7 images continuously at a rate of about 7.7 fps (when **Image mode** is set to  **4608×3456**).
- At the wide-angle zoom position, the framing border is displayed to indicate the angle of view equivalent to that of a 440 mm lens (in 35mm [135] format). When you frame a bird inside the framing border and press the  button, the angle of view becomes equivalent to that of a 440 mm lens.



Shooting with Easy Panorama


Rotate the mode dial to SCENE → MENU button →  (easy panorama) → 

1 Select  **Normal** or  **Wide** as the shooting range and press the  button.



2 Frame the first edge of the panorama scene, and then press the shutter-release button halfway to focus.

- The zoom position is fixed at wide-angle.
- The camera focuses in the center of the frame.

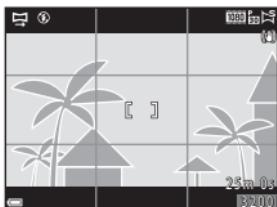


3 Press the shutter-release button all the way, and then remove your finger from the shutter-release button.

-     are displayed to indicate the direction of camera movement.



4 Move the camera in one of the four directions until the guide indicator reaches the end.

- When the camera detects which direction it is moving in, shooting begins.
- Shooting ends when the camera captures the specified shooting range.
- Focus and exposure are locked until shooting ends.

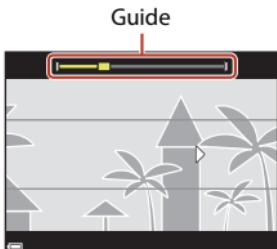

Example of Camera Movement

- Using your body as the axis of rotation, move the camera slowly in an arc, in the direction of the marking ($\triangle \nabla \square \square$).
- Shooting stops if the guide does not reach the edge within about 15 seconds (when **STD Normal** is selected) or within about 30 seconds (when **WIDE Wide** is selected) after shooting starts.




Notes About Easy Panorama Shooting

- The range of the image seen in the saved image is narrower than that seen on the screen at the time of shooting.
- If the camera is moved too quickly or shaken too much, or if the subject is too uniform (e.g. walls or darkness), an error may occur.
- If shooting is stopped before the camera reaches the half-way point in the panorama range, a panorama image is not saved.


Image Size of Easy Panorama

- There are four different image sizes (in pixels), as described below.

When **STD Normal** is set

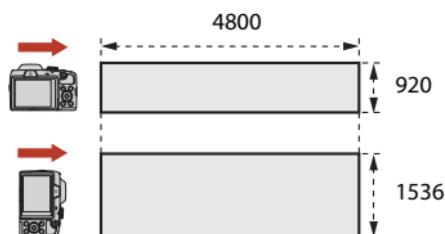

When **WIDE Wide** is set

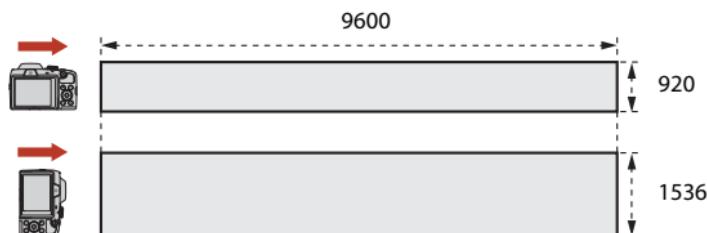


- If more than half of the panorama range is captured but shooting ends before reaching the edge of the range, the image size becomes smaller.



Playback with Easy Panorama

Switch to playback mode (20), display an image captured using easy panorama in full-frame playback mode, and then press the **OK** button to scroll the image in the direction that was used when shooting.

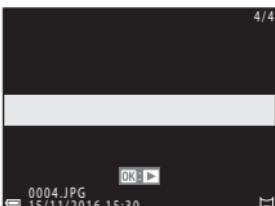

Playback controls are displayed on the screen during playback. Use the multi selector **◀▶** to select a control, and then press the **OK** button to perform the operations described below.



Function	Icon	Description
Rewind	◀	Hold down the OK button to rewind scroll playback.
Fast-forward	▶	Hold down the OK button to fast-forward scroll playback.
Pause	■	Pause playback. The operations listed below can be performed while paused.
		◀ Hold down the OK button to rewind.
		▶ Hold down the OK button to scroll.
		▶ Resume automatic scrolling.
End	■	Return to full-frame playback mode.

✓ Notes About Easy Panorama Images

- The images cannot be edited on this camera.
- This camera may not be able to scroll the playback of, or zoom in on, easy panorama images captured with another make or model of digital camera.

✓ Notes About Printing Panorama Images


The entire image may not be able to be printed depending on the printer's settings. Additionally, printing may not be possible depending on the printer.



Creative Mode (Applying Effects When Shooting)

The camera saves four images with effects and one image without effects simultaneously in one shot.

- The camera focuses in the center of the frame.

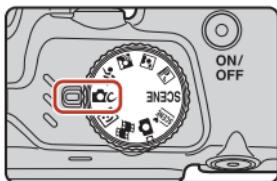


1 Press the **OK** button.

- The effect selection screen is displayed.



2 Use the multi selector **▲▼** to select the desired effect, and press the **OK** button.

- You can select **Variety**, **Selective color (red)**, **Selective color (green)**, **Selective color (blue)**, **Light** (default setting), **Depth**, **Memory**, **Classic**, or **Noir**.
- The image without effects is displayed on the upper part of the screen. Four types of images with effects are displayed on the lower part of the screen.
- Only one type of effect can be applied to a movie. Press **◀▶** to select the desired effect.

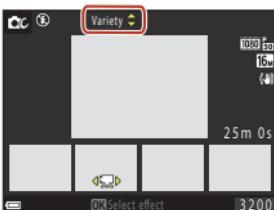

3 Press the shutter-release button or **● (REC movie-record)** button to shoot.

- The five saved images are treated as a sequence. One image with an applied effect is used as the key picture (72).

✓ Notes About Creative Mode

When **Variety** is selected as the effect, certain **Movie options** (122) are not available.



Functions Available in Creative Mode


The functions below are available when you press the **OK** button in step 2:

- Flash mode (52)
- Self-timer (54)
- Macro mode (56)
- Exposure compensation (57)
- Shooting menu (110)



Smart Portrait Mode (Enhancing Human Faces When Shooting)

You can take a picture with the glamour retouch function to enhance human faces.

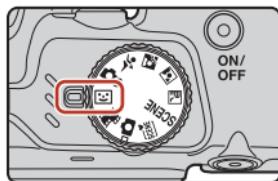


1 Press the multi selector ►.



2 Apply an effect.

- Use $\blacktriangle\blacktriangleright$ to select the desired effect.
- Use $\blacktriangle\blacktriangledown$ to select the amount of effect.
- You can simultaneously apply multiple effects.
 Skin softening, **Foundation makeup**,
 Soft, **Vividness**, **Brightness (Exp. +/-)**
- Select **Exit** to hide the slider.
- Press the **OK** button after checking the settings for all effects.

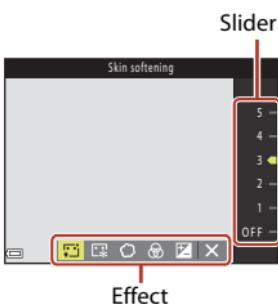

3 Frame the picture and press the shutter-release button.

Notes About Smart Portrait Mode

- The amount of effect may differ between the image on the shooting screen and the saved image.
- When **Soft** is set, some **Movie options** (122) are not available.

Functions Available in Smart Portrait Mode


- Smile timer (49)
- Self-Collage (50)
- Flash mode (52)
- Self-timer (54)
- Smart portrait menu (120)



Using Smile Timer

When you press the multi selector  to select  **Smile timer** and press the  button, the camera automatically releases the shutter whenever a smiling face is detected.

- Set the glamour retouch function before selecting smile timer (48).
- When you press the shutter-release button to take a picture, smile timer is terminated.

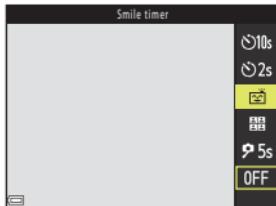

Notes About Smile Timer

Under some shooting conditions, the camera may be unable to detect faces or detect smiles (61). The shutter-release button can also be used for shooting.


When the Self-timer Lamp Flashes

When using smile timer, the self-timer lamp flashes when the camera detects a face and flashes quickly immediately after the shutter is released.




Using Self-Collage

The camera can capture a series of four or nine images at intervals and save them as a one-frame image (a collage image).

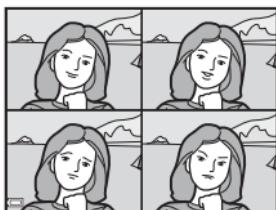


1 Press the multi selector to select **Self-Collage**, and press the **OK** button.

- A confirmation dialog is displayed.
- When you press the **MENU** button and select **Self-Collage** before pressing , you can configure the settings for **Number of shots**, **Interval**, and **Shutter sound** (120).
- If you want to apply glamour retouch when shooting, set the effect before selecting self-collage (48).

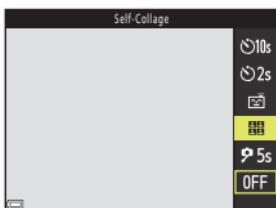

2 Take a picture.

- When you press the shutter-release button, a countdown starts (about five seconds) and the shutter is automatically released.
- The camera automatically releases the shutter for the remaining pictures. A countdown starts about three seconds before shooting.
- The number of shots is indicated by on the screen. It is displayed in green during shooting and it changes to white after shooting.

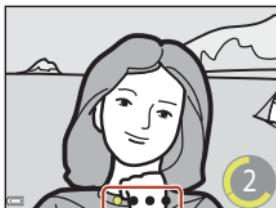

3 On the screen displayed when the camera finishes taking the number of shots that is set in **Number of shots**, select **Yes** and press the **OK** button.

- The collage image is saved.
- Each captured image is saved as an individual image separate from the collage image. The images are grouped as a sequence, and a one-frame collage image is used as the key picture (72).
- When **No** is selected, the collage image is not saved.

Notes About Self-Collage

- If you press the shutter-release button before the camera takes the specified number of shots, shooting is canceled and the collage image is not saved. The pictures that were taken before shooting was canceled are saved as individual images.
- This function may not be available to use in combination with other functions (66).



Setting Shooting Functions with the Multi Selector

When the shooting screen is displayed, you can press the multi selector **▲ (Flash)** **◀ (OK)** **▼ (Macro)** **▶ (Exposure Compensation)** to set the functions described below.



- **Flash mode**

When the flash is raised, the flash mode can be set according to shooting conditions.

- **OK Self-timer, Self-portrait timer**

The camera releases the shutter when the set number of seconds elapses after you press the shutter-release button.

- **Macro mode**

Use macro mode when you take close-up pictures.

- **Exposure compensation**

You can adjust overall image brightness.

The functions that can be set vary depending on the shooting mode.




Flash Mode

When the flash is raised, the flash mode can be set according to shooting conditions.

1 Press the (flash pop-up) button to raise the flash.

- When the flash is lowered, flash operation is disabled and  is displayed.

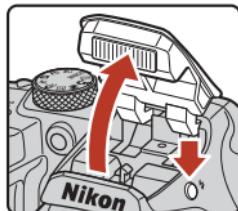

2 Press the multi selector ().




3 Select the desired flash mode (53) and press the button.

- If the setting is not applied by pressing the  button, the selection will be canceled.



The Flash Lamp

- The status of the flash can be confirmed by pressing the shutter-release button halfway.
 - On: The flash fires when you press the shutter-release button all the way down.
 - Flashing: The flash is charging. The camera cannot shoot images.
 - Off: The flash does not fire when a picture is taken.
- If the battery level is low, the screen turns off while the flash is charging.

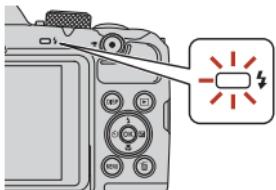

Available Flash Modes



Auto

The flash fires when necessary, such as in dim lighting.

- The flash mode indicator is only displayed immediately after setting on the shooting screen.



Auto with red-eye reduction

Reduce red-eye in portraits caused by the flash.



Fill flash

The flash fires whenever a picture is taken. Use to “fill-in” (illuminate) shadows and backlit subjects.



Slow sync

Suited to evening and night portraits that include background scenery. The flash fires when necessary to illuminate the main subject; slow shutter speeds are used to capture background at night or under dim lighting.

✓ Notes About Shooting with the Flash

When using the flash at the wide-angle zoom position, the area around the image may be dark depending on the distance to the subject.

This may be improved if you move the zoom control slightly toward the telephoto position.



The Flash Mode Setting

- The setting may not be available with some shooting modes (64).
- For (auto) mode, the applied setting is saved in the camera’s memory even after the camera is turned off.



Red-eye Reduction

If the camera detects red-eye while saving an image, the affected area is processed to reduce red-eye before the image is saved.

Note the following when shooting:

- More time than usual is required to save images.
- Red-eye reduction may not produce the desired results in some situations.
- In rare cases, red-eye reduction may be applied to areas of an image unnecessarily. In these cases, select another flash mode and take the picture again.



Self-timer

The camera releases the shutter when the set number of seconds elapses after you press the shutter-release button.

Set **Photo VR** (140) to **Off** in the setup menu when using a tripod to stabilize the camera during shooting.

1 Press the multi selector (⌚).



2 Select the number of seconds until the shutter is released, and press the **OK** button.

- **⌚10s** (10 seconds): Use on important occasions, such as weddings.
- **⌚2s** (2 seconds): Use to prevent camera shake.
- **⌚5s** (5 seconds, self-portrait timer): Use for self-portraits.
- If the setting is not applied by pressing the **OK** button, the selection will be canceled.





3 Frame the picture and press the shutter-release button halfway.

- When using **⌚10s** (10 seconds) or **⌚2s** (2 seconds), make sure that the subjects are in focus.
- When using **⌚5s** (5 seconds, self-portrait timer), press the shutter-release button all the way down in step 4, and then frame the picture.



4 Press the shutter-release button all the way down.

- Countdown starts. The self-timer lamp flashes and then glows steadily about one second before the shutter is released.
- When the shutter is released, the self-timer is set to **OFF**.*
- To stop the countdown, press the shutter-release button again.
- * When the shooting mode is **Moon** scene mode, the self-timer is not automatically set to **OFF**. To end the self-timer, select **OFF** in step 2.

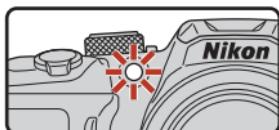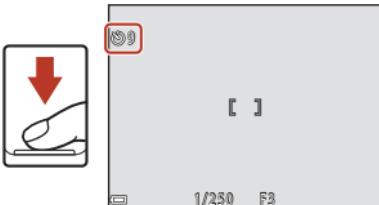

Focus and Exposure During Self-timer Shooting

- **⌚10s, ⌚2s:** The focus and exposure are locked when you press the shutter-release button all the way down.
- **⌚5s:** The focus and exposure are set right before the shutter is released.

The Self-timer Setting

The setting may not be available with some shooting modes (64).



Macro Mode (Taking Close-up Pictures)


Use macro mode when you take close-up pictures.

1 Press the multi selector ▼ (flower).




2 Select **ON** and press the **OK** button.


- If the setting is not applied by pressing the **OK** button, the selection will be canceled.

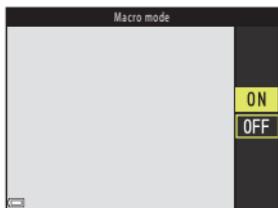

 3 Move the zoom control to set the zoom ratio to a position where  and the zoom indicator are displayed in green.



 - When the zoom ratio is set to a position where  and the zoom indicator are displayed in green, the camera can focus on subjects as close as approximately 10 cm (4 in.) from the lens.
- When the zoom position is at the wide-angle end in the area indicated by ①, the camera can focus on subjects as close as approximately 1 cm (0.4 in.) from the lens.



The Macro Mode Setting

- The setting may not be available with some shooting modes (64).
- For  (auto) mode, the applied setting is saved in the camera's memory even after the camera is turned off.



Exposure Compensation (Adjusting Brightness)


You can adjust overall image brightness.

1 Press the multi selector ► (☒).



2 Select a compensation value and press the **OK** button.

- To brighten the image, set a positive (+) value.
- To darken the image, set a negative (-) value.
- The compensation value is applied, even without pressing the **OK** button.
- When the shooting mode is smart portrait mode, the glamour retouch screen is displayed instead of the exposure compensation screen (48).
- When the shooting mode is **Auto** mode, the creative slider is displayed instead of the exposure compensation screen (34).

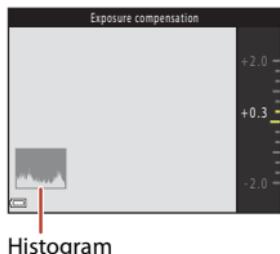

Exposure Compensation Value

When the shooting mode is **Multiple exp. Lighten** (39) or **Fireworks show** (40) scene mode, exposure compensation cannot be used.

Using the Histogram

A histogram is a graph showing the distribution of tones in the image. Use as a guide when using exposure compensation and shooting without the flash.

- The horizontal axis corresponds to pixel brightness, with dark tones to the left and bright tones to the right. The vertical axis shows the number of pixels.
- Increasing exposure compensation value shifts tone distribution to the right, and decreasing it shifts tone distribution to the left.



 


Using the Zoom

When you move the zoom control, the zoom lens position changes.

- To zoom in: Move toward **T**
- To zoom out: Move toward **W**

When you turn the camera on, the zoom moves to the maximum wide-angle position.

- Rotating the zoom control all the way in either direction adjusts the zoom quickly (except during movie recording).
- The zoom can also be operated by moving the side zoom control (2) toward **T** or **W**.

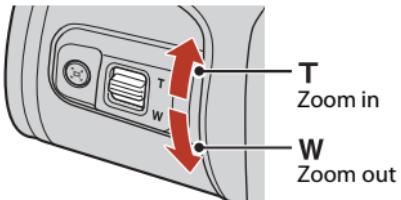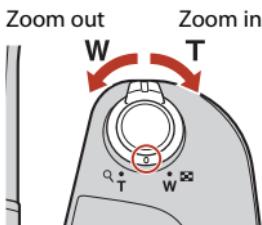

- A zoom indicator is displayed on the shooting screen when the zoom control is moved.
- Digital zoom, which allows you to further magnify the subject up to approximately 4x the maximum optical zoom ratio, can be activated by moving and holding the zoom control or the side zoom control toward **T** when the camera is zoomed in to the maximum optical zoom position.

Digital Zoom


The zoom indicator changes to blue when the digital zoom is activated, and it changes to yellow when the zoom magnification is increased further.

- Zoom indicator is blue: Image quality is not noticeably reduced by using the Dynamic Fine Zoom.
- Zoom indicator is yellow: There may be cases in which image quality is noticeably reduced.
- The indicator remains blue across a wider area when the image size is smaller.
- The zoom indicator may not change to blue when using certain continuous shooting settings or other settings.



Using the Snap-back Zoom

If you lose sight of the subject while shooting with the lens in telephoto position, press the  (snap-back zoom) button to temporarily widen the visible area so that you can frame the subject more easily.

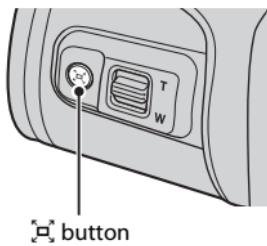

Framing border

- While pressing the  button, frame the subject inside the framing border of the shooting screen. To widen the visible area further, move the zoom control toward **W** while pressing the  button.
- Release the  button to return to the original zoom position.
- Snap-back zoom is not available during movie recording.



Focusing


The Shutter-release Button

Press halfway		To press the shutter-release button "halfway" means to press and hold the button at the point where you feel a slight resistance. <ul style="list-style-type: none">Focus and exposure (shutter speed and f-number) are set when you press the shutter-release button halfway. Focus and exposure remain locked while the button is pressed halfway.The focus area varies depending on the shooting mode.
Press all the way		To press the shutter-release button "all the way" means to press the button down completely. <ul style="list-style-type: none">The shutter is released when the shutter-release button is pressed all the way.Do not use force when pressing the shutter-release button, as this may result in camera shake and blurred images. Press the button gently.

Using Target Finding AF


When **AF area mode** (116) in **(Auto)** mode is set to **Target finding AF**, the camera focuses in the manner described below when you press the shutter-release button halfway:

- The camera detects the main subject and focuses on it. When the subject is in focus, the focus area is displayed in green. If a human face is detected, the camera automatically sets focus priority on it.

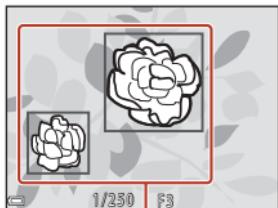

Focus areas

- If no main subject is detected, the camera automatically selects one or more of the nine focus areas containing the subject closest to the camera. When the subject is in focus, the focus areas that are in focus are displayed in green.

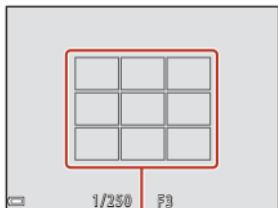

Focus areas




✓ Notes About Target Finding AF

- Depending on shooting conditions, the subject that the camera determines to be the main subject may vary.
- The main subject may not be detected when using certain **White balance** settings.
- The camera may not detect the main subject appropriately in the following situations:
 - When the subject is very dark or bright
 - When the main subject lacks clearly defined colors
 - When the shot is framed so that the main subject is on the edge of the screen
 - When the main subject is composed of a repeating pattern

Using Face Detection

In the following settings, the camera uses face detection to automatically focus on human faces.

- SCENE** (scene auto selector) mode (37)
- night portrait** or **Portrait** scene mode (36)
- Smart portrait mode (48)
- When **AF area mode** (116) in **auto** mode (34) is set to **Face priority**

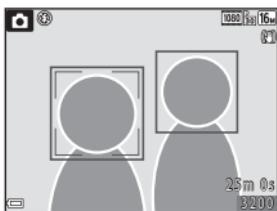

If the camera detects more than one face, a double border is displayed around the face that the camera focuses on, and single borders are displayed around the other faces.

If the shutter-release button is pressed halfway when no faces are detected:

- In **SCENE** (scene auto selector) mode, the focus area changes depending on the shooting conditions that the camera recognizes.
- In **night portrait** and **Portrait** scene modes or in smart portrait mode, the camera focuses in the center of the frame.
- In **auto** mode, the camera selects the focus area containing the subject closest to the camera.

✓ Notes About Face Detection

- The camera's ability to detect faces depends on a variety of factors, including the direction in which the faces are looking.
- The camera cannot detect faces in the following situations:
 - When faces are partially hidden by sunglasses or otherwise obstructed
 - When faces take up too much or too little of the frame



Using Skin Softening

In the following shooting modes, if human faces are detected, the camera processes the image to soften facial skin tones before saving the image (up to three faces).

- Smart portrait mode (48)
 - The amount of **Skin softening** effect can be adjusted.
- **SCENE** (scene auto selector) mode (37)
- **N** (night portrait) or **Portrait** in scene mode (36)

Skin softening can also be applied to saved images by using **Glamour retouch** in playback mode (76).

Notes About Skin Softening

- It may take more time than usual to save images after shooting.
- Under some shooting conditions, the desired skin softening results may not be achieved, and skin softening may be applied to areas of the image where there are no faces.

Subjects Not Suitable for Autofocus

The camera may not focus as expected in the following situations. In rare cases, the subject may not be in focus despite the fact that the focus area or the focus indicator is displayed in green:

- Subject is very dark
- Objects of sharply differing brightness are included in the shooting conditions (e.g. the sun behind the subject makes that subject appear very dark)
- No contrast between the subject and surroundings (e.g. a portrait subject wearing a white shirt is standing in front of a white wall)
- Several objects are at different distances from the camera (e.g. the subject is inside a cage)
- Subjects with repeating patterns (window blinds, buildings with multiple rows of similarly shaped windows, etc.)
- Subject is moving rapidly

In the situations noted above, try pressing the shutter-release button halfway to refocus several times, or focus on another subject positioned at the same distance from the camera as the actual desired subject, and use focus lock (63).




Focus Lock

Focus lock shooting is recommended when the camera does not activate the focus area that contains the desired subject.

1 Set **AF area mode** to **Center** in  (auto) mode (116).

2 Position the subject in the center of the frame and press the shutter-release button halfway.

- The camera focuses on the subject and the focus area is displayed in green.
- Exposure is also locked.

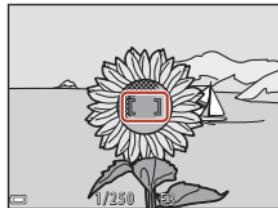

3 Without lifting your finger, recompose the picture.

- Make sure to maintain the same distance between the camera and the subject.



4 Press the shutter-release button all the way down to take the picture.



Default Settings (Flash, Self-timer, and Macro Mode)

The default settings for each shooting mode are listed below.

	Flash ¹ (52)	Self-timer (54)	Macro mode (56)
(auto)	AUTO	Off	Off
Scene modes			
(scene auto selector)	AUTO ²	Off	Off ³
(night landscape)	⁴	Off ⁵	Off ⁴
(night portrait)	⁶	Off	Off ⁴
(backlighting)	⁷	Off	Off ⁴
(sports)	⁴	Off ⁴	Off ⁴
(portrait)	⁸	Off	Off ⁴
(landscape)	⁴	Off ⁵	Off ⁴
(multiple exp. lighten)	⁴	2s ⁵	Off ⁴
(party/indoor)	⁸	Off	Off ⁴
(beach)	AUTO	Off	Off ⁴
(snow)	AUTO	Off	Off ⁴
(sunset)	⁴	Off	Off ⁴
(dusk/dawn)	⁴	Off ⁵	Off ⁴
(close-up)	⁴	Off	On ⁴
(food)	⁴	Off	On ⁴
(fireworks show)	⁴	Off ⁴	Off ⁴
(easy panorama)	⁴	Off ⁴	Off ⁴
(pet portrait)	⁴	⁹	Off
(moon)	⁴	2s	Off ⁴
(bird-watching)	⁴	Off	Off
(creative mode)	AUTO	Off	Off
(smart portrait)	AUTO ¹⁰	Off ¹¹	Off ⁴
(short movie show)	⁴	Off	Off



- 1 The setting that is used when the flash is raised.
- 2 The camera automatically selects the flash mode appropriate for the shooting conditions it has selected. (off) can be selected manually.
- 3 Cannot be changed. The camera enters macro mode when  is selected.
- 4 Cannot be changed.
- 5 **5s Self-portrait timer** cannot be used.
- 6 Cannot be changed. When set to **Hand-held**, the flash mode setting is fixed at auto and slow sync with red-eye reduction. When set to **Tripod**, the flash mode setting is fixed at fill flash and slow sync with red-eye reduction.
- 7 Flash is fixed at  (fill flash) when **HDR** is set to **Off**. The flash does not fire when **HDR** is set to **On**.
- 8 May switch to slow sync with red-eye reduction flash mode.
- 9  **Pet portrait auto release** and **5s Self-portrait timer** can be used (41).  **10s** or  **2s** cannot be used.
- 10 Cannot be used when **Blink proof** is set to **On**.
- 11  **Smile timer** (49) and  **Self-Collage** (50) can be used in addition to  **10s**,  **2s**, or **5s Self-portrait timer**.



Functions That Cannot Be Used Simultaneously When Shooting

Some functions cannot be used with other menu settings.

Restricted function	Setting	Description
Flash mode	Continuous (113)	When a setting other than Single is selected, the flash cannot be used.
	Blink proof (121)	When Blink proof is set to On , the flash cannot be used.
Self-timer	AF area mode (116)	When Subject tracking is selected, the self-timer cannot be used.
Macro mode	AF area mode (116)	When Subject tracking is selected, macro mode cannot be used.
Image mode	Continuous (113)	Image mode is set as follows depending on the continuous shooting setting: <ul style="list-style-type: none">• Pre-shooting cache: 2M (image size: 1600 × 1200 pixels)• Continuous H: 120 fps: VGA (image size: 640 × 480 pixels)• Continuous H: 60 fps: 1M (image size: 1280 × 960 pixels)
White balance	Hue (using the creative slider) (34)	When hue is adjusted using the creative slider, White balance in the shooting menu cannot be set. To set White balance , select R in the creative slider setting screen to reset the brightness, vividness, hue, and Active D-Lighting.
Continuous	Self-timer (54)	If the self-timer is used when Pre-shooting cache is selected, the setting is fixed at Single .
ISO sensitivity	Continuous (113)	When Pre-shooting cache , Continuous H: 120 fps , or Continuous H: 60 fps is selected, ISO sensitivity is fixed at Auto .
AF area mode	White balance (111)	When a setting other than Auto is selected for White balance in Target finding AF mode, the camera does not detect the main subject.
Blink proof	Self-Collage (50)	When Self-Collage is selected, Blink proof is disabled.



Restricted function	Setting	Description
Date stamp	Continuous (113)	When Pre-shooting cache, Continuous H: 120 fps , or Continuous H: 60 fps is selected, date and time cannot be stamped on images.
Digital zoom	AF area mode (116)	When Subject tracking is selected, digital zoom cannot be used.

✓ Notes About Digital Zoom

- Depending on the shooting mode or the current settings, digital zoom may not be available (141).
- When digital zoom is in effect, the camera focuses in the center of the frame.




Playback Features

Playback Zoom.....	69
Thumbnail Playback/Calendar Display.....	70
List by Date Mode	71
Viewing and Deleting Images in a Sequence.....	72
Editing Images (Still Images)	74



Playback Zoom

Moving the zoom control toward **T (Q)** playback zoom) in full-frame playback mode (20) zooms in on the image.

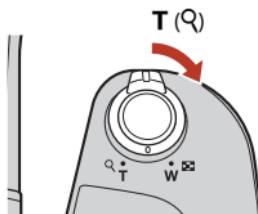

Full-frame Playback



Image is zoomed in.

Displayed area guide

- You can change the magnification rate by moving the zoom control toward **(Q)** or **T (Q)**.
- To view a different area of the image, press the multi selector **▲▼◀▶**.
- When a zoomed image is displayed, press the **OK** button to return to full-frame playback mode.


Cropping Images

When a zoomed image is displayed, you can press the **MENU** button to crop the image to include only the visible portion and save it as a separate file (79).



Thumbnail Playback/Calendar Display

Moving the zoom control toward **W** (Thumbnail playback) in full-frame playback mode (20) displays images as thumbnails.

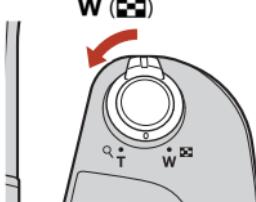

Full-frame Playback

W
(Thumbnail playback)
←
T
(Q)



Thumbnail Playback

W
(Thumbnail playback)
←
T
(Q)



Calendar Display

- You can change the number of thumbnails displayed by moving the zoom control toward **W** (Thumbnail playback) or **T** (Q).
- While using thumbnail playback mode, press the multi selector **▲▼◀▶** to select an image and then press the **OK** button to display that image in full-frame playback mode.
- While using calendar display mode, press **▲▼◀▶** to select a date and then press the **OK** button to display the images captured on that day.

✓ Notes About Calendar Display

Images captured when the camera's date is not set are treated as images captured on January 1, 2016.



List by Date Mode

Press the  button (playback mode) → **MENU** button → **MODE** menu icon →  List by date → 

Use the multi selector   to select a date and then press the  button to play back the images captured on the selected date.

- Functions in the playback menu (129) can be used for the images in the selected shooting date (except **Copy**).
- The following operations are available while the shooting date selection screen is displayed.
 - **MENU** button: The functions listed below are available.
 - Slide show
 - Protect*
 - * The same settings can be applied to all images captured on the selected date.
 -  button: Deletes all images captured on the selected date.



Notes About List by Date Mode

- Up to the most recent 29 dates can be selected. If images exist for more than 29 dates, all images saved earlier than the most recent 29 dates will be combined under **Others**.
- The 9,000 most recent images can be displayed.
- Images captured when the camera's date is not set are treated as images captured on January 1, 2016.



Viewing and Deleting Images in a Sequence

Viewing Images in a Sequence

Images captured continuously, or with the multiple exp. lighten, creative mode, or self-collage function, are saved as a sequence.

One image in a sequence is used as the key picture to represent the sequence when displayed in full-frame playback mode or thumbnail playback mode.

To display each image in the sequence individually, press the **OK** button.



After pressing the **OK** button, the operations listed below are available.

- To display the previous or next image, press the multi selector **◀▶**.
- To display images that are not included in the sequence, press **▲** to return to the key picture display.
- To display images in a sequence as thumbnails, or to play them back in a slide show, set **Sequence display options** to **Individual pictures** in the playback menu (133).



Sequence Display Options

Images captured with cameras other than this camera cannot be displayed as a sequence.

Playback Menu Options Available When Using Sequence

- When images in a sequence are displayed in full-frame playback mode, press the **MENU** button to select functions in playback menu (129).
- If you press the **MENU** button when a key picture is displayed, the following settings can be applied to all images in the sequence:
 - Mark for upload, Protect, Copy



Deleting Images in a Sequence

When the  (delete) button is pressed for images in a sequence, the images that are deleted vary depending on how the sequences are displayed.

- When the key picture is displayed:
 - **Current image:** All images in the displayed sequence are deleted.
 - **Erase selected images:** When a key picture is selected on the erase selected images screen (22), all images in that sequence are deleted.
 - **All images:** All images on the memory card or in the internal memory are deleted.
- When images in a sequence are displayed in full-frame playback mode:
 - **Current image:** The image currently displayed is deleted.
 - **Erase selected images:** Images that are selected in the sequence are deleted.
 - **Entire sequence:** All images in the displayed sequence are deleted.



Editing Images (Still Images)

Before Editing Images

You can easily edit images on this camera. Edited copies are saved as separate files. Edited copies are saved with the same shooting date and time as the original.

Restrictions on Image Editing

- An image can be edited up to 10 times. A still image created by editing a movie can be edited up to 9 times.
- You may not be able to edit images of a certain size or with certain editing functions.

Quick Effects: Changing Hue or Mood

Process images with a variety of effects.

You can select **Painting**, **Photo illustration**, **Soft portrait**, **Background monochrome portrait**, **Fisheye**, **Cross screen**, or **Miniature effect**.

- 1 Display the image to which you want to apply an effect in full-frame playback mode and press the **OK** button.



- 2 Use the multi selector **▲▼◀▶** to select the desired effect and press the **OK** button.

- Move the zoom control (2) toward **T** (Q) to switch to full-frame playback or **W** (Q) to switch to thumbnail playback.
- To exit without saving the edited image, press the **MENU** button.



- 3 Select **Yes** and press the **OK** button.

- An edited copy is created.




Quick Retouch: Enhancing Contrast and Saturation

Press the **▶** button (playback mode) → Select an image → **MENU** button → Quick retouch → **OK** button

Use the multi selector **▲▼** to select the desired effect level and press the **OK** button.

- The edited version is displayed on the right.
- To exit without saving the copy, press **◀**.

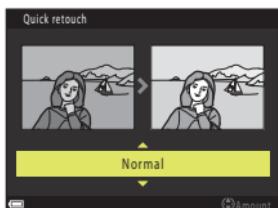


D-Lighting: Enhancing Brightness and Contrast

Press the **▶** button (playback mode) → Select an image → **MENU** button → D-Lighting → **OK** button

Use the multi selector **▲▼** to select **OK** and press the **OK** button.

- The edited version is displayed on the right.
- To exit without saving the copy, select **Cancel** and press the **OK** button.

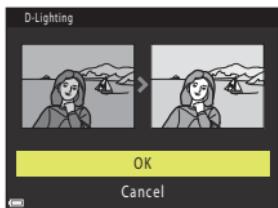

Red-eye Correction: Correcting Red-eye When Shooting with the Flash

Press the **▶** button (playback mode) → Select an image → **MENU** button → Red-eye correction → **OK** button

Preview the result and press the **OK** button.

- To exit without saving the copy, press the multi selector **◀**.



✓ Notes About Red-eye Correction


- Red-eye correction can only be applied to images when red-eye is detected.
- Red-eye correction can be applied to pets (dogs or cats) even if their eyes are not red.
- Red-eye correction may not produce the desired results in some images.
- In rare cases, red-eye correction may be applied unnecessarily to other areas of the image.

Glamour Retouch: Enhancing Human Faces

Press the **▶** button (playback mode) → Select an image → **MENU** button → Glamour retouch → **OK** button


1 Use the multi selector **▲▼◀▶** to select the face that you want to retouch and press the **OK** button.

- When only one face is detected, proceed to step 2.

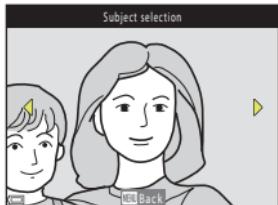


2 Use **◀▶** to select the effect, use **▲▼** to select the effect level, and press the **OK** button.

- You can simultaneously apply multiple effects. Adjust or check the settings for all effects before pressing the **OK** button.
 - Small face**, **Skin softening**, **Foundation makeup**, **Glare reduction**, **Hide eye bags**, **Big eyes**, **Whiten eyes**, **Eye shadow**, **Mascara**, **Whiten teeth**, **Lipstick**, **Redden cheeks**
- Press the **MENU** button to return to the screen for selecting a person.

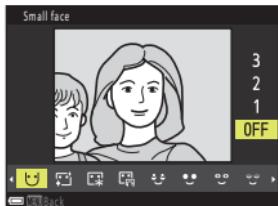


3 Preview the result and press the **OK** button.

- To change the settings, press **◀** to return to step 2.
- To exit without saving the edited image, press the **MENU** button.

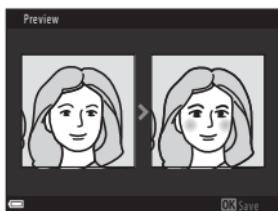

4 Select **Yes** and press the **OK** button.

- An edited copy is created.

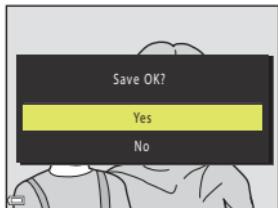

Notes About Glamour Retouch

- One face can be edited at a time. To apply glamour retouch to another face, edit the edited image again.
- Depending on the direction in which faces are looking, or the brightness of faces, the camera may be unable to accurately detect faces, or the glamour retouch function may not perform as expected.
- If no faces are detected, a warning is displayed and the screen returns to the playback menu.
- The glamour retouch function is available only for images captured at an ISO sensitivity of 1600 or lower, and the image size of 640 × 480 or larger.



Small Picture: Reducing the Size of an Image

Press the **▶** button (playback mode) → Select an image → **MENU** button → **Small picture** → **OK** button


1 Use the multi selector **▲▼** to select the desired copy size and press the **OK** button.

- For images captured at an image mode setting of **16:9 4608×2592**, only **640×360** is displayed, and for those of **1:1 3456×3456**, only **480×480** is displayed.



2 Select **Yes** and press the **OK** button.

- An edited copy is created (compression ratio of approximately 1:8).

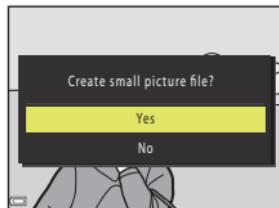

Crop: Creating a Cropped Copy

- 1 Move the zoom control to enlarge the image (69).
- 2 Adjust the image so that only the portion that you want to keep is displayed, and then press the MENU (menu) button.
 - Move the zoom control toward **T** (Q) or **W** (Q) to adjust the magnification rate. Set a magnification rate at which **MENU**: **4:3** is displayed.
 - Use the multi selector **▲▼◀▶** to scroll to the portion of the image that you want to display.

- 3 Confirm the area that you want to keep, and press the **OK** button.

- To set the area again, press **◀**.



- 4 Select **Yes** and press the **OK** button.

- An edited copy is created.

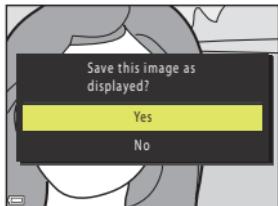


Image Size

- The aspect ratio (horizontal to vertical) of the cropped copy is the same as the original.
- When the image size of the cropped copy is 320 × 240 or smaller, the image is displayed at a smaller size during playback.



Movies


Basic Operations of Movie Recording and Movie Playback.....	81
Capturing Still Images While Recording Movies	84
Short Movie Show Mode (Combining Movie Clips to Create Short Movies) ...	85
Operations During Movie Playback	88
Editing Movies	89



Basic Operations of Movie Recording and Movie Playback

1 Display the shooting screen.

- Check the remaining amount of movie recording time.
- It is recommended that you display the movie frame that indicates the area that will be recorded in a movie (182).

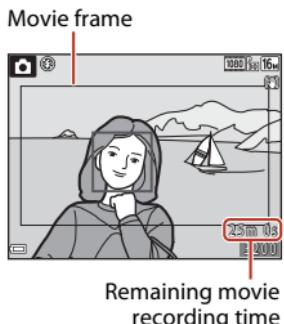

2 Lower the flash (19).

- Recording movies while the flash is raised may cause the audio to be muffled.

3 Press the ● (movie-record) button to start movie recording.

- The camera focuses on the subject in the center of the frame.
- Press the multi selector ▶ to pause recording, and press ▶ again to resume recording (except when an HS movie option is selected in **Movie options**). Recording automatically ends if it remains paused for about five minutes.




- You can capture a still image by pressing the shutter-release button while recording a movie (184).

4 Press the ● (movie-record) button again to end recording.

5 Select a movie in full-frame playback mode and press the OK button to play it back.

- An image with a movie options icon is a movie.

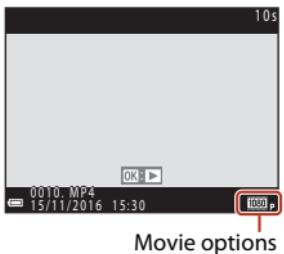

Movie options



Movie Frame

- Press the **DISP** button to display the movie frame (14). Check the range of a movie in the frame before movie recording.
- The area that is recorded in a movie varies depending on the **Movie options** or **Movie VR** settings in the movie menu.

Maximum Movie Recording Time

Individual movie files cannot exceed 4 GB in size or 29 minutes in length, even when there is sufficient free space on the memory card for longer recording.

- The remaining recording time for a single movie is displayed on the shooting screen.
- The actual remaining recording time may vary depending on the movie content, subject movement, or type of memory card.
- Memory cards with an SD Speed Class rating of 6 or faster are recommended when recording movies (175). Movie recording may stop unexpectedly when a memory card with a lower Speed Class rating is used.

Camera Temperature

- The camera may become hot when recording movies for an extended period of time or when the camera is used in a hot area.
- If the inside of the camera becomes extremely hot when recording movies, the camera will automatically stop recording.

The amount of time remaining until the camera stops recording (10s) is displayed.

After the camera stops recording, it turns itself off.

Leave the camera off until the inside of the camera has cooled.



Notes About Movie Recording

✓ Notes About Saving Images or Movies

The indicator showing the number of exposures remaining or the indicator showing the remaining recording time flashes while images or movies are being saved. **Do not open the battery-chamber/memory card slot cover or remove the batteries or memory card** while an indicator is flashing. Doing this could result in loss of data, or in damage to the camera or the memory card.

✓ Notes About Recorded Movies

- When using the camera's internal memory, saving movies may take some time.
- There may be some degradation in image quality when digital zoom is used.
- The sounds of zoom control operation, zoom, autofocus lens drive movement, vibration reduction, and aperture operation when brightness changes may be recorded.
- The following phenomena may be seen on the screen while recording movies. These phenomena are saved in the recorded movies.
 - Banding may occur in images under fluorescent, mercury-vapor, or sodium-vapor lighting.
 - Subjects that move quickly from one side of the frame to the other, such as a moving train or car, may appear skewed.
 - The entire movie image may be skewed when the camera is panned.
 - Lighting or other bright areas may leave residual images when the camera is moved.
- Depending on the distance to the subject or the amount of zoom applied, colored stripes may appear on subjects with repeating patterns (fabrics, lattice windows, etc.) during movie recording and playback. This occurs when the pattern in the subject and the layout of the image sensor interfere with each other; it is not a malfunction.

✓ Notes About Vibration Reduction During Movie Recording

- When **Movie VR** (127) in the movie menu is set to **On (hybrid)**, the angle of view (i.e., the area visible in the frame) becomes narrower during movie recording.
- When using a tripod to stabilize the camera during shooting, set **Movie VR** to **Off** to prevent potential errors caused by this function.

✓ Notes About Autofocus for Movie Recording

Autofocus may not perform as expected (62). Should this occur, try the following:

1. Set **Autofocus mode** in the movie menu to **Single AF** (default setting) before starting movie recording.
2. Frame another subject (positioned at the same distance from the camera as the intended subject) in the center of the frame, press the (movie-record) button to start recording, and modify the composition.



Capturing Still Images While Recording Movies

If the shutter-release button is pressed all the way while recording a movie, one frame is saved as a still image. Movie recording continues while the still image is being saved.

- A still image can be captured when  is displayed on the screen. When  is displayed, a still image cannot be captured.
- The size of the captured still image is determined by the movie image size (122).




✓ Notes About Capturing Still Images During Movie Recording

- Still images cannot be saved during movie recording in the following situations:
 - When the remaining movie recording time is less than five seconds
 - When **Movie options** (122) is set to **1080 50 1080/60i**, **1080 50 1080/50i**, **480 50 480/30p**, **480 50 480/25p**, or HS movie
- The sounds of operating the shutter-release button when saving a still image may be heard in the recorded movie.
- If the camera moves when the shutter-release button is pressed, the image may be blurred.




Short Movie Show Mode (Combining Movie Clips to Create Short Movies)

The camera creates a short movie that is up to 30 seconds long (1080p 30 1080/30p or 1080p 25 1080/25p) by recording and automatically combining multiple movie clips that are several seconds long.

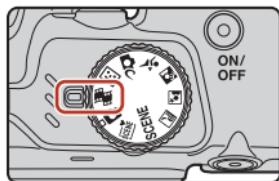

1 Press the MENU (menu) button and configure the settings for recording movies.

- **Number of shots:** Set the number of movie clips that the camera records and the recording time for each movie clip. By default, the camera records 15 movie clips that are 2 seconds each to create a 30-second short movie.
- **Special effects** (87): Apply various effects to movies when shooting. Effects can be changed for each movie clip.
- **Background music:** Select the background music. You can preview it by moving the zoom control (2) toward T (Q).
- After the settings are complete, press the **MENU** button or shutter-release button to exit the menu.

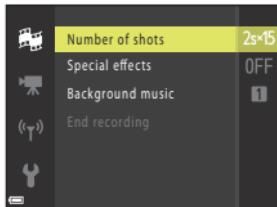


2 Press the ● (movie-record) button to record a movie clip.

- The camera automatically stops recording the movie clip when the time specified in step 1 elapses.
- Movie clip recording can be paused temporarily. See "Pausing Movie Recording" (86).



3 Check the recorded movie clip, or delete it.

- To check it, press the OK button.
- To delete it, press the button. The last recorded movie clip or all movie clips can be deleted.
- To continue recording movie clips, repeat the operation in step 2.
- To change the effects, return to step 1.

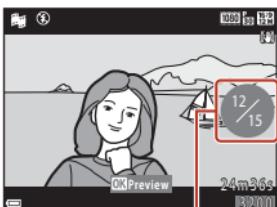

Number of movie clips recorded



4 Save the short movie show.

- The short movie show is saved when the camera finishes recording the specified number of movie clips.
- To save a short movie show before the camera finishes recording the specified number of movie clips, press the **MENU** button when the shooting standby screen is displayed, and then select **End recording**.
- Movie clips are deleted when a short movie show is saved.

Operations During Movie Clip Playback

To adjust the volume, move the zoom control while a movie clip is playing (BOOK).

Playback controls are displayed on the screen.

The operations described below can be performed by using the multi selector **◀▶** to select a control and then pressing the **OK** button.



Playback controls

Function	Icon	Description
Rewind	◀	Hold down the OK button to rewind the movie.
Fast-forward	▶	Hold down the OK button to fast-forward the movie.
Pause	■	Pause playback. The operations listed below can be performed while paused.
		◀ Rewind the movie one frame. Hold down the OK button for continuous rewinding.
		▶ Advance the movie one frame. Hold down the OK button for continuous advancing.
		▶ Resume playback.
End playback	■	Return to the shooting screen.
End recording	■	Save the short movie show using the recorded movie clips.

Notes About Recording a Short Movie Show

- The camera cannot record movies if a memory card is not inserted.
- Do not exchange the memory card until a short movie show is saved.

Pausing Movie Recording

- A still image (16:9 12M 4608×2592) can be captured if you press the shutter-release button when the shooting standby screen is displayed.
- You can pause movie recording and play back images or enter other shooting modes to take pictures. Movie recording resumes when you enter short movie show mode again.



Functions Available in Short Movie Show Mode

- Self-timer (54)
- Macro mode (56)
- Exposure compensation (57)
- Short movie show menu (85)
- Movie options menu (122)

Using Special Effects

Apply effects to images during shooting.

Rotate the mode dial to → MENU button → menu icon → Special effects →

Type	Description
SOFT Soft	Softens the image by adding a slight blur to the entire image.
SEPIA Nostalgic sepia	Adds a sepia tone and reduces the contrast to simulate the qualities of an old photograph.
High-contrast monochrome	Creates a black-and-white photograph with a strong contrast.
Selective color	Keeps only a selected color and makes other colors black-and-white.
POP Pop	Increases the color saturation of the entire image to create a bright look.
Cross process	Gives the image a mysterious appearance based on a specific color.
Toy camera effect 1	Gives the entire image a yellowish hue and darkens the image periphery.
Toy camera effect 2	Decreases the color saturation of the entire image and darkens the image periphery.
Mirror	Creates a bilaterally symmetric image whose right half is an inverted mirror image of the left half.
OFF Off (default setting)	No effect is applied to the image.

- When **Selective color** or **Cross process** is selected, use the multi selector to select the desired color, and press the to apply the color.



Operations During Movie Playback

To adjust the volume, move the zoom control while a movie is playing (2).



Volume indicator

Playback controls are displayed on the screen.

The operations described below can be performed by using the multi selector $\blacktriangleleft\blacktriangleright$ to select a control and then pressing the OK button.



When paused

Function	Icon	Description	
Rewind		Hold down the OK button to rewind the movie.	
Fast-forward		Hold down the OK button to fast-forward the movie.	
Pause		Pause playback. The operations listed below can be performed while paused.	
			Rewind the movie one frame. Hold down the OK button for continuous rewinding.
			Advance the movie one frame. Hold down the OK button for continuous advancing.
			Extract the desired portion of a movie and save it as a separate file.
			Extract a single frame of a movie and save it as a still image.
			Resume playback.
End		Return to full-frame playback mode.	




Editing Movies

Extracting Only the Desired Portion of a Movie

The desired portion of a recorded movie can be saved as a separate file.


1 Play back a desired movie and pause at the start point of the portion that you want to extract (88).

2 Use the multi selector $\blacktriangleleft\blacktriangleright$ to select the  control, and then press the  button.

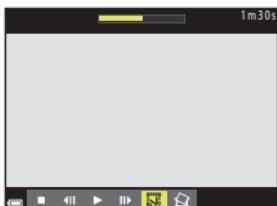


3 Use $\blacktriangle\blacktriangledown$ to select  (choose start point).

- Use $\blacktriangleleft\blacktriangleright$ to move the start point.
- To cancel editing, select  (back), and press the  button.

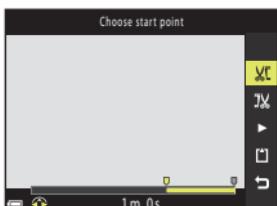


4 Use $\blacktriangle\blacktriangledown$ to select  (choose end point).

- Use $\blacktriangleleft\blacktriangleright$ to move the end point.
- To preview the specified portion, select  and then press the  button. Press the  button again to stop previewing.

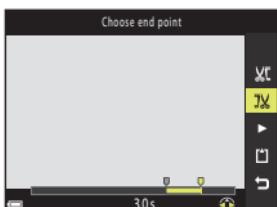

5 Use $\blacktriangle\blacktriangledown$ to select  (save) and press the  button.

- Follow the instructions on the screen to save the movie.

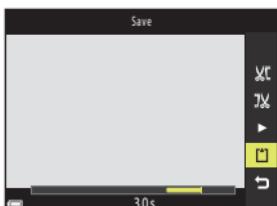


✓ Notes About Movie Editing

- Use batteries with a sufficient amount of charge remaining to prevent the camera from turning off during editing. When the battery level indicator is , movie editing is not possible.
- A movie that was created by editing cannot be edited again.
- The actual trimmed portion of a movie may differ slightly from the portion selected using the start and end points.
- Movies cannot be trimmed so that they are less than two seconds long.

Saving a Frame from a Movie as a Still Image

The desired frame of a recorded movie can be extracted and saved as a still image.

- Pause a movie and display the frame to be extracted .
- Use the multi selector  to select the  control and press the .

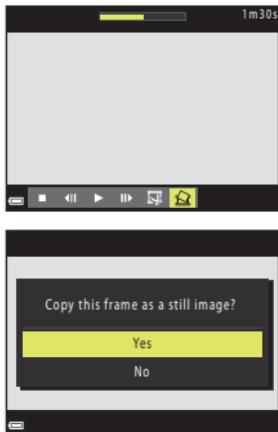

- Select **Yes** when a confirmation dialog is displayed, and press the  button to save the image.
- The image quality of the still images to be saved is normal (compression ratio of approximately 1:8). The image size is determined by the original movie image size .

✓ Notes About Saving Still Images

Still images cannot be saved from movies recorded at  **1080/60i**,  **1080/50i**,  **480/30p**,  **480/25p**, or HS movie .



Connecting the Camera to a TV, Printer, or Computer

Utilizing Images	92
Viewing Images on a TV	93
Printing Images Without a Computer.....	95
Transferring Images to a Computer (ViewNX-i)	99



Utilizing Images

In addition to using the SnapBridge app to enjoy the captured images, you can also utilize the images in various ways by connecting the camera to the devices described below.

Viewing Images on a TV



Images and movies captured with the camera can be viewed on a TV.
Connection method: Connect the video and audio plugs of the optional audio video cable to the TV's input jacks. Alternatively, connect a commercially available HDMI cable to the TV's HDMI input jack.

Printing Images Without a Computer



If you connect the camera to a PictBridge-compatible printer, you can print images without using a computer.
Connection method: Connect the camera directly to the printer's USB port with the included USB cable.

Transferring Images to a Computer (ViewNX-i)



You can transfer images and movies to a computer for viewing and editing.
Connection method: Connect the camera to the computer's USB port with the USB cable.

- Before connecting to a computer, install ViewNX-i on the computer.

✓ Notes About Connecting Cables to the Camera



Open the connector cover.



HDMI micro connector (Type D)
USB/audio/video output connector

Insert the plug.

- Make sure to turn the camera off before connecting or disconnecting cables. Check the shape and direction of the plugs and do not insert or remove the plugs at an angle.
- Make sure that the remaining battery level is sufficient. If the EH-67/EH-67s AC Adapter (available separately) is used, this camera can be powered from an electrical outlet. Do not, under any circumstances, use an AC adapter other than the EH-67/EH-67s. Failure to observe this precaution could result in overheating or damage to the camera.
- For information about the connection methods and subsequent operations, refer to the documentation included with the device in addition to this document.




Viewing Images on a TV


1 Turn off the camera and connect it to the TV.

- Check the shape and direction of the plugs and do not insert or remove the plugs at an angle.

When using the audio/video cable

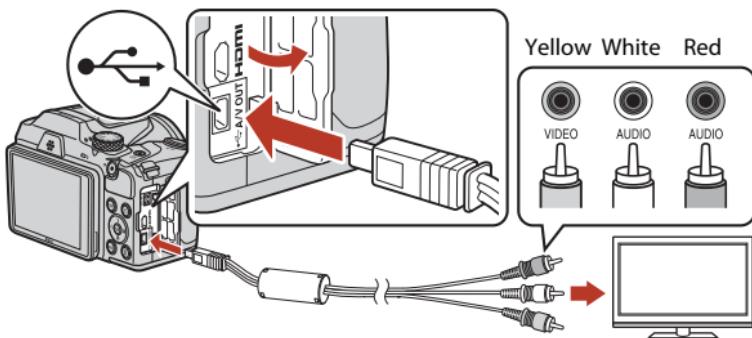

When using a commercially available HDMI cable

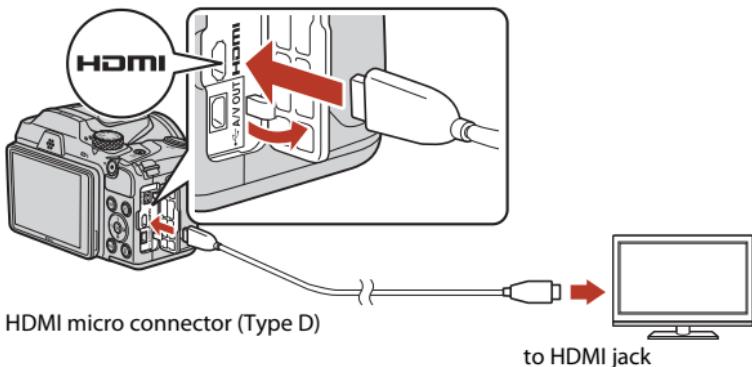


2 Set the TV's input to external input.

- See the documentation provided with your TV for details.



3 Press and hold down the ▶ (playback) button to turn on the camera.

- Images are displayed on the TV.
- The camera screen does not turn on.

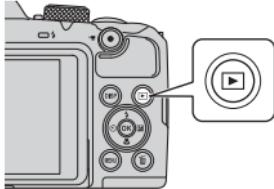

Printing Images Without a Computer


Users of PictBridge-compatible printers can connect the camera directly to the printer and print images without using a computer.

Connecting the Camera to a Printer

1 Turn on the printer.


2 Turn off the camera and connect it to the printer using the USB cable.

- Check the shape and direction of the plugs and do not insert or remove the plugs at an angle.

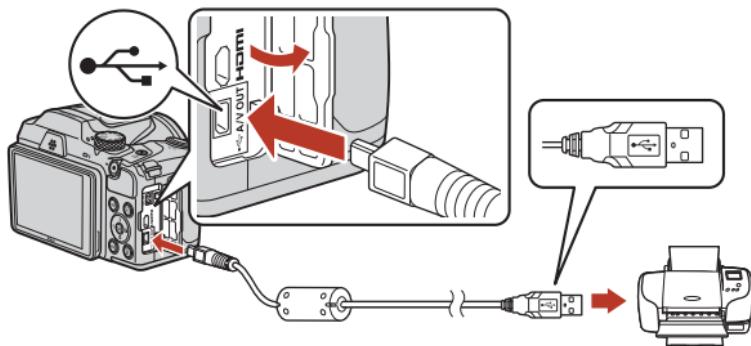

3 Turn on the camera.

- The **PictBridge** startup screen (①) is displayed on the camera screen, followed by the **Print selection** screen (②).

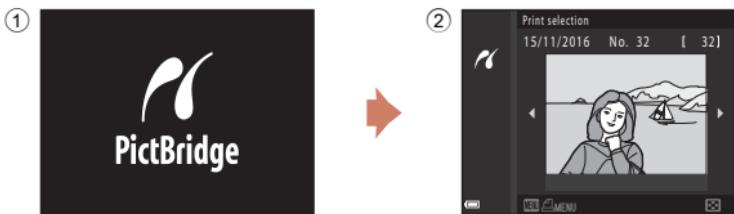

Printing Images One at a Time


1 Use the multi selector to select the desired image and press the button.

- Move the zoom control toward **W**  to switch to thumbnail playback or **T**  to switch to full-frame playback.




2 Use to select **Copies** and press the button.

- Use   to set the desired number of copies (up to nine) and press the  button.

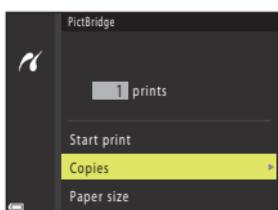


3 Select **Paper size** and press the button.

- Select the desired paper size and press the  button.
- To print with the paper size setting configured on the printer, select **Default**.
- The paper size options available on the camera vary depending on the printer that you use.

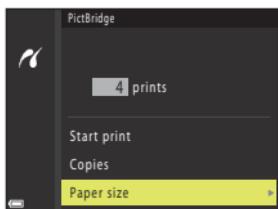

4 Select **Start print** and press the button.

- Printing starts.

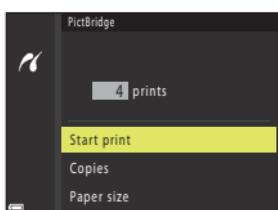


Printing Multiple Images

1 When the **Print selection** screen is displayed, press the **MENU** (menu) button.




2 Use the multi selector **▲▼** to select **Paper size** and press the **OK** button.

- Select the desired paper size and press the **OK** button.
- To print with the paper size setting configured on the printer, select **Default**.
- The paper size options available on the camera vary depending on the printer that you use.
- To exit the print menu, press the **MENU** button.

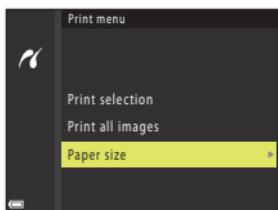

3 Select **Print selection** or **Print all images** and press the **OK** button.

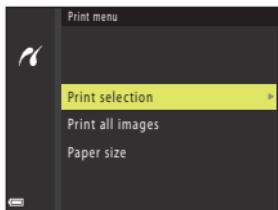

Print selection

Select images (up to 99) and the number of copies (up to 9) of each.

- Use the multi selector **◀▶** to select images, and use **▲▼** to specify the number of copies to be printed.
- Images selected for printing are indicated by  and the number of copies to be printed. To cancel the print selection, set the number of copies to 0.
- Move the zoom control toward **T (Q)** to switch to full-frame playback or **W (S)** to switch to thumbnail playback.
- Press the **OK** button when setting is complete. When the screen for confirming the number of print copies is displayed, select **Start print** and press the **OK** button to start printing.



Print all images

One copy each of all images saved in the internal memory, or on the memory card, is printed.

- When the screen for confirming the number of print copies is displayed, select **Start print** and press the **OK** button to start printing.



Transferring Images to a Computer (ViewNX-i)

Installing ViewNX-i

ViewNX-i is free software that enables you to transfer images and movies to your computer for viewing and editing.

To install ViewNX-i, download the latest version of the ViewNX-i installer from the following website and follow the on-screen instructions to complete installation.

ViewNX-i: <http://downloadcenter.nikonimglib.com>

For system requirements and other information, see the Nikon website for your region.


Transferring Images to a Computer

1 Prepare a memory card that contains images.

You can use any of the methods below to transfer images from the memory card to a computer.

- **SD memory card slot/card reader:** Insert the memory card into the card slot of your computer or the card reader (commercially available) that is connected to the computer.
- **Direct USB connection:** Turn the camera off and ensure that the memory card is inserted in the camera. Connect the camera to the computer using the USB cable. Turn the camera on.

To transfer images that are saved in the camera's internal memory, remove the memory card from the camera before connecting it to the computer.

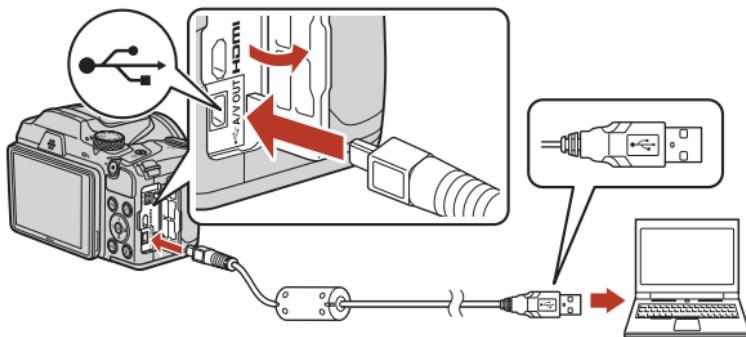


If a message is displayed prompting you to choose a program, select Nikon Transfer 2.

- **When using Windows 7**

If the dialog shown on the right is displayed, follow the steps below to select Nikon Transfer 2.

1 Under **Import pictures and videos**, click **Change program**. A program selection dialog will be displayed; select Nikon Transfer 2 and click **OK**.

2 Double-click the Nikon Transfer 2 icon.

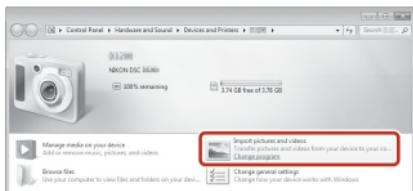

- **When using Windows 10 or Windows 8.1**

If the dialog shown on the right is displayed, click the dialog and then click **Import File/Nikon Transfer 2**.



- **When using OS X or macOS**

If Nikon Transfer 2 does not automatically start, launch the **Image Capture** application that comes bundled with Mac while the camera and your computer are connected, and select Nikon Transfer 2 as the default application to open when the camera is connected to your computer.

If the memory card contains a large number of images, it may take a while for Nikon Transfer 2 to start. Wait until Nikon Transfer 2 starts.



Notes About Connecting the USB Cable

Operation is not guaranteed if the camera is connected to the computer via a USB hub.




Using ViewNX-i

Consult online help for more information.



2 After Nikon Transfer 2 starts, click **Start Transfer**.

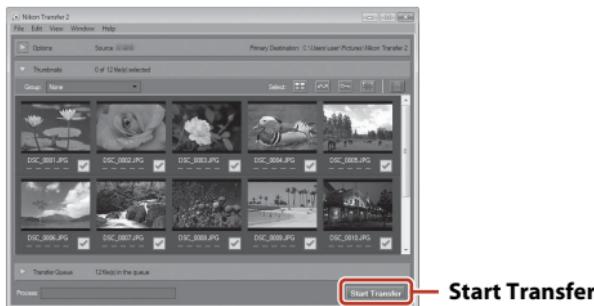

- Image transfer begins. When image transfer is complete, ViewNX-i starts and the transferred images are displayed.

3 Terminate the connection.

- If you are using a card reader or card slot, choose the appropriate option in the computer operating system to eject the removable disk corresponding to the memory card and then remove the memory card from the card reader or card slot.
- If the camera is connected to the computer, turn the camera off and disconnect the USB cable.



Using the Menu

Menu Operations.....	103
Menu Lists	106
The Shooting Menu (The Common Shooting Options)	110
The Shooting Menu (for  (Auto) Mode).....	111
The Smart Portrait Menu	120
The Movie Menu	122
The Playback Menu.....	129
The Network Menu	134
The Setup Menu.....	136



Menu Operations

You can set the menus listed below by pressing the **MENU** (menu) button.

-  **Shooting menu**^{1,2}
-  **Movie menu**¹
-  **Playback menu**³
-  **Network menu**
-  **Setup menu**


¹ Press the **MENU** button when the shooting screen is displayed.

² Menu icons and available setting options vary depending on the shooting mode.

³ Press the **MENU** button when the playback screen is displayed. Menu icons and available setting options vary depending on the playback mode.


1 Press the **MENU** (menu) button.

- The menu is displayed.

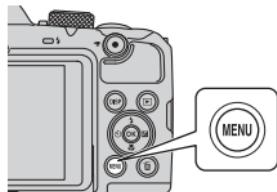


2 Press the multi selector .

- The current menu icon is displayed in yellow.

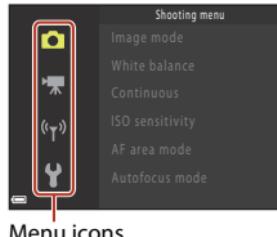


3 Select a menu icon and press the **OK** button.

- The menu options become selectable.

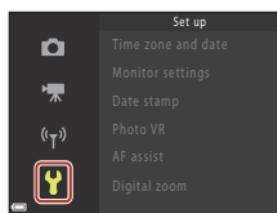


4 Select a menu option and press the button.

- Certain menu options cannot be set depending on the current shooting mode or the state of the camera.

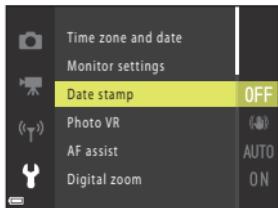

5 Select a setting and press the button.

- The setting you selected is applied.
- When you are finished using the menu, press the **MENU** button.
- When a menu is displayed, you can switch to shooting mode by pressing the shutter-release button or .

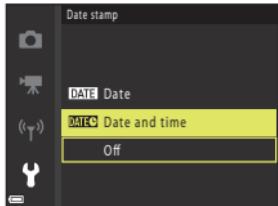


The Image Selection Screen

When an image selection screen such as the one shown on the right is displayed while operating the camera menu, follow the procedures described below to select the images.



1 Use the multi selector to select the desired image.

- Move the zoom control (2) toward **T** (Q) to switch to full-frame playback or **W** (Q) to switch to thumbnail playback.
- Only one image can be selected for **Rotate image**. Proceed to step 3.

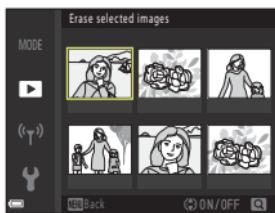

2 Use to select **ON** or **OFF**.

- When **ON** is selected, an icon is displayed with the image. Repeat steps 1 and 2 to select additional images.



3 Press the button to apply the image selection.

- When a confirmation dialog is displayed, follow the on-screen instructions to operate.



Menu Lists

The Shooting Menu

Enter shooting mode → MENU button

Common Options

Option	Default setting	≡
Image mode	16M 4608×3456	110

For (Auto) Mode

Option	Default setting	≡
White balance	Auto	111
Continuous	Single	113
ISO sensitivity	Auto	115
AF area mode	Target finding AF	116
Autofocus mode	Pre-focus	119

For Smart Portrait Mode

Option	Default setting	≡
Self-Collage	–	120
Blink proof	Off	121



The Movie Menu

Enter shooting mode → **MENU** button →  menu icon →  button

Option	Default setting	
Movie options	 1080/30p or  1080/25p	122
Autofocus mode	Single AF	126
Movie VR	On (hybrid)	127
Wind noise reduction	Off	127
Frame rate	–	128

The Playback Menu

Press the  button (playback mode) → **MENU** button

Option	
Mark for upload ¹	129
Quick retouch ²	75
D-Lighting ²	75
Red-eye correction ²	76
Glamour retouch ²	76
Slide show	130
Protect ¹	131
Rotate image ¹	131
Small picture ²	78
Copy ¹	132
Sequence display options	133

¹ Select an image on the image selection screen. See "The Image Selection Screen" ( 105) for more information.

² Edited images are saved as separate files. Some images may not be edited.



The Network Menu

Press the **MENU** button →  menu icon →  button

Option	
Airplane mode	134
Connect to smart device	134
Send while shooting	134
Wi-Fi	134
Bluetooth	135
Restore default settings	135



The Setup Menu

Press the **MENU** button →  menu icon →  button

Option	
Time zone and date	136
Monitor settings	138
Date stamp	139
Photo VR	140
AF assist	140
Digital zoom	141
Sound settings	141
Auto off	142
Format card/Format memory	143
Language	143
Image comment	144
Copyright information	145
Location data	146
Reset all	146
Battery type	147
Conformity marking	147
Firmware version	147



The Shooting Menu (The Common Shooting Options)

Image Mode (Image Size and Quality)

Enter shooting mode* → MENU button → Image mode →  button

* Image mode can be set in any shooting mode other than short movie show mode. The setting is also applied to other shooting modes (except **Easy panorama** scene mode).

Select the combination of image size and compression ratio to be used when saving images. The higher the image mode setting, the larger the size at which it can be printed, and the lower the compression ratio, the higher the quality of the images, but the number of images that can be saved is reduced.

Option*	Compression ratio	Aspect ratio (horizontal to vertical)
16* 4608×3456★	Approx. 1:4	4:3
16M 4608×3456 (default setting)	Approx. 1:8	4:3
8M 3264×2448	Approx. 1:8	4:3
4M 2272×1704	Approx. 1:8	4:3
2M 1600×1200	Approx. 1:8	4:3
VGA 640×480	Approx. 1:8	4:3
16:9 4608×2592	Approx. 1:8	16:9
1:1 3456×3456	Approx. 1:8	1:1

* The numerical values indicate the number of pixels that are captured.

Example: **16M 4608×3456** = approx. 16 megapixels, 4608 × 3456 pixels

Notes About Printing Images at 1:1 Aspect Ratio

Change the printer setting to "Border" when printing images at a 1:1 aspect ratio. Some printers may not be able to print images at a 1:1 aspect ratio.

Notes About Image Mode

This function may not be available to use in combination with other functions (□66).

Number of Images That Can Be Saved

- The approximate number of images that can be saved can be checked on the screen when shooting (□17).
- Note that due to JPEG compression, the number of images that can be saved may vary greatly depending on the image content, even when using memory cards with the same capacity and the same image mode setting. In addition, the number of images that can be saved may vary depending on the make of the memory card.
- If the number of exposures remaining is 10,000 or more, the number of exposures remaining display shows "9999."



The Shooting Menu (for (Auto) Mode)

White Balance (Adjusting Hue)

Rotate the mode dial to  → MENU button →  menu icon → White balance → 

Adjust white balance to suit the light source or weather conditions in order to make the colors in images match what you see with your eyes.

Option	Description
AUTO Auto (default setting)	White balance is automatically adjusted.
PRE Preset manual	Use when the desired result is not achieved with Auto , Incandescent , etc. (112).
 Daylight	Use under direct sunlight.
 Incandescent	Use under incandescent lighting.
 Fluorescent	Use under fluorescent lighting.
 Cloudy	Use under overcast skies.
 Flash	Use with the flash.

Notes About White Balance

- Lower the flash when white balance is set to any setting other than **Auto** or **Flash** (19).
- This function may not be available to use in combination with other functions (66).




Using Preset Manual

Follow the procedures described below to measure the white balance value under the lighting used during shooting.

1 Place a white or gray reference object under the lighting that will be used during shooting.


2 Use the multi selector $\blacktriangle\blacktriangledown$ to select **Preset manual** in the **White balance** menu, and press the **OK** button.

- The lens extends to the zoom position for measurement.

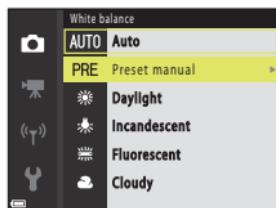


3 Select **Measure**.

- To apply the last measured value, select **Cancel** and press the **OK** button.

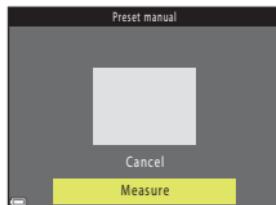

4 Frame the white or gray reference object in the measuring window, and press the **OK** button to measure the value.

- The shutter is released and measurement is complete (no image is saved).

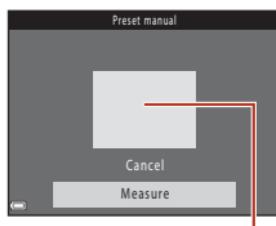

✓ Notes About Preset Manual

A white balance value for flash lighting cannot be measured with **Preset manual**. When shooting using the flash, set **White balance** to **Auto** or **Flash**.



Continuous Shooting

Rotate the mode dial to → MENU button → menu icon → Continuous → **OK** button

Option	Description
S Single (default setting)	One image is captured each time the shutter-release button is pressed.
Continuous H	While the shutter-release button is held all the way down, images are captured continuously. <ul style="list-style-type: none">The camera can capture up to about 7 images continuously at a rate of about 7.7 fps (when image mode is set to 16M 4608x3456).
Continuous L	While the shutter-release button is held all the way down, images are captured continuously. <ul style="list-style-type: none">The camera can capture up to about 7 images continuously at a rate of about 2 fps (when image mode is set to 16M 4608x3456). When you continue to hold the shutter-release button all the way down, the speed decreases.
Pre-shooting cache	Pre-shooting cache shooting begins when the shutter-release button is pressed halfway. When the shutter-release button is pressed the rest of the way down, the camera saves the current image as well as the images captured immediately before the button is pressed (114). Pre-shooting cache makes it easy to capture perfect moments. <ul style="list-style-type: none">The camera can capture up to about 25 images continuously at a rate of about 15 fps (including a maximum of 4 images captured in the pre-shooting cache).Image mode is fixed at 2M (image size: 1600 × 1200 pixels).
Continuous H: 120 fps	Each time the shutter-release button is pressed all the way down, images are captured continuously at a high speed rate. <ul style="list-style-type: none">The camera can capture up to about 50 images continuously at a rate of about 120 fps.Image mode is fixed at VGA (image size: 640 × 480 pixels).
Continuous H: 60 fps	Each time the shutter-release button is pressed all the way down, images are captured continuously at a high speed rate. <ul style="list-style-type: none">The camera can capture up to about 25 images continuously at a rate of about 60 fps.Image mode is fixed at 1M (image size: 1280 × 960 pixels).




✓ Notes About Continuous Shooting

- Focus, exposure and white balance are fixed at the values determined with the first shot in each series.
- It may take some time to save the images after shooting.
- When ISO sensitivity increases, noise may appear in captured images.
- The frame rate may become slower depending on the current image mode setting, memory card type or shooting conditions.
- When using **Pre-shooting cache, Continuous H: 120 fps**, or **Continuous H: 60 fps**, banding or variance in brightness or hue may occur in images that were captured under lighting that flashes quickly at high speeds, such as fluorescent, mercury-vapor, or sodium-vapor lighting.
- This function may not be available to use in combination with other functions (66).

Pre-shooting Cache

When the shutter-release button is pressed halfway or all the way down, images are saved as described below.

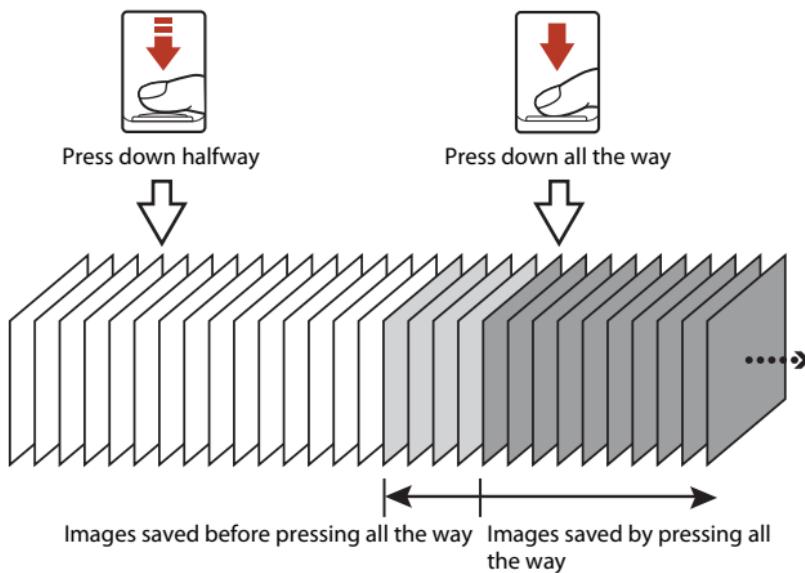

- The pre-shooting cache icon (⌚) on the shooting screen changes to green while the shutter-release button is pressed halfway.



ISO Sensitivity

Rotate the mode dial to → MENU button → menu icon → ISO sensitivity → **OK** button

A higher ISO sensitivity allows darker subjects to be captured. Additionally, even with subjects of similar brightness, pictures can be taken at faster shutter speeds, and blurring caused by camera shake and subject movement can be reduced.

- When a higher ISO sensitivity is set, images may contain noise.

Option	Description
AUTO Auto (default setting)	Sensitivity is automatically selected from the range of ISO 125 to 1600.
ISO AUTO Fixed range auto	Select the range in which the camera automatically adjusts ISO sensitivity, from ISO 125-400 or ISO 125-800 .
125, 200, 400, 800, 1600, 3200, 6400	Sensitivity is locked at the specified value.

Notes About ISO Sensitivity

This function may not be available to use in combination with other functions (66).

ISO Sensitivity Display on the Shooting Screen




- When **Auto** is selected, is displayed when the ISO sensitivity increases.
- When **Fixed range auto** is selected, the maximum value for ISO sensitivity is displayed.





AF Area Mode

Rotate the mode dial to → MENU button → menu icon → AF area mode → button

Set how the camera selects the focus area for autofocus.

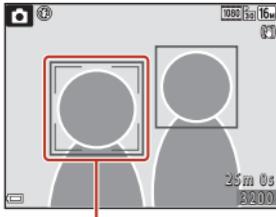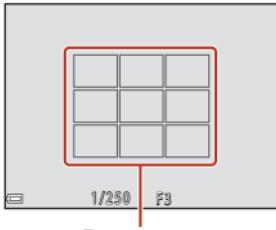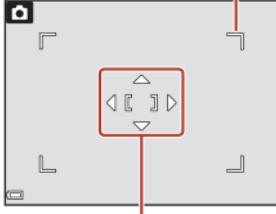Option	Description
Face priority	<p>When the camera detects a human face, it focuses on that face. See "Using Face Detection" (61) for more information.</p>  <p>Focus area</p>
Manual	<p>When framing a composition with no human subjects or detected faces, the camera automatically selects one or more of the nine focus areas containing the subject closest to the camera when the shutter-release button is pressed halfway.</p>  <p>Focus areas</p>
	<p>Use the multi selector to move the focus area to where you want to focus.</p> <ul style="list-style-type: none">To use the multi selector to configure the flash mode or other settings, press the button. To return to moving the focus area, press the button again.  <p>Focus area</p>

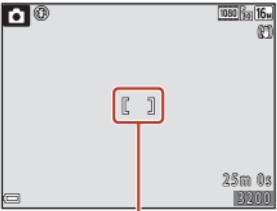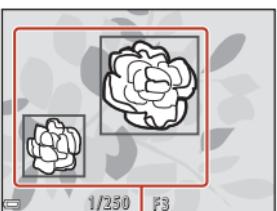

Option	Description
[■] Center	<p>The camera focuses on the subject in the center of the frame.</p>  <p>Focus area</p>
[○] Subject tracking	<p>Use this function to take pictures of moving subjects. Register the subject on which the camera focuses. The focus area automatically moves to track the subject.</p> <p>See "Using Subject Tracking" (118) for more information.</p> 
[■] Target finding AF (default setting)	<p>When the camera detects the main subject, it focuses on that subject.</p> <p>See "Using Target Finding AF" (60).</p>  <p>Focus areas</p>

✓ Notes About AF Area Mode

- When digital zoom is in effect, the camera focuses on the area in the center of the frame regardless of the **AF area mode** setting.
- This function may not be available to use in combination with other functions (66).



Using Subject Tracking

Rotate the mode dial to **REC** → **MENU** button → **REC** menu icon → AF area mode → **OK** button → **Subject tracking** → **OK** button → **MENU** button

1 Register a subject.

- Align the subject that you want to track with the border in the center of the frame and press the **OK** button.
- When the subject is registered, a yellow border (focus area) is displayed around it and the camera begins tracking the subject.
- If the subject cannot be registered, the border is displayed in red.


Change the composition and try registering the subject again.

- To cancel subject registration, press the **OK** button.
- If the camera can no longer track the registered subject, the focus area disappears. Register the subject again.



2 Press the shutter-release button all the way to take the picture.

- If the shutter-release button is pressed while the focus area is not displayed, the camera focuses on the subject in the center of the frame.

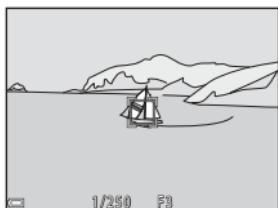

✓ Notes About Subject Tracking

- If you perform operations such as zooming while the camera is tracking the subject, the registration is canceled.
- Subject tracking may not be possible in certain shooting conditions.



Autofocus Mode

Rotate the mode dial to  → MENU button →  menu icon → Autofocus mode → 

Set how the camera focuses when shooting still images.

Option	Description
AF-S Single AF	The camera focuses only when the shutter-release button is pressed halfway.
AF-F Full-time AF	The camera always focuses even if the shutter-release button is not pressed halfway. The sound of lens drive movement is heard while the camera focuses.
PREAF Pre-focus (default setting)	Even if the shutter-release button is not pressed halfway, the camera focuses when subject movement is detected or when the composition of the framed image is significantly changed.

Autofocus Mode for Movie Recording

Autofocus mode for movie recording can be set with **Autofocus mode** (126) in the movie menu.



The Smart Portrait Menu

- See "Image Mode (Image Size and Quality)" (110) for information about **Image mode**.

Self-Collage

Rotate the mode dial to  → MENU button →  menu icon → Self-Collage →  button

Option	Description
Number of shots	<p>Set the number of shots that the camera automatically captures (number of captured images for an aggregated image).</p> <ul style="list-style-type: none">• 4 (default setting) or 9 can be selected.
Interval	<p>Set the interval time between each shot.</p> <ul style="list-style-type: none">• Short, Medium (default setting), or Long can be selected.
Shutter sound	<p>Set whether to activate the shutter sound when shooting with the self-collage function.</p> <ul style="list-style-type: none">• Standard, SLR, Magic (default setting), or Off can be selected.• The same setting that is specified for Shutter sound in Sound settings in the setup menu is not applied to this setting.



Blink Proof

Rotate the mode dial to → MENU button → menu icon → Blink proof →

Option	Description
On	<p>The camera automatically releases the shutter twice with every shot and saves one image in which the subject's eyes are open.</p> <ul style="list-style-type: none">• If the camera saved an image in which the subject's eyes may have been closed, the dialog shown on the right is displayed for a few seconds.• The flash cannot be used.
Off (default setting)	Turns the blink proof off.



Notes About Blink Proof

This function may not be available to use in combination with other functions (66).



The Movie Menu

Movie Options

Enter shooting mode → **MENU** button →  menu icon → Movie options → **OK** button

Select the desired movie option to record. Select normal speed movie options to record at normal speed, or HS movie options (123) to record in slow or fast motion. The movie options that can be selected vary depending on the **Frame rate** setting (128).

- Memory cards with an SD Speed Class rating of 6 or faster are recommended for recording movies (175).

Normal Speed Movie Options

Option (Image size/Frame rate ¹ , File format)	Image size	Aspect ratio (horizontal to vertical)
 1080/30p  1080/25p (default setting)	1920 × 1080	16:9
 1080/60i ²  1080/50i ²	1920 × 1080	16:9
 720/30p  720/25p	1280 × 720	16:9
 480/30p  480/25p	640 × 480	4:3

¹ Interlaced format uses Fields per second.

² The setting is not available when using certain effects in creative mode or glamour retouch.



HS Movie Options

Recorded movies are played back in fast or slow motion.

See "Recording Movies in Slow Motion and Fast Motion (HS Movie)" (125).

Option	Image size Aspect ratio (horizontal to vertical)	Description
 HS 480/4x ¹	640 × 480 4:3	1/4-speed slow motion movies • Max. recording time ² : 10 seconds (playback time: 40 seconds)
 HS 1080/0.5x ¹	1920 × 1080 16:9	2x speed fast motion movies • Max. recording time ² : 2 minutes (playback time: 1 minute)

¹ The setting is not available when using certain effects in creative mode or glamour retouch.

² While recording movies, the camera can be switched between normal speed movie recording and slow motion or fast motion movie recording.

The maximum recording time shown here refers only to the portion of the movie that is recorded in slow motion or fast motion.




Notes About HS Movie

- Sound is not recorded.
- Zoom position, focus, exposure, and white balance are locked when movie recording starts.



Playing Back in Slow Motion and Fast Motion


When recording at normal speed:

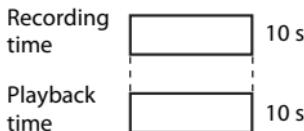

When recording at ~~480P~~/~~480P~~ HS 480/4x:

Movies are recorded at 4x normal speed.


They are played back in slow motion at 4x slower speed.

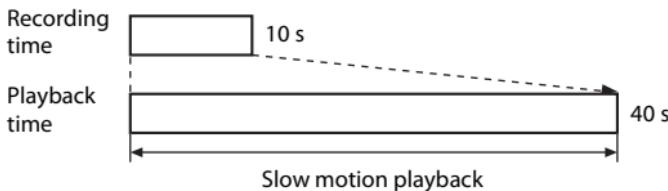

When recording at ~~1080P~~/~~1080P~~ HS 1080/0.5x:

Movies are recorded at 1/2 normal speed.

They are played back in fast motion at 2x faster speed.

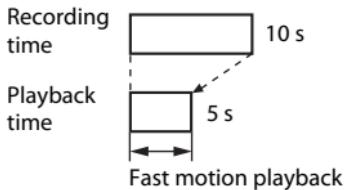

Recording Movies in Slow Motion and Fast Motion (HS Movie)

Enter shooting mode → **MENU** button →  menu icon → Movie options → **OK** button

Movies recorded using HS movie can be played back in slow motion at 1/4 of the normal playback speed, or in fast motion at twice the normal playback speed.


1 Use the multi selector to select an HS movie option (123) and press the **OK** button.

- After applying the option, press the **MENU** button to return to the shooting screen.



2 Press the movie-record button to start recording.

- The camera starts recording an HS movie.
- The camera switches between normal speed movie recording and HS movie recording each time the **OK** button is pressed.
- The movie options icon changes when switching between HS movie recording and normal speed movie recording.
- When the maximum recording time for HS movies (123) is reached, the camera automatically switches to normal speed movie recording.

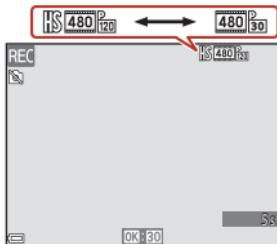

3 Press the movie-record button to end recording.



Autofocus Mode

Enter shooting mode → **MENU** button →  menu icon → Autofocus mode → **OK** button

Set how the camera focuses when recording movies.

Option	Description
AF-S Single AF (default setting)	Focus is locked when movie recording starts. Select this option when the distance between the camera and the subject will remain fairly consistent.
AF-F Full-time AF	The camera focuses continuously. Select this option when the distance between the camera and subject will change significantly during recording. The sound of the camera focusing may be heard in the recorded movie. Use of Single AF is recommended to prevent the sound of the camera focusing from interfering with recording.

Notes About Autofocus Mode

When an HS movie option is selected in **Movie options**, the setting is fixed at **Single AF**.



Movie VR

Enter shooting mode → MENU button →  menu icon → Movie VR →  button

Select the vibration reduction setting used when recording movies.

Set to **Off** when using a tripod to stabilize the camera during shooting.

Option	Description
 * On (hybrid) (default setting)	Performs optical compensation for camera shake using lens shift VR and simultaneously performs electronic VR using image processing. The angle of view (i.e., the area seen in the frame) becomes narrower.
 On	Performs compensation for camera shake using lens shift VR.
Off	Vibration reduction is disabled.

Notes About Movie VR

- When an HS movie option is selected in **Movie options**, the setting is fixed at **Off**.
- Vibration reduction may be unable to completely eliminate the effects of camera shake in some situations.

Wind Noise Reduction

Enter shooting mode → MENU button →  menu icon → Wind noise reduction →  button

Option	Description
 On	Reduces the sound that is produced when wind passes over the microphone during movie recording. Other sounds may become difficult to hear during playback.
Off (default setting)	Wind noise reduction is disabled.



Frame Rate

Enter shooting mode → **MENU** button →  menu icon → Frame rate → **OK** button

Select the frame rate (fields per second for the interlaced format) used when recording movies. When the frame rate setting is switched, options that can be set in **Movie options** (122) change.

Option	Description
30 fps (30p/60i)	Suited for playback on a TV using the NTSC standard.
25 fps (25p/50i)	Suited for playback on a TV using the PAL standard.



The Playback Menu

- See "Editing Images (Still Images)" (74) for information about image editing functions.

Mark for Upload

Press the **▶** button (playback mode) → **MENU** button → **Mark for upload** → **OK** button

Select still images in the camera and upload them to a smart device that has a wireless connection established with the SnapBridge app.

On the image selection screen (105), select or deselect images to upload.

- The size of images that are uploaded is restricted to 2 megapixels (images captured using **Easy panorama** scene mode are uploaded at their original size). To upload still images at their original size, use **Download pictures** in the SnapBridge app.
- Movies cannot be selected. To upload movies to a smart device, use **Download pictures** in the SnapBridge app.
- Note that when you select **Reset all** (146) in the setup menu or **Restore default settings** (135) in the network menu, the Mark for upload settings that you made are canceled.




Slide Show

Press the **▶** button (playback mode) → **MENU** button → **Slide show** → **OK** button

Play back images one by one in an automated “slide show.” When movie files are played back in the slide show, only the first frame of each movie is displayed.

1 Use the multi selector **▲▼** to select **Start** and press the **OK** button.

- The slide show begins.
- To change the interval between images, select **Frame intvl**, press the **OK** button, and specify the desired interval time before selecting **Start**.
- To repeat the slide show automatically, select **Loop** and press the **OK** button before selecting **Start**.
- The maximum playback time is up to about 30 minutes even if **Loop** is enabled.

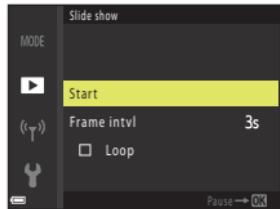

2 End or restart the slide show.

- The screen shown on the right is displayed after the slide show ends or is paused. To exit the show, select **■** and then press the **OK** button. To resume the slide show, select **▶** and then press the **OK** button.



Operations During Playback

- Use the multi selector **◀▶** to display the previous/next image. Press and hold down **◀▶** to rewind/fast-forward images quickly.
- Press the **OK** button to pause or end the slide show.



Protect

Press the **▶** button (playback mode) → **MENU** button → **Protect** → **OK** button

The camera protects selected images from accidental deletion.

Select images to protect or cancel protection from the image selection screen (105).

Note that formatting the memory card or the camera's internal memory permanently deletes all data including protected files (143).


Rotate Image

Press the **▶** button (playback mode) → **MENU** button → **Rotate image** → **OK** button


Specify the orientation in which saved images are displayed during playback.

Still images can be rotated 90 degrees clockwise or 90 degrees counterclockwise.

Select an image from the image selection screen (105). When the Rotate image screen is displayed, press the multi selector **◀▶** to rotate the image 90 degrees.

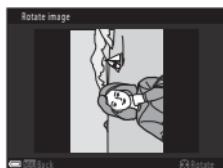

Rotate 90 degrees
counterclockwise

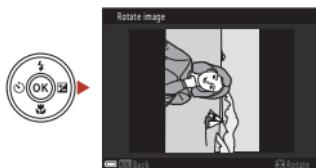

Rotate 90 degrees
clockwise

Press the **OK** button to finalize display orientation, and save orientation information with the image.




Copy (Copy Between the Memory Card and Internal Memory)

Press the **▶** button (playback mode) → **MENU** button → **Copy** → **OK** button

Images can be copied between a memory card and the internal memory.


- When a memory card that contains no images is inserted and the camera is switched to playback mode, **Memory contains no images.** is displayed. In that case, press the **MENU** button to select **Copy**.

1 Use the multi selector **▲▼** to select a destination option to which images are copied and press the **OK** button.

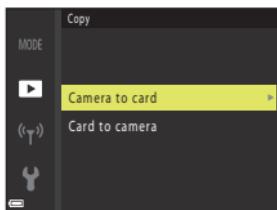

2 Select a copy option and press the **OK** button.

- When you choose **Selected images**, use the image selection screen to specify images (105).

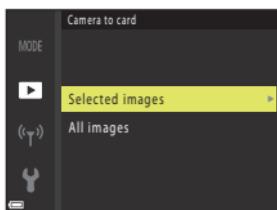

✓ Notes About Copying Images

- Only files in formats that this camera can record can be copied.
- Operation is not guaranteed with images captured with another make of camera or that have been modified on a computer.

Copying Images in a Sequence

- If you select a key picture of a sequence in **Selected images**, all images in the sequence are copied.
- If you press the **MENU** button while images in a sequence are displayed, only the **Card to camera** copy option is available. All images in the sequence are copied if you select **Current sequence**.



Sequence Display Options

Press the  button (playback mode) → **MENU** button → Sequence display options →  button

Select the method used to display images in the sequence (72).

Option	Description
 Individual pictures	Displays each image in a sequence individually.  is displayed on the playback screen.
 Key picture only (default setting)	Displays only the key picture for images in a sequence.

Settings are applied to all sequences, and the setting is saved in the camera's memory even after the camera is turned off.



The Network Menu

Press the **MENU** button →  menu icon → 

Configure the wireless network settings to connect the camera and a smart device.

- Some settings cannot be changed while a wireless connection is established. To change them, disconnect the wireless connection.

Option	Description
Airplane mode	Select On to turn off all wireless connections.
Connect to smart device	Select when using the SnapBridge app to connect the camera and a smart device (25).
Send while shooting	<p>Set the conditions for automatically sending images to a smart device.</p> <ul style="list-style-type: none">• The size of images that are uploaded is restricted to 2 megapixels (images captured using Easy panorama scene mode are uploaded at their original size). To upload still images at their original size, use Download pictures in the SnapBridge app.
Wi-Fi	SSID *: Change the SSID. Set a 1- to 32-character alphanumeric SSID.
	Auth./encryp. : Select whether or not to encrypt the communications between the camera and the connected smart device. Communications are not encrypted when Open is selected.
	Password *: Set the password. Set an 8- to 36-character alphanumeric password.
	Channel : Select the channel used for wireless connections.
Current settings	Display the current settings.



Option		Description
Bluetooth	Connection	Select Disable to turn off Bluetooth communication.
	Paired devices	Change the smart device to connect with, or delete the connected smart device. This camera can be paired with up to five smart devices, but can connect to only one device at a time.
	Send while off	Set whether or not to allow the camera to communicate with the smart device when the camera is off or in standby mode (19).
Restore default settings		Restore all network menu settings to their default values.

* See "Operating the Text Input Keyboard" (135) for information on how to enter alphanumeric characters.

Operating the Text Input Keyboard

- Use the multi selector **▲▼◀▶** to select alphanumeric characters. Press the **OK** button to enter the selected character in the text field and move the cursor to the next space.
- To move the cursor in the text field, select **←** or **→** on the keyboard, and press the **OK** button.
- To delete one character, press the **>Delete** button.
- To apply the setting, select **↔** on the keyboard and press the **OK** button.




The Setup Menu

Time Zone and Date

Press the **MENU** button →  menu icon → Time zone and date →  button

Set the camera clock.

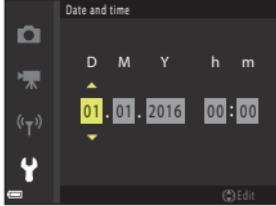
Option	Description
Sync with smart device	Select On to synchronize the date and time setting with a smart device. Enable the clock synchronization function of the SnapBridge app.
Date and time*	<ul style="list-style-type: none">Select a field: Press the multi selector .Edit the date and time: Press  .Apply the setting: Select the minute field setting and press the . 
Date format	Select Year/Month/Day , Month/Day/Year , or Day/Month/Year .
Time zone*	<p>Set time zone and daylight saving time.</p> <ul style="list-style-type: none">When Travel destination () is set after having set the home time zone (, the time difference between the travel destination and the home time zone is automatically calculated, and the date and time are saved for the selected region.

* Can be set only when **Sync with smart device** is set to **Off**.




Setting the Time Zone

1 Use the multi selector **▲▼** to select **Time zone** and press the **OK** button.

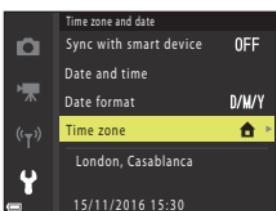


2 Select **Home time zone** or **Travel destination** and press the **OK** button.

- The date and time displayed on the screen changes depending on whether the home time zone or travel destination is selected.

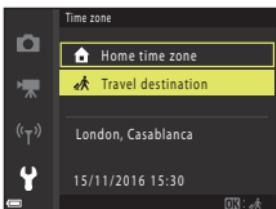


3 Press **▶**.

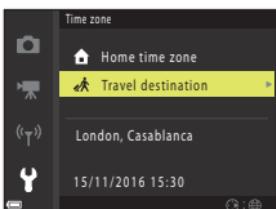

4 Use **◀▶** to select the time zone.

- Press **▲** to enable daylight saving time function, and **⌚** is displayed. Press **▼** to disable the daylight saving time function.
- Press the **OK** button to apply the time zone.
- If the correct time is not displayed for the home or travel destination time zone setting, set the appropriate time in **Date and time**.

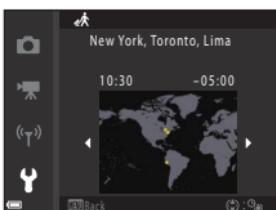

Monitor Settings

Press the **MENU** button →  menu icon → Monitor settings →  button

Option	Description
Help display	The descriptions of functions are displayed while changing the shooting mode or while the setting screen is displayed. • Default setting: On
Image review	Set whether or not to display the captured image immediately after shooting. • Default setting: On
Brightness	Adjust the brightness. • Default setting: 3
View/hide framing grid	Set whether or not to display a boxed guide for framing on the shooting screen. • Default setting: Off



Date Stamp

Press the **MENU** button →  menu icon → Date stamp →  button

The shooting date and time can be stamped on images when shooting.



Option	Description
DATE Date	Date is stamped on images.
DATE Date and time	Date and time are stamped on images.
Off (default setting)	Date and time are not stamped on images.

Notes About Date Stamp

- Stamped date and time form a permanent part of image data and cannot be deleted. The date and time cannot be stamped on images after they have been captured.
- The date and time cannot be stamped in the following situations:
 - When the scene mode is set to **Night landscape** (when set to  **Hand-held**), **Night portrait** (when set to  **Hand-held**), **Backlighting** (when **HDR** is set to **On**), or **Easy panorama**
 - When the continuous shooting setting (113) is set to **Pre-shooting cache**, **Continuous H: 120 fps**, or **Continuous H: 60 fps**
 - When recording movies
 - When saving still images during movie recording
 - When creating still images by editing movies
- The stamped date and time may be difficult to read when using a small image size.



Photo VR

Press the **MENU** button →  menu icon → Photo VR →  button

Select the vibration reduction setting used when shooting still images. Set to **Off** when using a tripod to stabilize the camera during shooting.

Option	Description
 On (default setting)	Compensation for camera shake is performed using lens shift VR.
Off	Compensation is not performed.

Notes About Photo VR

- After turning on the camera or after switching from playback mode to shooting mode, wait until the shooting screen is ready before taking pictures.
- Images on the screen may be displayed blurry immediately after shooting.
- Vibration reduction may be unable to completely eliminate the effects of camera shake in some situations.

AF Assist

Press the **MENU** button →  menu icon → AF assist →  button

Option	Description
AUTO Auto (default setting)	The AF-assist illuminator automatically lights up when you press the shutter-release button under dim lighting. The illuminator has a range of about 2.0 m (6 ft 6 in.) at the maximum wide-angle position and about 1.6 m (5 ft 2 in.) at the maximum telephoto position. <ul style="list-style-type: none">• The AF-assist illuminator may not light depending on the position of the focus area or the shooting mode.
Off	The AF-assist illuminator does not light.



Digital Zoom

Press the **MENU** button →  menu icon → Digital zoom →  button

Option	Description
On (default setting)	Digital zoom is enabled.
Off	Digital zoom is disabled.

Notes About Digital Zoom

- Digital zoom cannot be used in the following shooting modes:
 - **Night landscape**, **Night portrait**, **Backlighting** (when **HDR** is set), **Portrait**, **Easy panorama**, or **Pet portrait** scene mode
 - Creative mode
 - Smart portrait mode
- Digital zoom cannot be used in other shooting modes when using certain settings (67).

Sound Settings

Press the **MENU** button →  menu icon → Sound settings →  button

Option	Description
Button sound	When On (default setting) is selected, the camera produces one beep when operations are performed, two beeps when focus is acquired on the subject, and three beeps when an error occurs. The welcome screen sound is also produced. <ul style="list-style-type: none">• Sounds are disabled when using Pet portrait or Bird-watching scene mode.
Shutter sound	When On (default setting) is selected, the shutter sound is produced when the shutter is released. <ul style="list-style-type: none">• The shutter sound is not produced when recording movies or when using Pet portrait or Bird-watching scene mode.



Auto Off

Press the **MENU** button →  menu icon → Auto off →  button

Set the amount of time that elapses before the camera enters standby mode (19). You can select **30 s**, **1 min** (default setting), **5 min**, or **30 min**.

Setting the Auto Off Function

The time that passes before the camera enters standby mode is fixed in the following situations:

- When a menu is displayed: 3 minutes (when auto off is set to **30 s** or **1 min**)
- When shooting using **Pet portrait auto release**: 5 minutes (when auto off is set to **30 s** or **1 min**)
- When shooting using **Smile timer**: 5 minutes (when auto off is set to **30 s** or **1 min**)
- When the audio/video cable is connected: 30 minutes
- When an HDMI cable is connected: 30 minutes
- When the EH-67/EH-67s AC Adapter is connected: 30 minutes
- When waiting for connecting with **Connect to smart device**: 30 minutes



Format Card/Format Memory

Press the **MENU** button →  menu icon → Format card/Format memory → 

Use this option to format a memory card or the internal memory.

Formatting the memory cards or internal memory permanently deletes all data. Data that has been deleted cannot be recovered. Make sure to save important images to a computer before formatting.

Formatting a Memory Card

- Insert a memory card into the camera.
- Select **Format card** in the setup menu and then press the 

Formatting the Internal Memory

- Remove the memory card from the camera.
- Select **Format memory** in the setup menu and then press the 

To start formatting, select **Format** on the screen that is displayed and press the 

- Do not turn the camera off or open the battery-chamber/memory card slot cover during formatting.
- You may not be able to select this setting while a wireless connection is established.

Language

Press the **MENU** button →  menu icon → Language → 

Select a language for display of camera menus and messages.



Image Comment

Press the **MENU** button →  menu icon → Image comment →  button

Attach a comment that was previously registered to images that will be captured. You can imprint the attached comment to images that will be sent to a smart device using the SnapBridge app. You must configure the SnapBridge app in advance. See SnapBridge app online help for more information.

You can also check the attached comment using ViewNX-i metadata.

Option	Description
Attach comment	<p>A comment registered with Input comment is attached to images.</p> <ul style="list-style-type: none">Select Attach comment, press , and set the check box to on (). When you press the  button, the setting is enabled, and the comment will be attached to the images captured afterwards.
Input comment	<p>You can register a comment of up to 36 alphanumeric characters.</p> <ul style="list-style-type: none">Select Input comment, press , and the input screen is displayed. See "Operating the Text Input Keyboard" (135) for information about the input method.

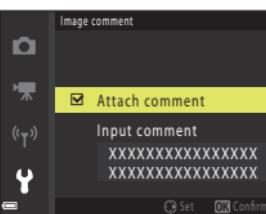


Image Comments Display

Image comments are not displayed even if images are played back on the camera.



Copyright Information

Press the **MENU** button →  menu icon → Copyright information →  button

Attach the copyright information that was previously registered to images that will be captured.

You can imprint the attached copyright information to images that will be sent to a smart device using the SnapBridge app. You must configure the SnapBridge app in advance. See SnapBridge app online help for more information.

You can also check the attached copyright information using ViewNX-i metadata.

Option	Description
Attach copyright info	Copyright information registered with Artist and Copyright is attached to images. <ul style="list-style-type: none">Select Attach copyright info, press , and set the check box to on (). When you press the  button, the setting is enabled, and the copyright information will be attached to the images captured afterwards.  <p>Copyright information <input checked="" type="checkbox"/> Attach copyright info Artist XXXXXXXXXXXXXXXX Copyright XXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXX Set Confirm</p>
Artist	You can register an artist name of up to 36 alphanumeric characters. <ul style="list-style-type: none">Select Artist, press , and the input screen is displayed. See "Operating the Text Input Keyboard" (135) for information about the input method.
Copyright	You can register a copyright owner name of up to 54 alphanumeric characters. <ul style="list-style-type: none">Select Copyright, press , and the input screen is displayed. See "Operating the Text Input Keyboard" (135) for information about the input method.

Notes About Copyright Information

- To prevent illegal use of artist names and copyright owner names when lending or transferring ownership of the camera, make sure to disable the **Attach copyright info** setting. Also, make sure that the artist name and copyright owner name are blank.
- Nikon is not responsible for any kind of trouble or damage resulting from the use of **Copyright information**.

Displaying Copyright Information

- Copyright information is not displayed even if images are played back on the camera.
- If you input both **Artist** and **Copyright**, only the copyright owner name is imprinted to images in the SnapBridge app.



Location Data

Press the **MENU** button →  menu icon → Location data →  button

Set whether or not to add shooting location information to the images that you take.

Option	Description
Download from device	Select Yes to add location information from a smart device to the images that you take. Enable the location information function of the SnapBridge app.
Position	Display the obtained location information. <ul style="list-style-type: none">• The information is not updated while it is being displayed. To update it, perform Position again.

Reset All

Press the **MENU** button →  menu icon → Reset all →  button

When **Reset** is selected, the camera's settings are restored to their default values.

- The network menu settings are also restored to their default values.
- Some settings, such as **Time zone and date** or **Language**, are not reset.
- You may not be able to select this setting while a wireless connection is established.

Resetting File Numbering

To reset file numbering to "0001", delete all images saved on the memory card or in the internal memory (21) before selecting **Reset all**.



Battery Type

Press the **MENU** button →  menu icon → **Battery type** →  button

To ensure that the camera shows the correct battery level (17), select the type that matches the batteries currently in use.

Option	Description
 LR6 Alkaline (default setting)	LR6/L40 (AA-size) alkaline batteries
 CLPX COOLPIX (Ni-MH)	Nikon EN-MH2 Rechargeable Ni-MH (nickel metal hydride) batteries
 FR6 Lithium	FR6/L91 (AA-size) lithium batteries

Conformity Marking

Press the **MENU** button →  menu icon → **Conformity marking** →  button

View some of the conformity markings that the camera complies with.

Firmware Version

Press the **MENU** button →  menu icon → **Firmware version** →  button

View the current camera firmware version.

- You may not be able to select this setting while a wireless connection is established.



Technical Notes

Notices.....	149
Notes About Wireless Communication Functions	151
Caring for the Product.....	154
The Camera	154
Batteries	155
Memory Cards.....	156
Cleaning and Storage	157
Cleaning	157
Storage	157
Error Messages	158
Troubleshooting	161
File Names.....	169
Optional Accessories.....	170
Specifications.....	171
Memory Cards That Can Be Used.....	175
Index	177



Notices

Notices for Customers in the U.S.A.

Federal Communications Commission (FCC) Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference

in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

CAUTIONS

Modifications

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Nikon Corporation may void the user's authority to operate the equipment.

Interface Cables

Use the interface cables sold or provided by Nikon for your equipment. Using other interface cables may exceed the limits of Class B Part 15 of the FCC rules.

Nikon Inc.,
1300 Walt Whitman Road, Melville, New York 11747-3064, U.S.A.
Tel: 631-547-4200



Notice for Customers in Canada

CAN ICES-3 B / NMB-3 B

Notices for Customers in Europe

This symbol indicates that electrical and electronic equipment is to be collected separately.

The following apply only to users in European countries:

- This product is designated for separate collection at an appropriate collection point. Do not dispose of as household waste.
- Separate collection and recycling helps conserve natural resources and prevent negative consequences for human health and the environment that might result from incorrect disposal.
- For more information, contact the retailer or the local authorities in charge of waste management.



This symbol on the batteries indicates that the batteries are to be collected separately.

The following apply only to users in European countries:

- All batteries, whether marked with this symbol or not, are designated for separate collection at an appropriate collection point. Do not dispose of as household waste.
- For more information, contact the retailer or the local authorities in charge of waste management.



Notes About Wireless Communication Functions

Restrictions on Wireless Devices

The wireless transceiver included in this product conforms to wireless regulations in the country of sale and is not for use in other countries (products purchased in the EU or EFTA can be used anywhere within the EU and EFTA). Nikon does not accept liability for use in other countries. Users who are unsure as to the original country of sale should consult with their local Nikon service center or Nikon-authorized service representative. This restriction applies to wireless operation only and not to any other use of the product.

Security

Although one of the benefits of this product is that it allows others to freely connect for the wireless exchange of data anywhere within its range, the following may occur if security is not enabled:

- Data theft: Malicious third-parties may intercept wireless transmissions to steal user IDs, passwords, and other personal information.
- Unauthorized access: Unauthorized users may gain access to the network and alter data or perform other malicious actions. Note that due to the design of wireless networks, specialized attacks may allow unauthorized access even when security is enabled. Nikon is not responsible for data or information leaks that may occur during data transfer.
- Do not access networks that you are not permitted to use, even if they are displayed on your smartphone or tablet. Doing so may be regarded as unauthorized access. Only access networks that you are permitted to use.

Personal Information Management and Disclaimer

- User information registered and configured on the product, including wireless LAN connection settings and other personal information, is susceptible to alteration and loss resulting from operational error, static electricity, accident, malfunction, repair or other handling. Always keep separate copies of important information. Nikon is not responsible for any direct or indirect damages or lost profits resulting from alteration or loss of content that is not attributable to Nikon.
- Before discarding this product or transferring it to another owner, perform **Reset all** in the setup menu (103) to delete all user information registered and configured with the product, including wireless LAN connection settings and other personal information.
- Nikon is not responsible for any damages resulting from unauthorized use of this product by third parties in the event that the product is stolen or lost.



Precautions when Exporting or Carrying This Product Abroad

This product is controlled by the United States Export Administration Regulations (EAR). The permission of the United States government is not required for export to countries other than the following, which as of this writing are subject to embargo or special controls: Cuba, Iran, North Korea, Sudan, and Syria (list subject to change).

Notice for Customers in the U.S.A. and Canada

Federal Communications Commission (FCC) and Industry of Canada (IC)

Declaration of Conformity

This device complies with Part 15 of FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.

FCC/IC RF Exposure Statement

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

The available scientific evidence does not show that any health problems are associated with using low power wireless devices. There is no proof, however, that these low power wireless devices are absolutely safe. Low power wireless devices emit low levels of radio frequency energy (RF) in the microwave range while being used. Whereas high levels of RF can produce health effects (by heating tissue), exposure of low-level RF that does not produce heating effects causes no known adverse health effects. Many studies of low-level RF exposures have not found any biological effects. Some studies have suggested that some biological effects might occur, but such findings have not been confirmed by additional research.

COOLPIX B500, which is equipped with a LBEE5ZZ1GV-893 (FCC ID:2AAD3JA0M0P0 / IC ID:4634A-6152EC) Wireless LAN Module, has been tested and found to comply with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. Please refer to the SAR test report that was uploaded to FCC website.



Notice for Customers in Europe

Declaration of Conformity (Europe)

Hereby, Nikon Corporation declares that the radio equipment type COOLPIX B500 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: http://imaging.nikon.com/support/pdf/DoC_B500.pdf.

- Maximum output power: 16.8 dBm (EIRP)
- Operating frequency:
 - Wi-Fi: 2412–2462 MHz (1–11 channels)
 - Bluetooth: 2402–2480 MHz
 - Bluetooth Low Energy: 2402–2480 MHz
 - NFC: 13.56 MHz

Notice for Customers in Singapore

This device complies with radio-frequency regulations.

**Complies with
IMDA Standards
DA103423**

Notice for Customers in Jamaica

This product contains a Type Approved Module by Jamaica: "SMA – LBEE5ZZ1GV-893"



Caring for the Product

Observe the precautions described below in addition to the warnings in "For Your Safety" (vi–ix) when using or storing the device.

The Camera

Do Not Apply Strong Impact to the Camera

The product may malfunction if subjected to strong shock or vibration. In addition, do not touch or apply force to the lens.

Keep Dry

The device will be damaged if immersed in water or subjected to high humidity.

Avoid Sudden Changes in Temperature

Sudden changes in temperature, such as when entering or leaving a heated building on a cold day, can cause condensation to form inside the device. To prevent condensation, place the device in a carrying case or a plastic bag before exposing it to sudden changes in temperature.

Keep Away from Strong Magnetic Fields

Do not use or store this device in the vicinity of equipment that generates strong electromagnetic radiation or magnetic fields. Doing so could result in loss of data or camera malfunction.

Do Not Point the Lens at Strong Light Sources for Extended Periods

Avoid pointing the lens at the sun or other strong light sources for extended periods when using or storing the camera. Intense light may cause the image sensor to deteriorate or produce a white blur effect in photographs.

Turn the Product Off Before Removing or Disconnecting the Power Source or Memory Card

Do not remove the batteries while the product is on, or while images are being saved or deleted. Forcibly cutting power in these circumstances could result in loss of data or in damage to the memory card or internal circuitry.

Notes About the Monitor

- Monitors (including electronic viewfinders) are constructed with extremely high precision; at least 99.99% of pixels are effective, with no more than 0.01% being missing or defective. Hence while these displays may contain pixels that are always lit (white, red, blue, or green) or always off (black), this is not a malfunction and has no effect on images recorded with the device.
- Images in the monitor may be difficult to see under bright lighting.
- Do not apply pressure to the monitor, as this could cause damage or malfunction. Should the monitor break, care should be taken to avoid injury caused by broken glass and to prevent the liquid crystal from the display touching the skin or entering the eyes or mouth.



Batteries

Precautions for Use

- Note that the batteries may become hot after use.
- Do not use batteries beyond their recommended expiration date.
- Do not turn the camera on and off repeatedly if discharged batteries are inserted in the camera.

Carrying Spare Batteries

We recommend carrying spare batteries depending on where you are shooting. It may be difficult to purchase batteries in certain areas.

Charging Batteries

If using optional rechargeable batteries, charge the batteries before taking pictures. Batteries are not fully charged at the time of purchase.

Be sure to read and follow the warnings noted in the operating instructions included with the battery charger.

Charging Rechargeable Batteries

- Do not mix batteries with different amounts of charge remaining, or batteries of a different make or model.
- When using EN-MH2 batteries with this camera, charge four batteries at a time using MH-73 Battery Charger. Use only MH-73 Battery Charger to charge EN-MH2 batteries.
- When using MH-73 Battery Charger, only charge EN-MH2 batteries.
- EN-MH1 Rechargeable Ni-MH batteries cannot be used.

Notes About Rechargeable Ni-MH Batteries

- If you repeatedly charge rechargeable Ni-MH batteries while they still have some charge remaining, the message **Battery exhausted.** may be displayed prematurely when using the batteries. This is due to the "memory effect," in which the amount of charge the batteries can hold decreases temporarily. Use the batteries until there is no charge remaining and they will return to their normal behavior.
- Rechargeable Ni-MH batteries discharge even when not being used. We recommend charging the batteries just before using them.

Using the Batteries When Cold

On cold days, the capacity of batteries tends to decrease. If exhausted batteries are used at a low temperature, the camera may not turn on. Keep spare batteries in a warm place and exchange as necessary. Once warmed, cold batteries may recover some of their charge.

Battery Terminals

Dirt on the battery terminals may prevent the camera from functioning. Should the battery terminals become dirty, wipe them off with a clean, dry cloth before use.

Remaining Battery Charge

If you insert discharged batteries into the camera, the camera may indicate that the batteries have adequate charge remaining. This is a characteristic of batteries.



Recycling Used Batteries

Replace the batteries when they no longer hold a charge. Used batteries are a valuable resource. Please recycle used batteries in accordance with local regulations.

Memory Cards

Precautions for Use

- Use only Secure Digital memory cards (175).
- Be sure to follow the precautions described in the documentation included with the memory card.
- Do not put labels or stickers on memory cards.

Formatting

- Do not format the memory card using a computer.
- The first time you insert a memory card that has been used in another device into this camera, be sure to format it with this camera. We recommend formatting new memory cards with this camera before using them with this camera.
- **Note that formatting a memory card permanently deletes all images and other data on the memory card.** Be sure to make copies of any images you wish to keep before formatting the memory card.
- If the message **Card is not formatted. Format card?** is displayed when the camera is turned on, the memory card must be formatted. If there is data that you do not want to delete, select **No**. Copy the necessary data to a computer, etc. If you want to format the memory card, select **Yes**. The confirmation dialog will be displayed. To start formatting, press the **OK** button.
- Do not perform the following during formatting, while data is being written to or deleted from the memory card, or during data transfer to a computer. Failure to observe this precaution could result in the loss of data or in damage to the camera or memory card:
 - Open the battery-chamber/memory card slot cover to remove/insert the batteries or memory card.
 - Turn off the camera.
 - Disconnect the AC adapter.



Cleaning and Storage

Cleaning

Do not use alcohol, thinner, or other volatile chemicals.

Lens	Avoid touching glass parts with your fingers. Remove dust or lint with a blower (typically a small device with a rubber bulb attached to one end that is pumped to produce a stream of air out the other end). To remove fingerprints or other stains that cannot be removed with a blower, wipe the lens with a soft cloth, using a spiral motion that starts at the center of the lens and working toward the edges. If this fails, clean the lens using a cloth lightly dampened with commercial lens cleaner.
Monitor	Remove dust or lint with a blower. To remove fingerprints and other stains, clean the monitor with a soft, dry cloth, being careful not to apply pressure.
Body	Use a blower to remove dust, dirt, or sand, then wipe gently with a soft, dry cloth. After using the camera at the beach or other sandy or dusty environment, wipe off any sand, dust, or salt with a dry cloth lightly dampened with fresh water and dry thoroughly. Note that foreign matter inside the camera could cause damage not covered by the warranty.

Storage

Remove the batteries if the camera will not be used for an extended period. To prevent mold or mildew, take the camera out of storage at least once a month.

Turn the camera on and release the shutter a few times before putting the camera away again. Do not store the camera in any of the following locations:

- Places that are poorly ventilated or subject to humidity of over 60%
- Exposed to temperatures above 50°C (122°F) or below –10°C (14°F)
- Next to equipment that produces strong electromagnetic fields, such as televisions or radios



Error Messages

Refer to the table below if an error message is displayed.

Display	Cause/Solution	
Battery temperature is elevated. The camera will turn off.	The camera turns off automatically. Wait until the camera or battery temperature has cooled before resuming use.	-
The camera will turn off to prevent overheating.		
Memory card is write protected.	The write-protect switch is in the "lock" position. Slide the write-protect switch to the "write" position.	-
This card cannot be used.	An error occurred while accessing the memory card. <ul style="list-style-type: none">• Use an approved memory card.• Check that the terminals are clean.• Confirm that the memory card is correctly inserted.	11, 175
This card cannot be read.		
Card is not formatted. Format card?	The memory card has not been formatted for use in the camera. Formatting deletes all data saved on the memory card. If you need to keep copies of any images, make sure to select No and save the copies to a computer or other medium before formatting the memory card. Select Yes and press the OK button to format the memory card.	156
Out of memory.	Delete images or insert a new memory card.	11, 21
	An error occurred while saving the image. Insert a new memory card or format the memory card or internal memory.	143
Image cannot be saved.	The camera has run out of file numbers. Insert a new memory card or format the memory card or internal memory.	143
	There is insufficient space to save the copy. Delete images from the destination.	21
Image cannot be modified.	Check that the images can be edited.	74, 165



Display	Cause/Solution	
Cannot record movie.	A time-out error occurred while saving the movie on the memory card. Select a memory card with a faster write speed.	82, 175
Memory contains no images.	There are no images in the internal memory or on the memory card. <ul style="list-style-type: none">Remove the memory card to play back images in the internal memory.To copy the images saved in the camera's internal memory to the memory card, press the MENU button to select Copy in the playback menu.	12 132
File contains no image data.	The file was not created or edited with this camera. The file cannot be viewed on this camera. View the file using a computer or the device used to create or edit this file.	–
All images are hidden.	There are no images available for a slide show, etc.	130
This image cannot be deleted.	The image is protected. Disable protection.	131
Raise the flash.	The flash is lowered. Raise the flash when shooting in Night portrait or Backlighting (when HDR is set to Off) scene mode.	38, 52
Turn the camera off and then on again.	Remove the lens cap, and turn the camera off and then on again. If the error persists, contact your retailer or Nikon-authorized service representative.	10, 161
Communications error	An error occurred while communicating with the printer. Turn the camera off and reconnect the USB cable.	95
System error	An error occurred in the camera's internal circuitry. Turn the camera off, remove and reinsert the batteries, and turn the camera on. If the error persists, contact your retailer or Nikon-authorized service representative.	161
Printer error: check printer status.	After solving the problem, select Resume and press the OK button to resume printing.*	–
Printer error: check paper.	Load the specified size of paper, select Resume , and press the OK button to resume printing.*	–
Printer error: paper jam.	Remove the jammed paper, select Resume , and press the OK button to resume printing.*	–
Printer error: out of paper.	Load the specified size of paper, select Resume , and press the OK button to resume printing.*	–



Display	Cause/Solution	
Printer error: check ink.	There is a problem with the printer's ink. Check the ink, select Resume , and press the  button to resume printing.*	–
Printer error: out of ink.	Replace the ink cartridge, select Resume , and press the  button to resume printing.*	–
Printer error: file corrupt.	There is a problem with the image file to be printed. Select Cancel and press the  button to cancel printing.	–

* See the documentation provided with your printer for further guidance and information.



Troubleshooting

If the camera fails to function as expected, check the list of common problems below before consulting your retailer or Nikon-authorized service representative.

Power, Display, Settings Issues

Problem	Cause/Solution	
The camera is on but does not respond.	<ul style="list-style-type: none">Wait for recording to end.If the problem persists, turn the camera off. If the camera does not turn off, remove and reinsert the battery or batteries or, if you are using an AC adapter, disconnect and reconnect the AC adapter. Note that although any data currently being recorded will be lost, data that have already been recorded will not be affected by removing or disconnecting the power source.	–
The camera cannot be turned on.	The batteries are exhausted.	11, 155
The camera turns off without warning.	<ul style="list-style-type: none">The camera automatically turns off to save power (auto off function).The camera and batteries may not work properly at low temperatures.The inside of the camera has become hot. Leave the camera off until the inside of the camera has cooled, and then try turning it on again.	19 155 –
The monitor is blank.	<ul style="list-style-type: none">The camera is off.The camera automatically turns off to save power (auto off function).The flash lamp flashes while the flash is charging. Wait until charging is complete.The camera is connected to a TV or computer.The camera is shooting in Multiple exp. Lighten scene mode.	14 19 – – –
The camera becomes hot.	The camera may become hot when used for an extended period of time such as to shoot movies, or when used in a hot environment; this is not a malfunction.	–
The monitor is hard to see.	<ul style="list-style-type: none">The surroundings are too bright.<ul style="list-style-type: none">Move to a darker place.Adjust the screen brightness.	– 138



Problem	Cause/Solution	Book icon
⌚ flashes on the screen.	<ul style="list-style-type: none"> If the camera clock has not been set, ⌚ flashes on the shooting screen, and images and movies saved before the clock is set are dated "00/00/0000 00:00" and "01/01/2016 00:00" respectively. Set the correct time and date for Time zone and date in the setup menu. 	
Date and time of recording are not correct.	<ul style="list-style-type: none"> The camera clock is not as accurate as ordinary watches or clocks. Periodically compare the time of the camera clock with that of a more accurate timepiece and reset as required. 	4, 136
No information displayed on the screen.	Shooting and photo information may be hidden. Press the DISP button until information is displayed.	4
Date stamp not available.	Time zone and date has not been set in the setup menu.	136
Date not stamped on images even when Date stamp is enabled.	<ul style="list-style-type: none"> The current shooting mode does not support Date stamp. The date cannot be stamped on movies. 	139
Screen for setting time zone and date is displayed when the camera is turned on.	<p>The clock battery is exhausted; all settings were restored to their default values. Configure the camera settings again.</p> <ul style="list-style-type: none"> The internal clock battery is used to power the camera clock and to retain certain settings. Charging time of the clock battery takes about 10 hours when you insert the batteries into the camera or connect the AC adapter (available separately) to the camera, and the clock battery operates for several days even after the camera batteries are removed. 	–
The camera settings reset.		
The camera makes sound.	When Autofocus mode is set to Full-time AF or while in some shooting modes, the camera may produce an audible focusing sound.	33, 126

Shooting Issues

Problem	Cause/Solution	Book icon
Cannot switch to shooting mode.	Disconnect the HDMI cable or USB cable.	92
Cannot take pictures or record movies.	<ul style="list-style-type: none"> When the camera is in playback mode, press the ▶ button, shutter-release button, or ● (◀) button. When menus are displayed, press the MENU button. The flash is charging while the flash lamp is flashing. The batteries are exhausted. 	2, 20 103 52 11, 155



Problem	Cause/Solution	Icon
The camera cannot focus.	<ul style="list-style-type: none"> The subject is too close. Try shooting using scene auto selector mode, Close-up scene mode, or macro mode. The subject is hard to focus on. Set AF assist in the setup menu to Auto. Turn the camera off and then on again. 	33, 37, 40, 51, 56 62 140 –
Images are blurred.	<ul style="list-style-type: none"> Use the flash. Increase the ISO sensitivity value. Enable Photo VR when shooting still images. Enable Movie VR when recording movies. Use a tripod to stabilize the camera (using the self-timer at the same time is more effective). 	52 115 127, 140 54
Bright specks appear in images captured with flash.	The flash is reflecting off particles in the air. Lower the flash.	19, 52
Flash does not fire.	<ul style="list-style-type: none"> The flash is lowered. A scene mode that restricts the flash is selected. A function that restricts the flash is enabled. 	19, 52 64 66
Digital zoom cannot be used.	<ul style="list-style-type: none"> Digital zoom is set to Off in the setup menu. Digital zoom cannot be used with certain shooting modes or when using certain settings in other functions. 	141 67, 141
Image mode not available.	A function that restricts Image mode is enabled.	66
No sound when the shutter is released.	<ul style="list-style-type: none"> Off is selected for Shutter sound in Sound settings in the setup menu. No sound is produced with some shooting modes, even when On is selected. Do not block the speaker. 	141 3
AF-assist illuminator does not light.	Off is selected for the AF assist option in the setup menu. AF-assist illuminator may not light depending on the position of the focus area or the shooting mode, even when Auto is selected.	140



Problem	Cause/Solution	Book
Images appear smeared.	The lens is dirty. Clean the lens.	157
Colors are unnatural.	White balance or hue is not adjusted properly.	40, 111
Randomly spaced bright pixels ("noise") appear in image.	<p>The subject is dark and the shutter speed is too slow, or ISO sensitivity is too high. Noise can be reduced by:</p> <ul style="list-style-type: none"> Using the flash Specifying a lower ISO sensitivity setting 	<p>52</p> <p>115</p>
Images are too dark (underexposed).	<ul style="list-style-type: none"> The flash is lowered or a shooting mode that restricts the flash is selected. The flash window is blocked. The subject is beyond the range of the flash. Adjust exposure compensation. Increase ISO sensitivity. The subject is backlit. Select Backlighting scene mode or raise the flash and set the flash mode setting to  (fill flash). 	<p>19, 52, 64</p> <p>17</p> <p>172</p> <p>57</p> <p>115</p> <p>38, 52</p>
Images are too bright (overexposed).	Adjust exposure compensation.	57
Unexpected results when flash set to  (auto with red-eye reduction).	Use any shooting mode other than Night portrait , and change the flash mode to any setting other than  (auto with red-eye reduction) and try taking the picture again.	52, 64
Skin tones are not softened.	<ul style="list-style-type: none"> Under some shooting conditions, facial skin tones may not be softened. For images containing four or more faces, try using Skin softening in Glamour retouch in the playback menu. 	<p>62</p> <p>76</p>
Saving images takes time.	<p>It may take more time to save images in the following situations:</p> <ul style="list-style-type: none"> When the noise reduction function is in operation, such as when shooting in a dark environment When the flash mode is set to  (auto with red-eye reduction) When shooting in Night landscape, Night portrait, or Backlighting (when HDR is set to On) scene mode When the skin softening function is applied while shooting When using continuous shooting mode 	<p>–</p> <p>53</p> <p>37, 38</p> <p>48, 62</p> <p>113</p>



Playback Issues

Problem	Cause/Solution	Book
File cannot be played back.	<ul style="list-style-type: none">This camera may not be able to play back images saved with another make or model of digital camera.This camera cannot play back movies recorded with another make or model of digital camera.This camera may not be able to play back data edited on a computer.	–
Cannot zoom in on image.	<ul style="list-style-type: none">Playback zoom cannot be used with movies.When zooming in on a small-sized image, the magnification rate shown on the screen may differ from the actual magnification rate of the image.This camera may not be able to zoom in on images captured with another make or model of digital camera.	–
Cannot edit images.	<ul style="list-style-type: none">Some images cannot be edited. Images that have already been edited may not be edited again.There is not enough free space on the memory card or in the internal memory.This camera is unable to edit images captured with other cameras.Editing functions used for images are not available for movies.	45, 74 – – –
Cannot rotate image.	This camera cannot rotate images captured with another make or model of digital camera.	–



External Device Issues

Problem	Cause/Solution	Icon
Cannot establish a wireless connection with a smart device.*	<ul style="list-style-type: none">See "Connecting to a Smart Device (SnapBridge)" when establishing a wireless connection for the first time.Also see "If the Connection Is Unsuccessful."If a wireless connection is established, perform the following operations.<ul style="list-style-type: none">Turn the camera off and then on again.Restart the SnapBridge app.Cancel the connection and then establish a connection again.Check the Network menu settings in the camera.<ul style="list-style-type: none">Set Airplane mode to Off.Set Bluetooth → Connection to Enable.If the camera is registered with two or more smart devices, select the smart device you want to connect in Network menu → Bluetooth → Paired devices in the camera. If two or more cameras are registered in the SnapBridge app, switch the connection on the app.Use a sufficiently charged battery.Insert a memory card with sufficient free space into the camera.Disconnect the HDMI cable or USB cable.Enable Bluetooth, Wi-Fi, and the location data functions on the smart device.In the  tab of the SnapBridge app → Auto link options → turn on Auto link. If it is off, Download pictures and Remote photography can be used, but images cannot be downloaded automatically.	23 28 31 31 31 134 135 — 11 92 — —



Problem	Cause/Solution	Book
Cannot upload images to a smart device that has a wireless connection established with the SnapBridge app.*	<ul style="list-style-type: none"> Perform the operations described below when uploading automatically. <ul style="list-style-type: none"> Set Network menu → Send while shooting → Still images in the camera to Yes. In the Wi-Fi tab of the SnapBridge app → Auto link options → turn on Auto link. In the Wi-Fi tab of the SnapBridge app → Auto link options → turn on Auto download. If Network menu → Bluetooth → Send while off in the camera is set to Off, turn on the camera or change the setting to On. You may not be able to upload images or uploading may be canceled while the camera is being operated. Depending on the status of the camera, you may not be able to upload images or uploading may be canceled. Also see "If Images Cannot Be Uploaded Successfully." 	134 – – 135 – 31 31
Cannot perform remote photography from a smart device that has a wireless connection established with the SnapBridge app.*	<ul style="list-style-type: none"> You cannot perform remote photography when there is no free space in the internal memory or memory card. Delete unnecessary images or insert a memory card with sufficient free space. You may not be able to perform remote photography while the camera is being operated. Depending on the status of the camera, you may not be able to perform remote photography. 	– – 31
Cannot download still images at the original size in the SnapBridge app.*	For Send while shooting and Mark for upload in the camera, the size of images that are downloaded is restricted to 2 megapixels (images captured using Easy panorama scene mode are uploaded at their original size). To download still images at their original size, use Download pictures in the SnapBridge app.	–
Images are not displayed on TV.	<ul style="list-style-type: none"> A computer or printer is connected to the camera. The memory card contains no images. Remove the memory card to play back images in the internal memory. 	– – 12



Problem	Cause/Solution	
Nikon Transfer 2 does not start when the camera is connected to a computer.	<ul style="list-style-type: none"> The camera is off. The batteries are exhausted. The USB cable is not correctly connected. The camera is not recognized by the computer. The computer is not set to start Nikon Transfer 2 automatically. For more information about Nikon Transfer 2, refer to help information contained in ViewNX-i. 	<p>–</p> <p>92</p> <p>92, 99</p> <p>–</p> <p>–</p>
Images to be printed are not displayed.	<ul style="list-style-type: none"> The memory card contains no images. Remove the memory card to print images in the internal memory. 	<p>–</p> <p>12</p>
Cannot select paper size with the camera.	<p>The camera cannot be used to select the paper size in the following situations, even when printing from a PictBridge-compatible printer. Use the printer to select the paper size.</p> <ul style="list-style-type: none"> The printer does not support the paper sizes specified by the camera. The printer automatically selects the paper size. 	–

* See "Connecting to a Smart Device (SnapBridge)" (□23) and SnapBridge online help.



File Names

Images or movies are assigned file names as follows.

File name: DSCN0001.JPG

(1) (2) (3)

(1) Identifier	Not shown on the screen of the camera. <ul style="list-style-type: none">• DSCN: Original still images, movies, still images created by the movie editing function• SSCN: Small picture copies• RSCN: Cropped copies• FSCN: Images created by an image editing function other than crop and small picture, movies created by the movie editing function
(2) File number	Assigned in ascending order, starting with "0001" and ending with "9999."
(3) Extension	Indicates file format. <ul style="list-style-type: none">• .JPG: Still images• .MP4: Movies



Optional Accessories

Battery charger, rechargeable batteries*	<ul style="list-style-type: none">MH-73 Battery Charger (includes four EN-MH2 Rechargeable Ni-MH batteries)Replacement rechargeable batteries: EN-MH2-B4 Rechargeable Ni-MH batteries (set of four EN-MH2 batteries)
AC adapter	EH-67/EH-67s AC Adapter
Audio/video cable	EG-CP16 Audio Video Cable
Hand strap	AH-CP1 Hand Strap

* When using EN-MH2 Rechargeable Ni-MH batteries with the camera, charge the batteries four at a time using MH-73 Battery Charger. Also, do not charge batteries at the same time if they have different amounts of charge remaining (155). EN-MH1 Rechargeable Ni-MH batteries cannot be used.

Availability may vary with country or region.

See our website or brochures for the latest information.



Specifications

Nikon COOLPIX B500 Digital Camera

Type	Compact digital camera
Number of effective pixels	16.0 million (Image processing may reduce the number of effective pixels.)
Image sensor	¹ /2.3-in. type CMOS; approx. 16.76 million total pixels
Lens	NIKKOR lens with 40x optical zoom
Focal length	4.0–160 mm (angle of view equivalent to that of 22.5–900 mm lens in 35mm [135] format)
f-number	f/3–6.5
Construction	12 elements in 9 groups (3 ED lens elements)
Digital zoom magnification	Up to 4x (angle of view equivalent to that of approx. 3600 mm lens in 35mm [135] format)
Vibration reduction	Lens shift (still images) Lens shift and electronic VR (movies)
Autofocus (AF)	Contrast-detect AF
Focus range	<ul style="list-style-type: none">[W]: Approx. 30 cm (1 ft)–∞[T]: Approx. 3.5 m (11 ft)–∞ <ul style="list-style-type: none">Macro mode: Approx. 1 cm (0.4 in.)–∞ (wide-angle position) <p>(All distances measured from center of front surface of lens)</p>
Focus-area selection	Face priority, manual with 99 focus areas, center, subject tracking, target finding AF
Monitor	7.5 cm (3-in.), approx. 921k-dot, wide viewing angle TFT LCD with anti-reflection coating and 5-level brightness adjustment, tiltable approx. 85° downward, approx. 90° upward
Frame coverage (shooting mode)	Approx. 99% horizontal and vertical (compared to actual picture)
Frame coverage (playback mode)	Approx. 99% horizontal and vertical (compared to actual picture)
Storage	
Media	Internal memory (approx. 20 MB), SD/SDHC/SDXC memory card
File system	DCF and Exif 2.3 compliant
File formats	Still images: JPEG Movies: MP4 (Video: H.264/MPEG-4 AVC, Audio: AAC stereo)



Image size (pixels)	<ul style="list-style-type: none"> 16M (High) [4608 × 3456★] 16M [4608 × 3456] 8M [3264 × 2448] 4M [2272 × 1704] 2M [1600 × 1200] VGA [640 × 480] 16:9 [4608 × 2592] 1:1 [3456 × 3456]
ISO sensitivity (Standard output sensitivity)	<ul style="list-style-type: none"> ISO 125–1600 ISO 3200, 6400 (available when using Auto mode)
Exposure	
Metering mode	Matrix, center-weighted (digital zoom less than 2×), spot (digital zoom 2× or more)
Exposure control	Programmed auto exposure and exposure compensation (−2.0 – +2.0 EV in steps of $\frac{1}{3}$ EV)
Shutter	Mechanical and CMOS electronic shutter
Speed	<ul style="list-style-type: none"> $\frac{1}{1500}$–1 s $\frac{1}{4000}$ s (maximum speed during high-speed continuous shooting) 25 s (Star trails in Multiple exp. Lighten scene mode)
Aperture	Electronically-controlled ND filter (−2 AV) selection
Range	2 steps (f/3 and f/6 [W])
Self-timer	<ul style="list-style-type: none"> 10 s, 2 s 5 s (self-portrait timer)
Flash	
Range (approx.) (ISO sensitivity: Auto)	[W]: 0.5–6.9 m (1 ft 8 in.–22 ft) [T]: 3.5 m (11 ft)
Flash control	TTL auto flash with monitor preflashes
Interface	
USB connector	Hi-Speed USB <ul style="list-style-type: none"> Supports Direct Print (PictBridge) Audio/video output connector (NTSC or PAL can be selected)
HDMI output connector	HDMI micro connector (Type D)
DC input connector	For EH-67/EH-67s AC Adapter (available separately)



Wi-Fi (Wireless LAN)	
Standards	IEEE 802.11b/g (standard wireless LAN protocol)
Operating frequency	2412–2462 MHz (1–11 channels)
Authentication	Open system, WPA2-PSK
Bluetooth	
Communication protocols	Bluetooth Specification Version 4.1
Supported languages	Arabic, Bengali, Bulgarian, Chinese (Simplified and Traditional), Czech, Danish, Dutch, English, Finnish, French, German, Greek, Hindi, Hungarian, Indonesian, Italian, Japanese, Korean, Marathi, Norwegian, Persian, Polish, Portuguese (European and Brazilian), Romanian, Russian, Serbian, Spanish, Swedish, Tamil, Telugu, Thai, Turkish, Ukrainian, Vietnamese
Power sources	<ul style="list-style-type: none"> Four LR6/L40 (AA-size) alkaline batteries Four FR6/L91 (AA-size) lithium batteries Four EN-MH2 Rechargeable Ni-MH batteries (available separately) EH-67/EH-67s AC Adapter (available separately)
Battery life¹	
Still images	<ul style="list-style-type: none"> Approx. 600 shots when using alkaline batteries Approx. 1240 shots when using lithium batteries Approx. 750 shots when using EN-MH2 batteries
Movie recording (actual battery life for recording)²	<ul style="list-style-type: none"> Approx. 1 h 30 min when using alkaline batteries Approx. 4 h 30 min when using lithium batteries Approx. 2 h 35 min when using EN-MH2 batteries
Tripod socket	1/4 (ISO 1222)
Dimensions (W × H × D)	Approx. 113.5 × 78.3 × 94.9 mm (4.5 × 3.1 × 3.8 in.) (excluding projections)
Weight	Approx. 542 g (1 lb 3.2 oz) (including LR6/L40 (AA-size) alkaline batteries and memory card)
Operating environment	
Temperature	0°C–40°C (32°F–104°F)
Humidity	85% or less (no condensation)

- All measurements are performed in conformity with Camera and Imaging Products Association (CIPA) standards or guidelines.



¹ Battery life does not reflect the use of SnapBridge and may vary with the conditions of use, including temperature, the interval between shots, and the length of time that menus and images are displayed. The supplied batteries are for trial use only. The figures listed for lithium batteries were obtained using commercially-available FR6/L91 (AA-size) Energizer® Ultimate Lithium batteries.

² Individual movie files cannot exceed 4 GB in size or 29 minutes in length. Recording may end before this limit is reached if camera temperature becomes elevated.

- Nikon will not be held liable for any errors this manual may contain.
- The appearance of this product and its specifications are subject to change without notice.



Memory Cards That Can Be Used

The camera supports SD, SDHC, and SDXC memory cards.

- Memory cards with an SD Speed Class rating of 6 or faster are recommended for recording movies. When using a memory card with a lower Speed Class rating, movie recording may stop unexpectedly.
- If you use a card reader, make sure that it is compatible with your memory card.
- Contact the manufacturer for information on features, operation, and limitations on use.

Trademark Information

- Windows is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Nikon Corporation is under license.
- Apple®, App Store®, the Apple logos, Mac, OS X, macOS, iPhone®, iPad®, iPod touch® and iBooks are trademarks or registered trademarks of Apple Inc., in the U.S. and other countries.
- Android, Google Play and the Google Play logo are trademarks of Google LLC. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License.
- iOS is a trademark or registered trademark of Cisco Systems, Inc., in the United States and/or other countries and is used under license.
- Adobe, the Adobe logo, and Reader are either trademarks or registered trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- SDXC, SDHC, and SD Logos are trademarks of SD-3C, LLC.



- PictBridge is a trademark.
- HDMI, HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC.

HDMI

- Wi-Fi and the Wi-Fi logo are trademarks or registered trademarks of the Wi-Fi Alliance.
- The N-Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.
- All other trade names mentioned in this manual or the other documentation provided with your Nikon product are the trademarks or registered trademarks of their respective holders.



"Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.

AVC Patent Portfolio License

This product is licensed under the AVC Patent Portfolio License for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC standard ("AVC video") and/or (ii) decode AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC video. No license is granted or shall be implied for any other use.

Additional information may be obtained from MPEG LA, LLC.

See <http://www.mpegl.com>.

FreeType License (FreeType2)

Portions of this software are copyright © 2012 The FreeType Project (<http://www.freetype.org>). All rights reserved.

MIT License (HarfBuzz)

Portions of this software are copyright © 2016 The HarfBuzz Project (<http://www.freedesktop.org/wiki/Software/HarfBuzz>). All rights reserved.



Index

Symbols	
Auto mode	33, 34
Scene auto selector mode	33, 36, 37
Backlighting mode	33, 36, 38
Creative mode	33, 46
SCENE Scene mode	33, 36
Short movie show mode	33, 85
Sports mode	33, 36, 39
Smart portrait mode	33, 48
Night portrait mode	33, 36, 38
Night landscape mode	33, 36, 37
Playback mode	20
List by date mode	71
Playback zoom	20, 69
W (Wide-angle)	58
Thumbnail playback	20, 70
T (Telephoto)	58
Snap-back zoom button	2, 59
OK Apply selection button	3, 103
Playback button	3, 20
Delete button	3, 21
Movie-record button	3, 19
DISP Display button	3, 4
Flash pop-up button	2, 19, 52
MENU Menu button	3, 103
Self-timer	51, 54
Flash mode	51, 52
Macro mode	51, 56
Exposure compensation	34, 48, 51, 57
N N-Mark	2, 25
A	
AC adapter	92, 170
Active D-Lighting	34
AF area mode	106, 116
AF assist	109, 140
AF-assist illuminator	2
Airplane mode	108, 134
Alkaline batteries	11
App	24
Audio/video cable	92, 93, 170
Audio/video-in jack	92, 93
Auto flash	53
Auto mode	33, 34
Auto off	19, 109, 142
Autofocus	62, 126
Autofocus mode	106, 107, 119, 126
B	
Background music	85
Backlighting mode	33, 36, 38
Battery	11
Battery charger	170
Battery level	17
Battery type	109, 147
Battery-chamber/memory card slot cover	3
Beach	36
Bird-watching	42
Blink proof	106, 121
Bluetooth	108, 135
Brightness	138
Button sound	141
C	
Calendar display	70
Capturing still images while recording movies	84
Close-up	36, 40
Compression ratio	110
Computer	92, 99
Conformity marking	109, 147
Connect to smart device	108, 134



Connector cover	3, 92	Flash	2, 19, 52
Continuous shooting	106, 113	Flash lamp	3, 52
Copy	107, 132	Flash mode	51, 52
Copyright information	109, 145	F-number	60
Creative mode	33, 46	Focus	60
Creative slider	34	Focus area	18
Crop	69, 79	Focus indicator	5
Current settings	134	Focus lock	63
D		Food 	36, 40
Date and time	14, 136	Format internal memory	109, 143
Date format	15, 136	Format memory cards	11, 109, 143
Date stamp	109, 139	Formatting	11, 143
Daylight saving time	15, 137	Foundation makeup	48
DC input connector	3	Frame rate	107, 128
Delete	21, 73	Full-frame playback	20
Digital zoom	58, 109, 141	Full-time AF	126
Direct print	92, 95	G	
D-Lighting	75, 107	Glamour retouch	48, 76, 107
Dusk/dawn 	36	H	
E		HDMI cable	92, 93
Easy panorama playback	45	HDMI micro connector	3, 92
Easy panorama 	36, 43	HDR	38
Editing images	74	Help display	138
Editing movies	89, 90	High-speed continuous	113
End recording	86	Histogram	8, 57
EN-MH2	155, 170	HS movie	123, 125
Exposure compensation		Hue	34
	34, 48, 51, 57	I	
Extracting still images	88, 90	Image comment	109, 144
Eyelet for camera strap	2	Image mode	106, 110
E		Image review	138
Face detection	61	Internal memory	12
Face priority	116	Interval	120
File names	169	ISO sensitivity	106, 115
Fill flash	53	L	
Fireworks show 	36, 40	Landscape 	36
Firmware version	109, 147	Language	109, 143
Fixed range auto	115	Lens	2, 171



List by date mode	71	Playback mode.....	20																																																																																																		
Lithium batteries	11	Playback zoom	20, 69																																																																																																		
Location data	109, 146	Portrait 	36																																																																																																		
M																																																																																																					
Macro mode	51, 56	Power switch/power-on lamp.....	2, 14																																																																																																		
Mark for upload	107, 129	Preset manual	112																																																																																																		
Memory card.....	11, 156, 175	Pre-shooting cache	113, 114																																																																																																		
Memory card slot	11	Pressing halfway	60																																																																																																		
Microphone (stereo).....	2	Print.....	92, 96, 97																																																																																																		
Mode dial	2, 17, 33	Printer	92, 95																																																																																																		
Monitor.....	3, 4, 13, 157	Protect.....	107, 131																																																																																																		
Monitor settings.....	109, 138	Q																																																																																																			
Moon 	42	Quick effects	74	Movie menu	103, 122	Quick retouch	75, 107	Movie options	107, 122	R		Movie recording.....	19, 81	Rechargeable battery.....	170	Movie VR.....	107, 127	Rechargeable nickel-metal hydride batteries.....	11	Multi selector	3, 103	Recording movies	19, 81	Multiple exp. Lighten 	36, 39	Recording slow motion movies	123, 125	N				Network menu.....	103, 134	Red-eye correction	76, 107	Night landscape mode.....	33, 36, 37	Red-eye reduction	53	Night portrait mode	33, 36, 38	Remaining movie recording time	81, 82	Number of exposures remaining	17, 110	Reset all.....	109, 146	Number of shots.....	85, 120	Restore default settings.....	108, 135	O				Optical zoom	58	Rotate image	107, 131	Optional accessories	170	S				Scene auto selector mode... 33, 36, 37				Paper size	96, 97	Scene mode	33, 36	Party/indoor 	36, 40	SD memory card	11, 156, 175	Pet portrait auto release	41	Self-Collage	50, 106, 120	Pet portrait 	36, 41	Self-portrait timer	54	Photo VR	109, 140	Self-timer	51, 54	PictBridge.....	92, 95	Self-timer lamp	2, 55	Playback	20, 72, 88	Send while shooting	108, 134	Playback menu	103, 129	Sequence display options	72, 107, 133
Quick effects	74																																																																																																				
Movie menu	103, 122	Quick retouch	75, 107	Movie options	107, 122	R		Movie recording.....	19, 81	Rechargeable battery.....	170	Movie VR.....	107, 127	Rechargeable nickel-metal hydride batteries.....	11	Multi selector	3, 103	Recording movies	19, 81	Multiple exp. Lighten 	36, 39	Recording slow motion movies	123, 125	N				Network menu.....	103, 134	Red-eye correction	76, 107	Night landscape mode.....	33, 36, 37	Red-eye reduction	53	Night portrait mode	33, 36, 38	Remaining movie recording time	81, 82	Number of exposures remaining	17, 110	Reset all.....	109, 146	Number of shots.....	85, 120	Restore default settings.....	108, 135	O				Optical zoom	58	Rotate image	107, 131	Optional accessories	170	S				Scene auto selector mode... 33, 36, 37				Paper size	96, 97	Scene mode	33, 36	Party/indoor 	36, 40	SD memory card	11, 156, 175	Pet portrait auto release	41	Self-Collage	50, 106, 120	Pet portrait 	36, 41	Self-portrait timer	54	Photo VR	109, 140	Self-timer	51, 54	PictBridge.....	92, 95	Self-timer lamp	2, 55	Playback	20, 72, 88	Send while shooting	108, 134	Playback menu	103, 129	Sequence display options	72, 107, 133				
Quick retouch	75, 107																																																																																																				
Movie options	107, 122	R																																																																																																			
Movie recording.....	19, 81	Rechargeable battery.....	170	Movie VR.....	107, 127	Rechargeable nickel-metal hydride batteries.....	11	Multi selector	3, 103	Recording movies	19, 81	Multiple exp. Lighten 	36, 39	Recording slow motion movies	123, 125	N				Network menu.....	103, 134	Red-eye correction	76, 107	Night landscape mode.....	33, 36, 37	Red-eye reduction	53	Night portrait mode	33, 36, 38	Remaining movie recording time	81, 82	Number of exposures remaining	17, 110	Reset all.....	109, 146	Number of shots.....	85, 120	Restore default settings.....	108, 135	O				Optical zoom	58	Rotate image	107, 131	Optional accessories	170	S				Scene auto selector mode... 33, 36, 37				Paper size	96, 97	Scene mode	33, 36	Party/indoor 	36, 40	SD memory card	11, 156, 175	Pet portrait auto release	41	Self-Collage	50, 106, 120	Pet portrait 	36, 41	Self-portrait timer	54	Photo VR	109, 140	Self-timer	51, 54	PictBridge.....	92, 95	Self-timer lamp	2, 55	Playback	20, 72, 88	Send while shooting	108, 134	Playback menu	103, 129	Sequence display options	72, 107, 133												
Rechargeable battery.....	170																																																																																																				
Movie VR.....	107, 127	Rechargeable nickel-metal hydride batteries.....	11	Multi selector	3, 103	Recording movies	19, 81	Multiple exp. Lighten 	36, 39	Recording slow motion movies	123, 125	N				Network menu.....	103, 134	Red-eye correction	76, 107	Night landscape mode.....	33, 36, 37	Red-eye reduction	53	Night portrait mode	33, 36, 38	Remaining movie recording time	81, 82	Number of exposures remaining	17, 110	Reset all.....	109, 146	Number of shots.....	85, 120	Restore default settings.....	108, 135	O				Optical zoom	58	Rotate image	107, 131	Optional accessories	170	S				Scene auto selector mode... 33, 36, 37				Paper size	96, 97	Scene mode	33, 36	Party/indoor 	36, 40	SD memory card	11, 156, 175	Pet portrait auto release	41	Self-Collage	50, 106, 120	Pet portrait 	36, 41	Self-portrait timer	54	Photo VR	109, 140	Self-timer	51, 54	PictBridge.....	92, 95	Self-timer lamp	2, 55	Playback	20, 72, 88	Send while shooting	108, 134	Playback menu	103, 129	Sequence display options	72, 107, 133																
Rechargeable nickel-metal hydride batteries.....	11																																																																																																				
Multi selector	3, 103	Recording movies	19, 81	Multiple exp. Lighten 	36, 39	Recording slow motion movies	123, 125	N				Network menu.....	103, 134	Red-eye correction	76, 107	Night landscape mode.....	33, 36, 37	Red-eye reduction	53	Night portrait mode	33, 36, 38	Remaining movie recording time	81, 82	Number of exposures remaining	17, 110	Reset all.....	109, 146	Number of shots.....	85, 120	Restore default settings.....	108, 135	O				Optical zoom	58	Rotate image	107, 131	Optional accessories	170	S				Scene auto selector mode... 33, 36, 37				Paper size	96, 97	Scene mode	33, 36	Party/indoor 	36, 40	SD memory card	11, 156, 175	Pet portrait auto release	41	Self-Collage	50, 106, 120	Pet portrait 	36, 41	Self-portrait timer	54	Photo VR	109, 140	Self-timer	51, 54	PictBridge.....	92, 95	Self-timer lamp	2, 55	Playback	20, 72, 88	Send while shooting	108, 134	Playback menu	103, 129	Sequence display options	72, 107, 133																				
Recording movies	19, 81																																																																																																				
Multiple exp. Lighten 	36, 39	Recording slow motion movies	123, 125	N				Network menu.....	103, 134	Red-eye correction	76, 107	Night landscape mode.....	33, 36, 37	Red-eye reduction	53	Night portrait mode	33, 36, 38	Remaining movie recording time	81, 82	Number of exposures remaining	17, 110	Reset all.....	109, 146	Number of shots.....	85, 120	Restore default settings.....	108, 135	O				Optical zoom	58	Rotate image	107, 131	Optional accessories	170	S				Scene auto selector mode... 33, 36, 37				Paper size	96, 97	Scene mode	33, 36	Party/indoor 	36, 40	SD memory card	11, 156, 175	Pet portrait auto release	41	Self-Collage	50, 106, 120	Pet portrait 	36, 41	Self-portrait timer	54	Photo VR	109, 140	Self-timer	51, 54	PictBridge.....	92, 95	Self-timer lamp	2, 55	Playback	20, 72, 88	Send while shooting	108, 134	Playback menu	103, 129	Sequence display options	72, 107, 133																								
Recording slow motion movies	123, 125																																																																																																				
N																																																																																																					
Network menu.....	103, 134	Red-eye correction	76, 107	Night landscape mode.....	33, 36, 37	Red-eye reduction	53	Night portrait mode	33, 36, 38	Remaining movie recording time	81, 82	Number of exposures remaining	17, 110	Reset all.....	109, 146	Number of shots.....	85, 120	Restore default settings.....	108, 135	O				Optical zoom	58	Rotate image	107, 131	Optional accessories	170	S				Scene auto selector mode... 33, 36, 37				Paper size	96, 97	Scene mode	33, 36	Party/indoor 	36, 40	SD memory card	11, 156, 175	Pet portrait auto release	41	Self-Collage	50, 106, 120	Pet portrait 	36, 41	Self-portrait timer	54	Photo VR	109, 140	Self-timer	51, 54	PictBridge.....	92, 95	Self-timer lamp	2, 55	Playback	20, 72, 88	Send while shooting	108, 134	Playback menu	103, 129	Sequence display options	72, 107, 133																																
Red-eye correction	76, 107																																																																																																				
Night landscape mode.....	33, 36, 37	Red-eye reduction	53	Night portrait mode	33, 36, 38	Remaining movie recording time	81, 82	Number of exposures remaining	17, 110	Reset all.....	109, 146	Number of shots.....	85, 120	Restore default settings.....	108, 135	O				Optical zoom	58	Rotate image	107, 131	Optional accessories	170	S				Scene auto selector mode... 33, 36, 37				Paper size	96, 97	Scene mode	33, 36	Party/indoor 	36, 40	SD memory card	11, 156, 175	Pet portrait auto release	41	Self-Collage	50, 106, 120	Pet portrait 	36, 41	Self-portrait timer	54	Photo VR	109, 140	Self-timer	51, 54	PictBridge.....	92, 95	Self-timer lamp	2, 55	Playback	20, 72, 88	Send while shooting	108, 134	Playback menu	103, 129	Sequence display options	72, 107, 133																																				
Red-eye reduction	53																																																																																																				
Night portrait mode	33, 36, 38	Remaining movie recording time	81, 82	Number of exposures remaining	17, 110	Reset all.....	109, 146	Number of shots.....	85, 120	Restore default settings.....	108, 135	O				Optical zoom	58	Rotate image	107, 131	Optional accessories	170	S				Scene auto selector mode... 33, 36, 37				Paper size	96, 97	Scene mode	33, 36	Party/indoor 	36, 40	SD memory card	11, 156, 175	Pet portrait auto release	41	Self-Collage	50, 106, 120	Pet portrait 	36, 41	Self-portrait timer	54	Photo VR	109, 140	Self-timer	51, 54	PictBridge.....	92, 95	Self-timer lamp	2, 55	Playback	20, 72, 88	Send while shooting	108, 134	Playback menu	103, 129	Sequence display options	72, 107, 133																																								
Remaining movie recording time	81, 82																																																																																																				
Number of exposures remaining	17, 110	Reset all.....	109, 146	Number of shots.....	85, 120	Restore default settings.....	108, 135	O				Optical zoom	58	Rotate image	107, 131	Optional accessories	170	S				Scene auto selector mode... 33, 36, 37				Paper size	96, 97	Scene mode	33, 36	Party/indoor 	36, 40	SD memory card	11, 156, 175	Pet portrait auto release	41	Self-Collage	50, 106, 120	Pet portrait 	36, 41	Self-portrait timer	54	Photo VR	109, 140	Self-timer	51, 54	PictBridge.....	92, 95	Self-timer lamp	2, 55	Playback	20, 72, 88	Send while shooting	108, 134	Playback menu	103, 129	Sequence display options	72, 107, 133																																												
Reset all.....	109, 146																																																																																																				
Number of shots.....	85, 120	Restore default settings.....	108, 135	O				Optical zoom	58	Rotate image	107, 131	Optional accessories	170	S				Scene auto selector mode... 33, 36, 37				Paper size	96, 97	Scene mode	33, 36	Party/indoor 	36, 40	SD memory card	11, 156, 175	Pet portrait auto release	41	Self-Collage	50, 106, 120	Pet portrait 	36, 41	Self-portrait timer	54	Photo VR	109, 140	Self-timer	51, 54	PictBridge.....	92, 95	Self-timer lamp	2, 55	Playback	20, 72, 88	Send while shooting	108, 134	Playback menu	103, 129	Sequence display options	72, 107, 133																																																
Restore default settings.....	108, 135																																																																																																				
O																																																																																																					
Optical zoom	58	Rotate image	107, 131	Optional accessories	170	S				Scene auto selector mode... 33, 36, 37				Paper size	96, 97	Scene mode	33, 36	Party/indoor 	36, 40	SD memory card	11, 156, 175	Pet portrait auto release	41	Self-Collage	50, 106, 120	Pet portrait 	36, 41	Self-portrait timer	54	Photo VR	109, 140	Self-timer	51, 54	PictBridge.....	92, 95	Self-timer lamp	2, 55	Playback	20, 72, 88	Send while shooting	108, 134	Playback menu	103, 129	Sequence display options	72, 107, 133																																																								
Rotate image	107, 131																																																																																																				
Optional accessories	170	S				Scene auto selector mode... 33, 36, 37				Paper size	96, 97	Scene mode	33, 36	Party/indoor 	36, 40	SD memory card	11, 156, 175	Pet portrait auto release	41	Self-Collage	50, 106, 120	Pet portrait 	36, 41	Self-portrait timer	54	Photo VR	109, 140	Self-timer	51, 54	PictBridge.....	92, 95	Self-timer lamp	2, 55	Playback	20, 72, 88	Send while shooting	108, 134	Playback menu	103, 129	Sequence display options	72, 107, 133																																																												
S																																																																																																					
Scene auto selector mode... 33, 36, 37																																																																																																					
Paper size	96, 97	Scene mode	33, 36	Party/indoor 	36, 40	SD memory card	11, 156, 175	Pet portrait auto release	41	Self-Collage	50, 106, 120	Pet portrait 	36, 41	Self-portrait timer	54	Photo VR	109, 140	Self-timer	51, 54	PictBridge.....	92, 95	Self-timer lamp	2, 55	Playback	20, 72, 88	Send while shooting	108, 134	Playback menu	103, 129	Sequence display options	72, 107, 133																																																																						
Scene mode	33, 36																																																																																																				
Party/indoor 	36, 40	SD memory card	11, 156, 175	Pet portrait auto release	41	Self-Collage	50, 106, 120	Pet portrait 	36, 41	Self-portrait timer	54	Photo VR	109, 140	Self-timer	51, 54	PictBridge.....	92, 95	Self-timer lamp	2, 55	Playback	20, 72, 88	Send while shooting	108, 134	Playback menu	103, 129	Sequence display options	72, 107, 133																																																																										
SD memory card	11, 156, 175																																																																																																				
Pet portrait auto release	41	Self-Collage	50, 106, 120	Pet portrait 	36, 41	Self-portrait timer	54	Photo VR	109, 140	Self-timer	51, 54	PictBridge.....	92, 95	Self-timer lamp	2, 55	Playback	20, 72, 88	Send while shooting	108, 134	Playback menu	103, 129	Sequence display options	72, 107, 133																																																																														
Self-Collage	50, 106, 120																																																																																																				
Pet portrait 	36, 41	Self-portrait timer	54	Photo VR	109, 140	Self-timer	51, 54	PictBridge.....	92, 95	Self-timer lamp	2, 55	Playback	20, 72, 88	Send while shooting	108, 134	Playback menu	103, 129	Sequence display options	72, 107, 133																																																																																		
Self-portrait timer	54																																																																																																				
Photo VR	109, 140	Self-timer	51, 54	PictBridge.....	92, 95	Self-timer lamp	2, 55	Playback	20, 72, 88	Send while shooting	108, 134	Playback menu	103, 129	Sequence display options	72, 107, 133																																																																																						
Self-timer	51, 54																																																																																																				
PictBridge.....	92, 95	Self-timer lamp	2, 55	Playback	20, 72, 88	Send while shooting	108, 134	Playback menu	103, 129	Sequence display options	72, 107, 133																																																																																										
Self-timer lamp	2, 55																																																																																																				
Playback	20, 72, 88	Send while shooting	108, 134	Playback menu	103, 129	Sequence display options	72, 107, 133																																																																																														
Send while shooting	108, 134																																																																																																				
Playback menu	103, 129	Sequence display options	72, 107, 133																																																																																																		
Sequence display options	72, 107, 133																																																																																																				



Setup menu	103, 136	Tone level information	4, 8
Shooting	17, 33	Tripod socket	3, 173
Shooting information	4	TV	92, 93
Shooting menu	103, 110, 111	U	
Shooting mode	33	USB cable	92, 95, 99
Short movie show menu	85	USB/audio/video output connector	3, 92, 93, 95, 99
Short movie show mode	33, 85		
Shutter sound	120, 141	V	
Shutter speed	60	View/hide framing grid	6, 138
Shutter-release button	2, 18	ViewNX-i	99
Side zoom control	2, 18, 58	Vividness	34, 48
Single AF	126	Volume	88
Single-frame shooting	113	W	
Skin softening	48	White balance	106, 111
Slide show	107, 130	Wide-angle	58
Slow sync	53	Wi-Fi	108, 134
Small picture	78, 107	Wind noise reduction	107, 127
Smart portrait menu	103, 120	Z	
Smart portrait mode	33, 48	Zoom	58
Smile timer	49	Zoom control	2, 18, 58
SnapBridge app	24	Zoom in	58
Snow	36	Zoom out	58
Soft	48		
Sound settings	109, 141		
Speaker	3		
Special effects	85, 87		
Sports mode	33, 36, 39		
Strap	10		
Subject tracking	117, 118		
Sunset	36		
Sync with smart device	136		

I

Target finding AF	60, 117
Telephoto	58
Thumbnail playback	20, 70
Time difference	137
Time zone	15, 136
Time zone and date	14, 109, 136
Tone level	8



No reproduction in any form of this manual, in whole or in part (except for brief quotation in critical articles or reviews), may be made without written authorization from NIKON CORPORATION.

NIKON CORPORATION

© 2016 Nikon Corporation



CT8K08(11)
6MN66411-08