


Redgear Pro Series 2.4G Wireless Gamepad User's Manual

1. Product information

Key Function

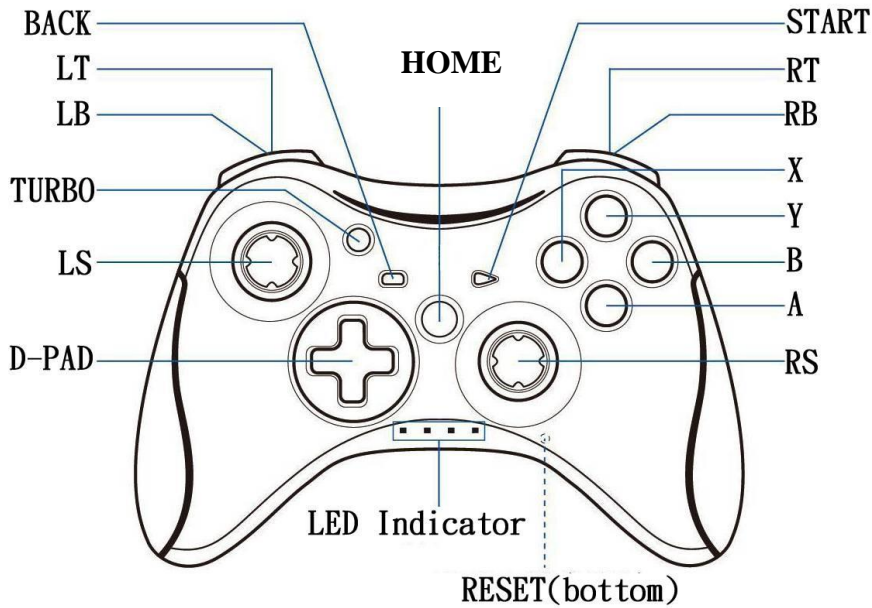

Mode and LED Indicator

Xinput : 

Directinput : 

2. Applicable Description

- (1) Application and Connection
PC Windows XP/7/8/8.1/10
- (2) Driver Description

PC : No need driver on Xinput mode except Windows XP , plug and play; If you need to open the vibration mode in DirectInput, need to install driver (Cd Provided)

3. Operating Instructions

Power ON/OFF/sleep mode


- (1) Power on : (Press HOME to start gamepad.)
- (2) Power off: (Press "BACK"+"B" 5 seconds, the LED Indicator and ABXY back light turn off , the gamepad shutdown)
- (3) Sleep mode:(Wait for more than 5 minutes for no activity , light OFF, The gamepad is turned off)

Mode switch

Hold the HOME key about 5 seconds, to switch the mode between Xinput, DirectInput

Charge Indicator

- (1) No battery : LED indicator and ABXY backlight are OFF
- (2) Low battery : the lights flashing
- (3) Charging : the LED indicator flashes slowly
- (4) Full : If the gamepad in sleep mode ,the indicator will be off, In operation, the indicator shows the current mode

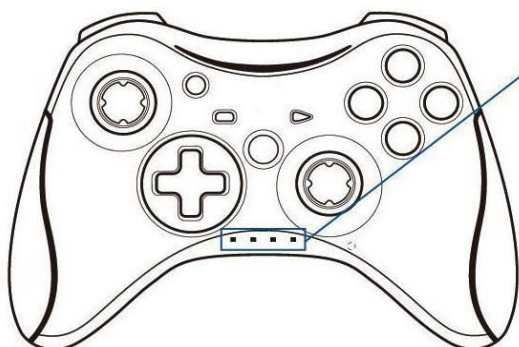

Operating menu

First connecting

- (1) Plug the receiver into the device, and open the device, the device will identify the receiver
- (2) Press HOME to start the gamepad
- (3) 4 LED Indicator flash , gamepad is pairing with the wireless receiver automatically
- (4) When the pairing is successful, Will be one of the three Xinput , Directinput mode
(Note : If the pairing is unsuccessful, unplug the wireless receiver , turn off the gamepad and Repeat the above steps)


Automatic reconnect

gamepad is turned off under normal connection, but the wireless receiver is still working properly , Press HOME key to start the gamepad to quick connect automatically



Bursts

Press and hold the "TURBO" while pressing the button you want to bursts, such as: "TURBO"+"A", then A key feature is enabled bursts. to repeat above steps to cancel the bursts.

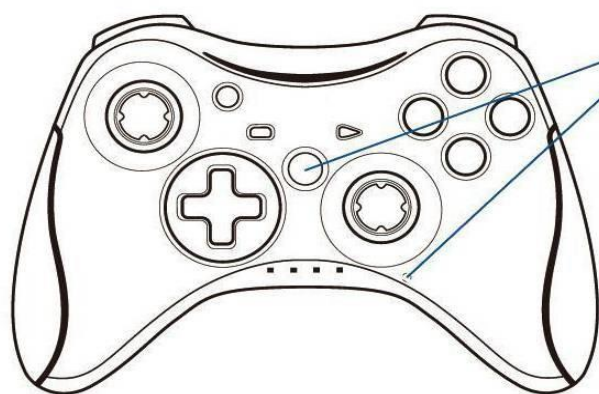

JD-Switch Function

(Press the BACK + LS(left stick), the function of D-pad and LS stick will be exchanged

Reset gamepad

When an exception occurs gamepad, such as Keys disorder, or crash, Unable to connect. Try to restart the device \ gamepad or select Reset gamepad

Reset mode : Insert into the hole on the back of gamepad with sharp article, Press the RESET button to reset the gamepad

Specification

Product Name	wireless 2.4G Gamepad	Product Type	Redgear Pro series
Application	PC(Windows XP/7/8/8.1/10)	Operating Temperature	-20 °C ~ + 65 °C

		Humidity	20 ~ 80%
		Operating Mode	Xinput/DirectInput
Charging voltage	3.7~5V	Charging current	1A~2A
Charging duration	3~6h	working Current	Last 150mA
Size	155x110x60mm	Product weight	205g

Suggestion: Based on the characters of Li-ion battery, please charge the battery at least once every 6 months to achieve the maximum battery life span.