


HUAWEI A1 WiFi/ROUTER QUICK INSTALLATION MANUAL_V1.02

(via HiLink Android & IOS App)


1. Plug the power adapter to the device and to the AC power source.
2. Connect the WAN port (blue port) of the device with a LAN cable to the LAN port of your ISP router/modem or to your existing router with internet.
3. Download the HiLink App from your Android phone and install.




4. Open the App and click start.

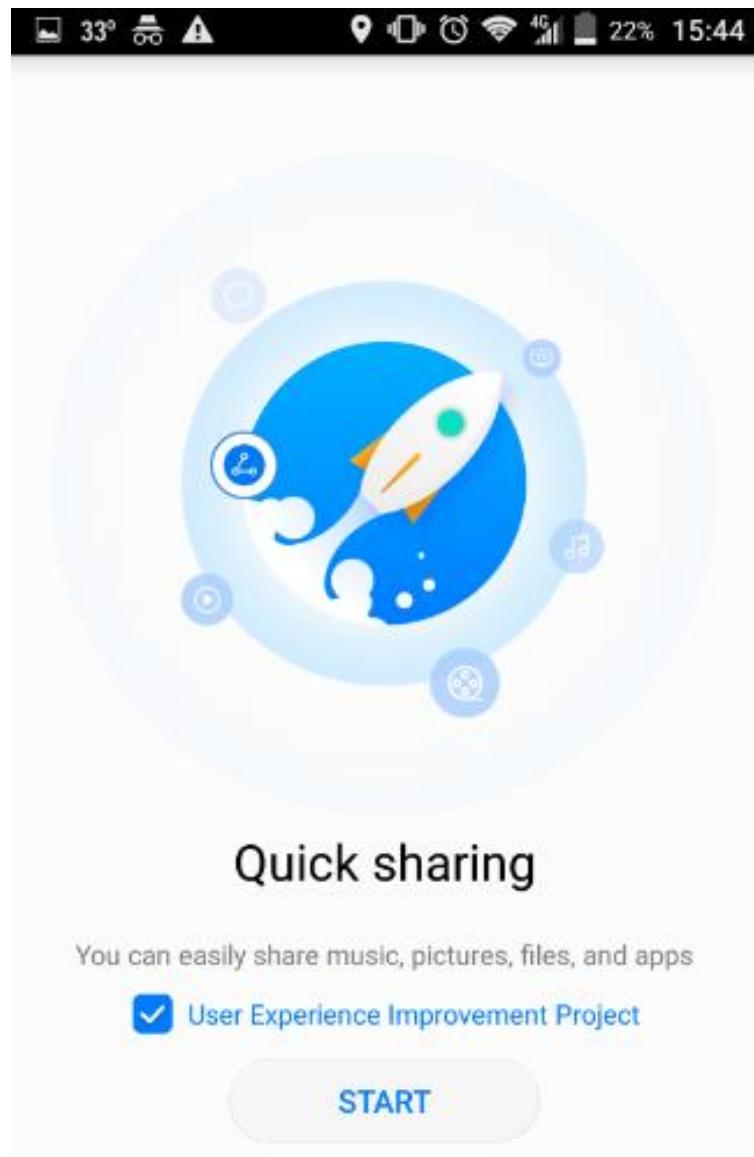


5. Select Home Routers

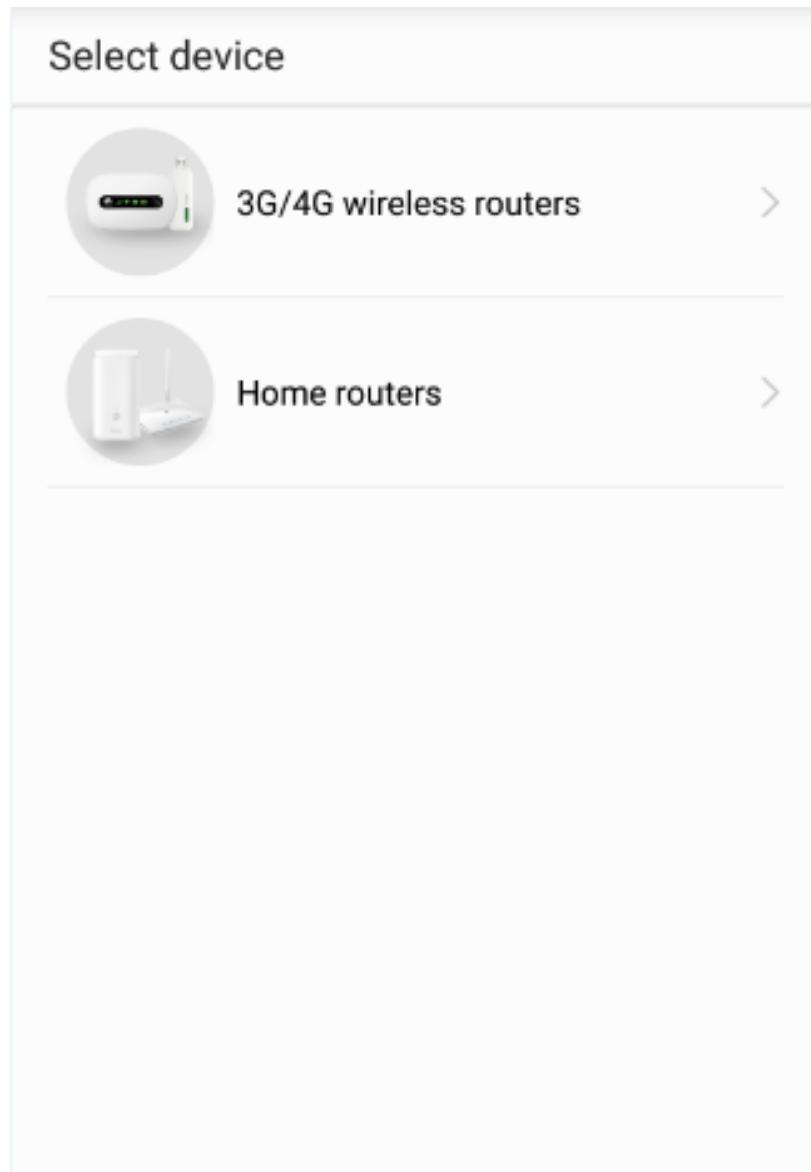

6. Click connect

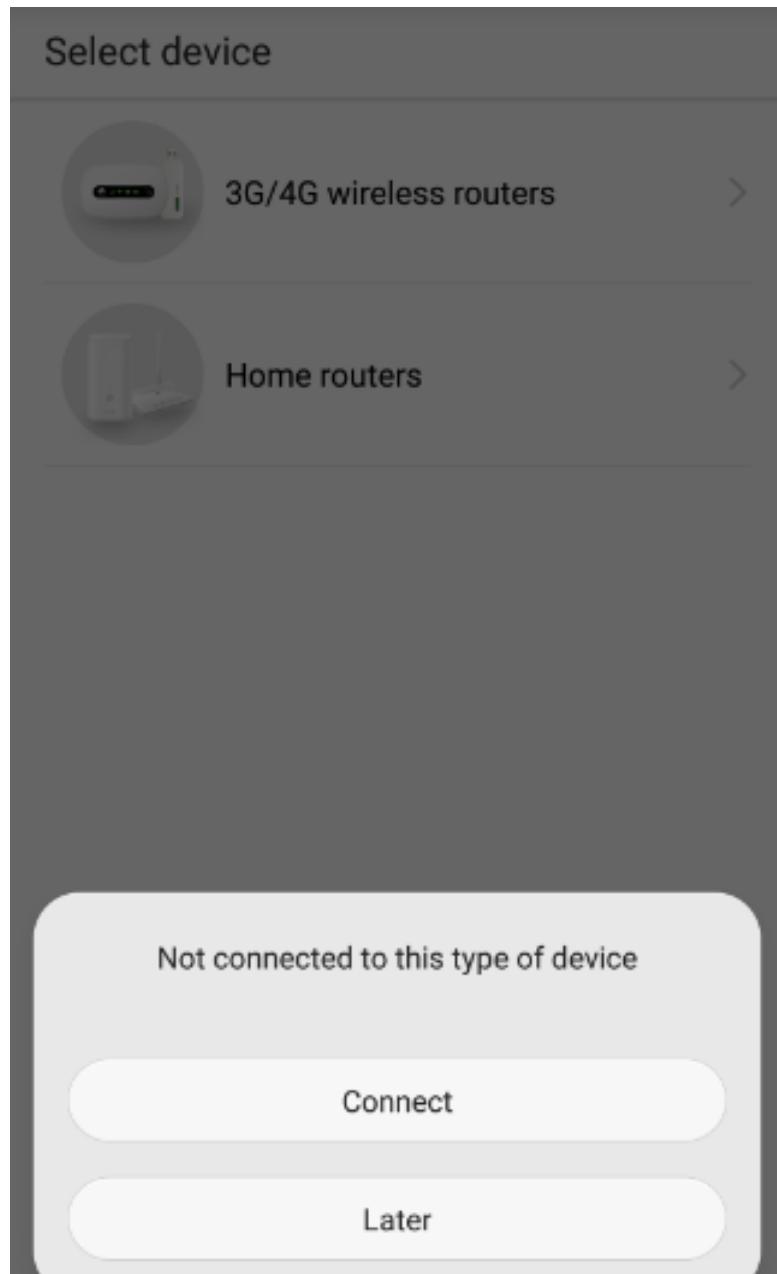

7. Click GO

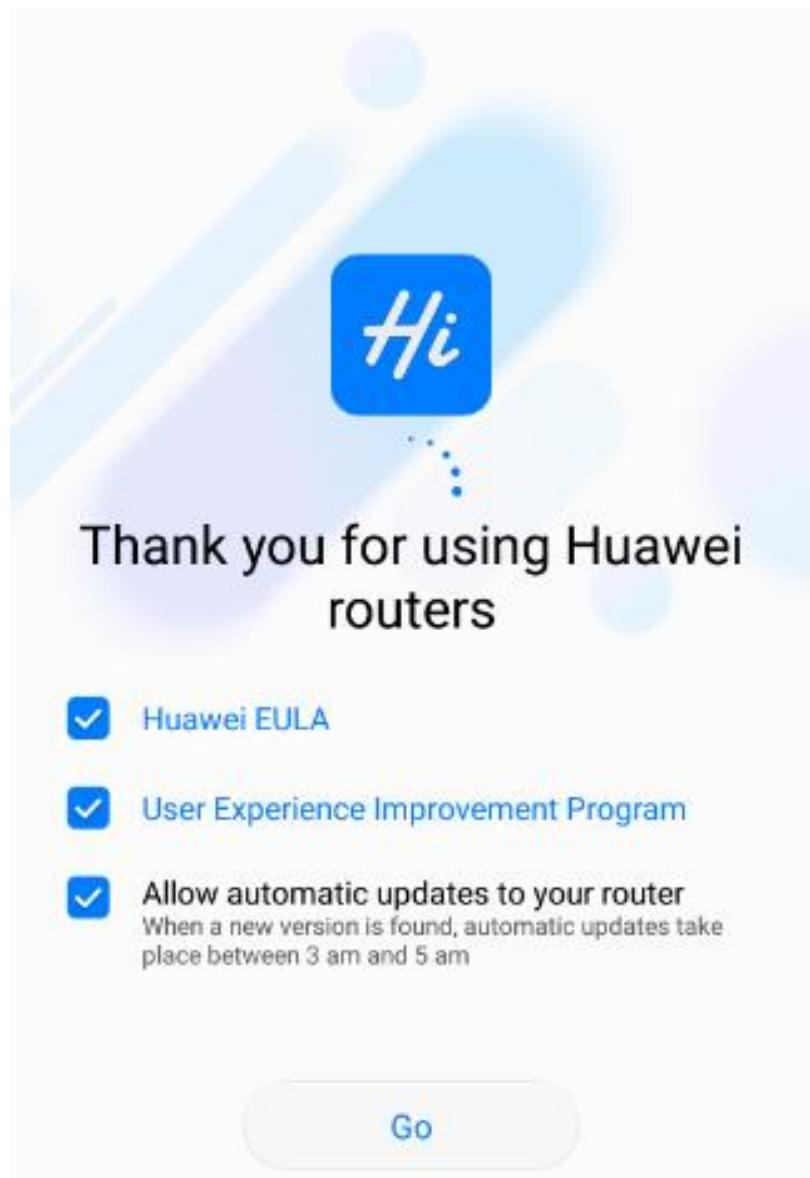

8. Rename the default WIFI name “HUAWEI-T5PGBN” to your preferred name and put in your password from 8-63 characters then click NEXT. Tick the box below if you want the administrator password to be the same as your WiFi password. Otherwise, put in a new password and click NEXT. (Note: Administrator password is needed when you access again your device if you make changes on the settings, a different password would be recommended)

Step 2: Wi-Fi settings

After the Wi-Fi name or password is changed, reconnect to the Wi-Fi network

Wi-Fi name

HUAWEI-T5PGBN

5 GHz Wi-Fi name: HUAWEI-T5PGBN_5G

Password

8-63 characters 

Login password

6-32 characters 

Use Wi-Fi password as router password

Next

9. Configuration complete. You may need to reconnect to your new WiFi and enter your logon details.

