

Gunson®

GASTESTER

Digital Exhaust CO Analyser with Pulse Pump

Part No. G4125

Handbook



Gastester is an exhaust gas analyser that works on the “hot wire” or “thermal conductivity” principle: the thermal conductivity of exhaust gas varies in proportion to the amount of carbon monoxide present. Exhaust gas is pumped through the Gastester by an externally mounted pulse pump.

The pulse pump uses the positive and negative pressure waves generated by the exhaust gas to force exhaust gas through the Gastester.

The pump consists of a diaphragm with one way valve and thus the pump will only be heard to click when connected to the exhaust.

CO Function Specification:

Calibrated range: 0-10% CO

(indicates un-calibrated to 20% C)

Accuracy: +/- 0.5% CO typical

(throughout the indicated range 0.5% CO to 6.5% CO)

Note: The Gastester measures the CO level only of the exhaust gas and is therefore not suitable for MOT or diagnostic checks where an accuracy greater than +/- 0.5% CO is required.



Index


1. Kit Contents	4
2. Assembly	4
3. Descriptions and controls	5
4. Preparations before use	6
5. Instructions for use	7
6. Further information	8
7. Common problems	9
8. Warranty	11

1. Kit Contents

2. Assembly


1. Kit Contents

1. Gastester instrument including collector box and pulse pump/water trap assembly
2. Metal exhaust probe with retaining springs
3. Flexible plastic pipes (3 lengths)
4. Instruction handbook

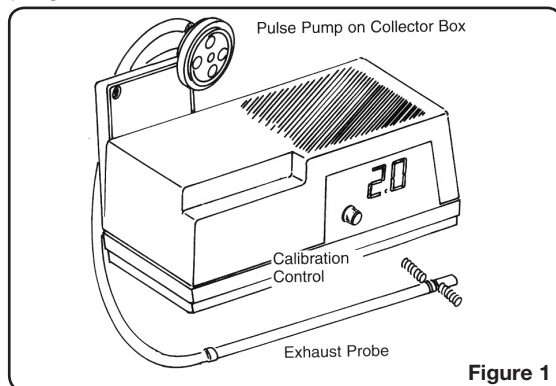

2. Assembly

- In cold conditions, warming the various plastic pipes will assist assembly.
- Press the shortest pipe onto the lower port of the pulse pump/water trap as shown in the diagrams Figures 1 and 2. This is the automatic water drain.
- The longest plastic pipe is connected to the pulse pump inlet (centre port) and the other end to the aluminium exhaust probe tube.
- Connect the remaining plastic pipe between the pulse pump (top) outlet and the collector box inlet. (This connection is intentionally vented at the inlet boss). The connection to the collector box inlet needs to be pressed fully home.

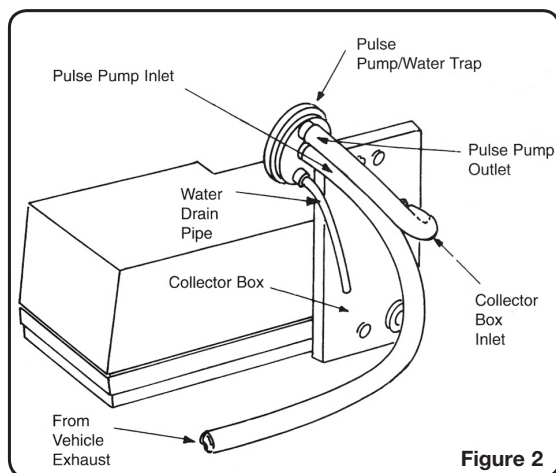

3. Descriptions and Controls

DISPLAY:

This is calibrated in volume percent carbon monoxide (CO%).

CALIBRATION CONTROL:

This is used to set the reading of the display to show 2.0% at the start of the tests, before the probe is inserted into the exhaust pipe.

Note: The calibrate position represents what the instrument should register when the probe is in fresh air. It is coincidental that air should measure the same as exhaust gas with 2% CO. When the probe is subsequently inserted into the exhaust pipe, the display of the instrument may increase or fall from the calibrate condition.

TWO CORE CABLE WITH CLIPS:

(for connecting to the car battery)

EXHAUST PROBE:

The aluminium pipe is for insertion into the exhaust pipe and is held in position by the metal springs which press against the inside of the exhaust pipe.

NB: In use the pipe from the exhaust probe should slope down continuously to the pulse pump/water trap so that water runs down and may be automatically expelled from the drain pipe.

4. Preparations before use

- Any service and maintenance such as air filter renewal, tappet adjustment, carburettor maintenance, ignition maintenance including ignition timing, should be carried out before setting the carburettor or fuel injection mixture adjustment. Petrol mixture setting should be the final adjustment in any engine tuning work.
- Carbon monoxide is an extremely poisonous gas and any work on the car with the engine running should therefore be carried out in the open air. Take care not to breathe in gases when using the gas tester.
- Study the workshop manual for the particular vehicle or engine to identify the correct adjustment screws that control the mixture strength and the idle speed. Make a note of the initial position of the adjustments before commencing work.
- The car should be fully up to running temperature before connecting the Gastester. In order to achieve full temperature the vehicle should be driven till oil, water and the exhaust system are all fully up to temperature.
- Have to hand the correct tools for making the necessary adjustments. If the manual recommends a CO level at a particular engine speed, then a tachometer should be used.

5. Instructions for use

Note: Place the main body of the instrument away from the exhaust gas stream. Clean air is required in the internal reference cell for accurate readings.

1. Place the Gastester on a convenient flat stationary surface close to the vehicle's exhaust pipe outlet. Switch off the engine temporarily while making connections. Connect the red (+) and black (-) clips to the vehicle's 12 V battery or convenient positive and earth (ground) points. (Do not use this Gastester with 6v or 24v batteries.)
2. Fit the probe to the Gastester but do not fit to the exhaust at this stage.
3. Allow a minimum period of eight minutes with the instrument probe in fresh air. Set the calibration control to achieve 2.0% on the CO range and observe the display for a further two minutes minimum to ensure that the reading has stabilized.

Note: if it has not stabilised allow a further two minutes before attempting to measure exhaust CO level.

4. During the warm up period check and adjust the engine idle RPM if required.
5. Check the calibrated reading is still set at 2.0% in fresh air, once set and stable do not move the Gastester.
6. Insert the probe into the exhaust pipe a minimum 8" (20cm), the display will now show the percentage level of CO in the exhaust. If the display remains at 2.0% then the percentage level is 2% and happens to match the percentage level found in fresh air

Note: In order for the automatic water drain to function, the probe pipe should fall continuously from the exhaust end to the inlet end to allow water droplets to run down. Otherwise the water will collect at the lowest point and will have to be drained manually.

7. After insertion of the pipe wait for a period of 15 seconds for the meter to respond and a further 1 minute to stabilise (the reading may overshoot before returning to a steady value, particularly during the initial measurement).
8. Make a note of the reading and observe the display for a further one or two minute to confirm that the reading is steady and within tolerance for the vehicle concerned. If the reading is outside the manufacturer's recommended limits, or is not below that specified as a legal requirement, then adjustment of the carburettor or fuel injection system will be required.
9. If adjustment is required, make a small alteration to the mixture screw, and correct the idle speed after each adjustment. After each adjustment wait for at least one minute for the reading to stabilise.
10. When the test is complete remove the exhaust probe and switch off the engine. Leave the Gastester connected to the vehicle's battery and allow a period of at least 10 minutes for fresh air to purge the exhaust from the instrument. This period in fresh air with the power on cleans the sensor before storage and also allows a check to ensure the display returns close to the 2% setting indicating that there has been little drift in calibration.

Note: A final reading of 1.8% in air for example would suggest that the last exhaust measurement was approx 0.2% lower than the displayed level. While this is perfectly acceptable when setting to approx 3% it does represent a more significant error if setting to a manufacturer's recommended 0.5% CO. On occasions it may be necessary to repeat a test if calibration drift is excessive (drift is reduced by keeping test duration short and allowing a longer warm up).

6. Further Information

General Notes

- During testing, check the exhaust sample pipe (from the probe) for any signs of water build up that will reduce the flow of exhaust gas. Remove any build up of water as soon as it is seen. If the transparent pipe falls continuously from the exhaust to the pump the automatic drain should operate and keep the pipe clear of water. Operation of the pulse pump will usually be audible as the pulsations in the exhaust cause the internal diaphragm to vibrate. If the instrument ceases to respond to changes in mixture setting or the sound from the pulse pump becomes irregular, check the sample pipe for collected water.
- It should be noted that engines not fitted with catalytic convertors, even in good overall condition, will show a fluctuation in idle CO over a period of time, of typically 0.5%. Bearing in mind this fluctuation, and also errors and drift in the instrument, the user should aim to set the average CO reading to be midway between the limits set by the manufacturer, or at a reasonable margin below the prescribed legal limit.
- Calibration of the instrument may be checked at any time. Simply remove the exhaust probe and wait at least ten minutes in fresh air, for the exhaust gas to disperse from the collector box. If necessary, the calibration may then be adjusted using the calibration control knob.
- It is advised to periodically check the calibration of the instrument during particularly extended tests.
- Some older engines will not readily tick over at idle speeds for long periods. The speed may become erratic, and engine misfiring may occur. With the prolonged testing of such engines, it may be necessary to occasionally purge the engine by, for instance, increasing the speed to 2000 rpm - 3000 rpm for 15 seconds. This may be done at any time during the tests but the exhaust probe should be removed beforehand.
- For engines fitted with a catalytic convertor if the catalyst is in good working order and fully up to temperature the reading should be less than 0.5% if it is higher than this then either the catalyst is not up to temperature, internally fouled, has failed or the engine is running excessively rich.
- If the exhaust pipe has a curved inlet it may be necessary to slightly bend the metal exhaust probe to give better fit. Avoid kinking the pipe and restricting the flow. Full insertion of the exhaust probe is essential for accurate readings.
- Use only a 12 volt car battery in good condition as power supply. A faulty or flat car battery may not be able to supply adequate current to the instrument (Gastester draws about 0.8 amps), resulting in errors in use and difficulty in calibration.

7. Common Problems

- Q. The car does not drive well with the correct idle mixture setting.
 - A. This is a common complaint. On older vehicles the cause is likely to be a fuel system fault which creates a weak mixture just above idle speed. Clean the idle jet and idle air bleed jet on fixed choke carburettors. Check for needle/jet wear on variable choke carburettors (above 40,000 miles). These are available as spare parts. Check acceleration enrichment device.
 - Q. The correct mixture setting cannot be achieved/setting is continually too rich.
 - A. Clean the idle air bleed jet and air passage on fixed choke carburettors. Check for severe needle jet wear on variable choke carburettors. Check for high fuel level in the float chamber. Check cold start device.
 - Q. Setting is continually too weak.
 - A. Clean the idle jet on fixed choke carburettors. Check needle and jet for disengagement from adjusting device or sticking on variable choke carburettors. Check for air leaks.
 - Q. The engine misfires or is unstable at idle with the correct mixture setting.
 - A. Misfire/engine instability causes increase in HC reading and potential emission test failure even with correct CO level. Check for general engine condition – compression pressures, sparking plugs etc. Check for air leaks, these may cause severe variation in mixture between cylinders. Investigate mixture quality i.e. fuel air mixture may not be finely atomized due to partially blocked air jets or prematurely feeding main jet system caused by high float chamber level etc. Check for advanced ignition timing, tight valve clearances, slow idle speed
 - Q. The mixture setting drifts
 - A. Check for leaking float chamber needle valve if CO level steadily increases with prolonged idle. Check for high float chamber level. Check Gastester CALIBRATION in air, slight drift will occur during extended operation. Good stability should be obtained over a period of five minutes or more. A variation of, for example 0.5% CO at $\sim$ CO is not uncommon on an engine which is in good working order.
 - Q. Gastester gives errors or slow/no response to mixture changes.
 - A. Check for water in the probe pipe and adequate probe insertion; minimum 8 inches/20 cm. If a baffled silencer with no tailpipe is fitted, as on some motorcycles, temporary restriction of the exhaust outlet or temporary fitting of a tailpipe extension may be the only way to achieve acceptable results.
- Note: In use the pipe from the exhaust probe should preferably slope down continuously to the Pulse Pump/Water Trap so that water runs down and may be automatically expelled from the drain pipe. Operation of the pulse pump is clearly audible as the internal diaphragm vibrates with pulsations from the exhaust, if response is obtained at higher than idle speeds only, Pulse Pump may need replacement. (Alternatively twist the pump cap on the body to re-seat the diaphragm). If the pump is working, the vehicle mixture adjustment may be ineffective.**
- Q. Gastester Professional cannot be set to the Calibration Condition in air after warm-up.
 - A. First check that the unit is switched correctly to CO range and is used in a horizontal position (the unit will not operate correctly if instrument is significantly inclined or if the instrument angle is changed after calibration). Ensure that the unit is connected to a car battery (NB: a 12v dry cell battery or a faulty car battery can not provide enough current and are unsatisfactory). Ensure that the unit is correctly warmed up (allow at least 10 minutes).

Ensure that the unit is being calibrated to the 2% CO condition, NOT at zero). Ensure that the probe is in air, not in the exhaust pipe. If these checks do not resolve the problem, it is possible that the instrument has “drifted” generally due to collector box contamination or damage due to impact (the instrument is more susceptible to damage when warm and in use); the unit should be returned to The Tool Connection for service.

Higher Engine Speeds:

- The Gastester is designed to work at engine tick-over speeds; however it will also give a reliable reading at higher engine speeds. Violent full throttle action to high engine speeds should be avoided while the probe is inserted in the exhaust pipe; the pulse pump diaphragm can be damaged in extreme circumstances.
- To test mixture weakening at higher RPM, increase the engine speed in increments of approximately 300 RPM to 400 RPM up to a maximum of 2500 RPM, observing the reading between each adjustment. (Remember that the instrument may take 15 seconds to respond to a particular adjustment.) The CO level should fall progressively and stay low during a gradual increase in speed.
- The mixture enrichment for acceleration can be tested by rapid opening and immediate release of the accelerator. Opening to half throttle should be sufficient. Within a few seconds of this operation the Gastester CO indication should increase before returning to its previous setting. The degree of increase will vary according to how this procedure is carried out and also with the type of fuel system. A fixed choke carburettor with accelerator pump will usually give a more pronounced increase than a variable choke carburettor or fuel injection system.

More information on Gunson web site:

Over the years hundreds of different types of carburettor have been designed and used and thus it is not possible to give a definitive guide to carburettor adjustment. For this reason Gunson strongly advise the use of vehicle manufacturer data and service instructions.

Gunson have put together general guidance notes on carburettor adjustments, including fixed and variable jet carburettors, multiple carburettors and fuel injection available only for download from: www.gunson.co.uk

This warranty is in addition to the statutory rights of the purchaser.

The Tool Connection has made every effort to ensure that this product is of the highest quality and value to the customer. However, The Tool Connection can accept no responsibility for consequential damage howsoever caused arising from the use of this product.

All technical enquiries regarding this product should be made to:

The Tool Connection Technical Service Department: +44 (0) 1926 818181

Please note that The Tool Connection cannot provide technical information or advice or service data on particular motor vehicles.

If this product should require service or repair, it should be returned to:

The Tool Connection
Kineton Road
Southam
Warwickshire
CV47 0DR
England

Please give full details of faults requiring attention when sending goods for service or repair.



www.gunson.co.uk

Distributed by The Tool Connection Ltd
Kineton Road, Southam, Warwickshire CV47 0DR
T +44 (0) 1926 815000 F +44 (0) 1926 815888
info@toolconnection.co.uk www.toolconnection.co.uk

Guarantee

If this product fails through faulty materials or workmanship, contact our service department direct on: **+44 (0) 1926 818186**. Normal wear & tear are excluded as are consumable items & abuse.